

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA FYRTUR Smart Wireless Blackout Roller Blind User Manual (80 x 195 cm, Grey)

IKEA IK.104.082.06

IKEA FYRTUR Smart Wireless Blackout Roller Blind User Manual

Model: IK.104.082.06 | Brand: IKEA

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your IKEA FYRTUR Smart Wireless Blackout Roller Blind. Please read this manual carefully before using the product and retain it for future reference.

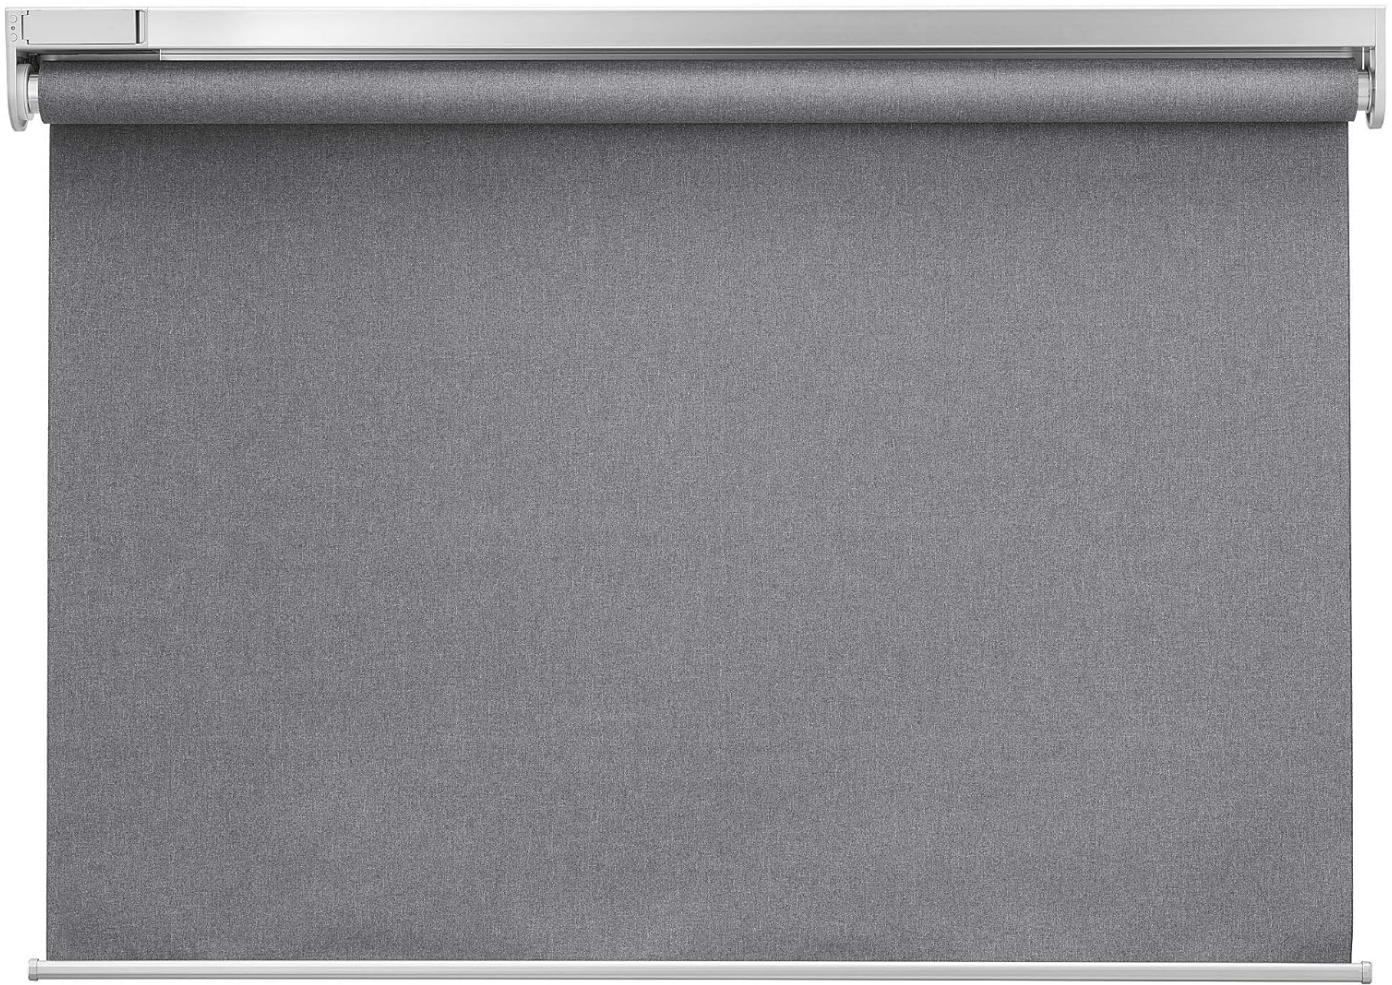


Image: The IKEA FYRTUR Smart Wireless Blackout Roller Blind in its fully extended position, showcasing its grey fabric and sleek design.

SAFETY INFORMATION

- Keep the remote control and batteries out of reach of children.
- Do not expose the product to extreme temperatures or humidity.
- Ensure proper installation to prevent the blind from falling.
- Only use recommended batteries for the remote control.
- This product is designed for indoor use only.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- IKEA FYRTUR Blackout Roller Blind (80 x 195 cm)
- Wireless Remote Control
- Battery Pack (pre-installed or separate)
- Mounting Brackets and Hardware
- Instruction Manual (this document)

SETUP AND INSTALLATION

1. Mounting the Blind

1. **Measure and Mark:** Determine the desired mounting location. Ensure the surface is suitable for drilling. Mark the positions for the mounting brackets.
2. **Install Brackets:** Secure the mounting brackets using the provided screws and anchors. Ensure they are level and spaced correctly for the blind's width.
3. **Attach Blind:** Carefully clip the roller blind into the installed mounting brackets. Ensure it is securely seated.



Image: Two IKEA FYRTUR blackout roller blinds installed in a bedroom, providing privacy and light control.

2. Battery Installation/Charging

- If the battery pack is not pre-installed, insert it into the designated compartment on the blind.
- For initial use, ensure the battery is fully charged. Connect the charging cable (sold separately or included) to the battery pack and a power source.

3. Pairing the Remote Control

1. **Activate Blind:** Ensure the blind's battery is charged and the blind is powered on.

2. **Press Pairing Button:** On the blind, locate and press the small pairing button (often near the battery compartment) for a few seconds until the blind reacts (e.g., moves slightly).
3. **Pair Remote:** Within 2 seconds, press and hold the pairing button on the remote control until the blind reacts again, confirming successful pairing.



Image: A hand holding the small, white wireless remote control used to operate the IKEA FYRTUR roller blind.

OPERATING INSTRUCTIONS

Using the Remote Control

- **Up Button:** Press to raise the blind.
- **Down Button:** Press to lower the blind.
- **Stop Button:** Press to stop the blind at any desired position.
- **Preset Position:** Some remotes allow setting a favorite position. Refer to the remote's specific instructions for this.

feature.



Image: A person comfortably operating the IKEA FYRTUR roller blind with a remote control while relaxing in bed.

Smart Home Integration (Optional)

The FYRTUR blind can be integrated with IKEA's smart home system (TRÅDFRI gateway) for app control, scheduling, and voice assistant compatibility. Refer to the TRÅDFRI gateway manual for detailed setup instructions.



Image: A hand holding a smartphone, demonstrating control of the IKEA FYRTUR roller blind via a smart home application.

MAINTENANCE

- **Cleaning:** Gently wipe the fabric with a damp cloth to remove dust or light stains. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Recharge the battery when the blind's operation becomes slow or unresponsive. Avoid fully depleting the battery frequently.
- **Mechanism Check:** Periodically inspect the mounting brackets and roller mechanism for any signs of wear or damage.



Image: A close-up view of the bottom bar of the IKEA FYRTUR roller blind, showing the fabric texture and clean finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blind does not respond to remote.	Low battery in blind or remote; remote not paired.	Charge blind battery; replace remote battery; re-pair remote.
Blind moves slowly or intermittently.	Low battery in blind.	Recharge the blind's battery pack.
Blind does not stop at desired position.	End limits need adjustment.	Refer to the full IKEA FYRTUR manual for end limit adjustment procedures.

Problem	Possible Cause	Solution
Blind makes unusual noises.	Obstruction or misalignment.	Check for any obstructions; ensure blind is properly seated in brackets.
Cannot connect to smart home system.	TRÅDFRI gateway not set up or blind not paired to gateway.	Ensure gateway is powered and connected; follow TRÅDFRI app instructions for adding devices.

SPECIFICATIONS

• Brand: IKEA • Model: IK.104.082.06 • Color: Grey • Material: Fabric • Dimensions (Fabric Width x Length): 80 cm x 195 cm • Roller Width: 84.3 cm • Area: 1.56 m² • Opacity: Blackout • Operation Mode: Automatic (Wireless/Battery-operated) • Special Features: Smart Wireless, Blackout Function • Recommended Use: Indoor, Window, Bedroom
--



Image: The IKEA FYRTUR blackout roller blind fully lowered in a room at night, effectively blocking out external light.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or visit the official IKEA website. For further assistance, contact IKEA customer support.

IKEA Official Website: www.ikea.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question