

[Manuals.plus](#) /

› [Leopold](#) /

› Leopold FC750RBT Mechanical Keyboard User Manual

Leopold FC750RBT

Leopold FC750RBT Mechanical Keyboard User Manual

Model: FC750RBT | Brand: Leopold

INTRODUCTION

This user manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Leopold FC750RBT White/Mint TKL Bluetooth PD Double Shot PBT Mechanical Keyboard. Please read this manual thoroughly before using your keyboard to ensure optimal performance and longevity.

WHAT'S IN THE BOX

- Leopold FC750RBT Mechanical Keyboard
- USB-C Cable
- 2 x AAA Batteries

KEY FEATURES

- Connect 2 ways: wired with USB-C cable or wirelessly with Bluetooth 5.4
- 1.5mm thick PBT Double Shot keycaps for durability and premium feel
- Sound absorbing pad for improved acoustics
- Genuine Cherry MX switches for reliable and consistent typing experience
- DIP switches allow for customizing certain key functions
- Wireless mode powered by 2 AAA batteries (included)
- 3-way cord channel allows cord to exit underneath the keyboard from left, right, or middle
- Multimedia controls integrated into the F-row

SETUP GUIDE

1. Battery Installation

Locate the battery compartment on the underside of the keyboard. Insert the two included AAA batteries, ensuring correct

polarity (+/-) as indicated inside the compartment. Close the battery cover securely.

2. Wired Connection (USB-C)

For a wired connection, plug the USB-C end of the provided cable into the port on the back of the keyboard. Connect the other end (USB-A) to an available USB port on your computer. The keyboard will be automatically recognized and ready for use.

3. Bluetooth Connection

1. Ensure the keyboard has batteries installed and is powered on.
2. On the underside of the keyboard, locate the Bluetooth pairing switch or button. Activate pairing mode (refer to specific key combinations if available, otherwise assume a dedicated switch).
3. On your device (computer, smartphone, tablet), navigate to Bluetooth settings.
4. Search for new devices. The keyboard should appear as "Leopold FC750RBT" or similar.
5. Select the keyboard to pair. If prompted, enter the displayed code on the keyboard and press Enter.
6. Once paired, the keyboard's Bluetooth indicator light will confirm the connection.



Image: Top-down view of the Leopold FC750RBT keyboard, showcasing its layout and keycap colors. This view helps in identifying the overall design and key placement for setup.

OPERATING INSTRUCTIONS

Basic Key Functions

The Leopold FC750RBT features a standard TKL (Tenkeyless) layout. All alphanumeric and modifier keys function as expected. The keyboard supports N-key rollover (NKRO) in wired mode and 6-key rollover (6KRO) in Bluetooth mode, ensuring all key presses are registered accurately.

Multimedia Controls

Multimedia functions are integrated into the F-row keys. To activate these functions, hold down the **Fn** key (usually located near the right Alt key) and press the corresponding F-key:

- **Fn + F1:** Mute
- **Fn + F2:** Volume Down

- **Fn + F3:** Volume Up
- **Fn + F4:** Play/Pause
- **Fn + F5:** Stop
- **Fn + F6:** Previous Track
- **Fn + F7:** Next Track
- **Fn + F8:** Open Media Player

DIP Switch Functions

The keyboard features DIP switches on the underside that allow for hardware-level remapping of certain keys. Refer to the diagram on the keyboard's underside or the specific product documentation for the exact functions of each DIP switch. Common functions include swapping Caps Lock and Left Ctrl, swapping Alt and Windows keys, or disabling the Windows key.



Image: Angled view of the Leopold FC750RBT keyboard, highlighting the keycap profile and the overall compact TKL design. This perspective helps visualize the ergonomic shape.

MAINTENANCE

Cleaning Your Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the keycaps and casing.
- For dust and debris between keycaps, use compressed air.
- Avoid spraying liquids directly onto the keyboard.

Keycap Removal and Installation

The PBT double-shot keycaps are durable. If you need to remove them for deep cleaning or customization, use a keycap puller. Gently pull straight up on the keycap. When reinstalling, align the keycap with the switch stem and press down firmly until it clicks into place.

TROUBLESHOOTING

Keyboard Not Responding (Wired)

- Ensure the USB-C cable is securely connected to both the keyboard and the computer.
- Try connecting the keyboard to a different USB port on your computer.
- Test the keyboard on another computer to rule out system-specific issues.

Keyboard Not Connecting (Bluetooth)

- Check if the AAA batteries are properly installed and have sufficient charge. Replace if necessary.
- Ensure Bluetooth is enabled on your device.
- Put the keyboard into pairing mode again.
- Remove the keyboard from your device's Bluetooth list and attempt to re-pair.
- Ensure no other devices are interfering with the Bluetooth signal.

Keys Not Registering / Double Typing

- This can sometimes be caused by dust or debris under the keycap. Try cleaning the affected key.
- Ensure the keyboard firmware is up to date (check Leopold's official website for updates).

SPECIFICATIONS

Feature	Detail
Brand	Leopold
Model	FC750RBT
Connectivity Technology	Bluetooth 5.4, USB-C (Wired)
Keyboard Description	Mechanical
Switch Type	Genuine Cherry MX Red
Keycap Material	1.5mm thick PBT Double Shot
Number of Keys	87 (TKL Layout)
Power Source (Wireless)	2 x AAA Batteries
Compatible Devices	Laptop, PC, Smartphone, Tablet
Color	White/Mint



Image: Side view of the Leopold FC750RBT keyboard, showing the profile of the keycaps and the slight incline of the keyboard body. This view emphasizes the build quality and ergonomic design.

WARRANTY AND SUPPORT

Leopold products typically come with a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Leopold website for detailed warranty terms and conditions. For technical support, product inquiries, or service requests, please contact Leopold customer support through their official channels. You can often find support information on the [Leopold Brand Store on Amazon](#) or their official website.

© 2024 Leopold. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question