

Leopold FC750RBT

Leopold FC750RBT White/Mint TKL Bluetooth PD Double Shot PBT Mechanical Keyboard User Manual

Model: FC750RBT

INTRODUCTION

Thank you for choosing the Leopold FC750RBT TKL Bluetooth Mechanical Keyboard. This manual provides detailed instructions on setting up, operating, and maintaining your new keyboard. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

The Leopold FC750RBT combines classic design with modern functionality, featuring durable PBT double shot keycaps, genuine Cherry MX switches, and versatile connectivity options including both wired USB-C and wireless Bluetooth 5.3.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Leopold FC750RBT Mechanical Keyboard
- USB-C to USB-A Cable
- 2 x AAA Batteries (included for wireless mode)
- Keycap Puller (may be included)
- User Manual (this document)

SETUP

1. Wired Connection

1. Locate the USB-C port on the back of the keyboard.
2. Connect the provided USB-C cable to the keyboard.
3. Connect the USB-A end of the cable to an available USB port on your computer.
4. The keyboard will be automatically recognized by your operating system.

2. Wireless Bluetooth Connection

The keyboard supports Bluetooth 5.3 for wireless connectivity.

1. Ensure the 2 AAA batteries are correctly inserted into the battery compartment on the underside of the keyboard.
2. Locate the DIP switches on the back of the keyboard. Ensure DIP switch 4 is set to ON for Bluetooth mode. (Refer to DIP switch settings section for details).
3. On your computer or device, enable Bluetooth and search for new devices.
4. Press and hold the Fn + F11 (or F12 depending on model) key combination on the keyboard to enter pairing mode. The LED indicator will blink.
5. Select "Leopold FC750RBT" from the list of available Bluetooth devices on your computer.
6. Follow any on-screen prompts to complete the pairing process.
7. Once paired, the LED indicator on the keyboard will stop blinking and remain solid.



Image: Top-down view of the Leopold FC750RBT keyboard, highlighting the white and mint keycap color scheme and TKL layout.

OPERATING INSTRUCTIONS

Basic Usage

The Leopold FC750RBT functions as a standard TKL (Tenkeyless) keyboard. Simply type as you would on any other keyboard.

Multimedia Controls

The keyboard features multimedia controls integrated into the F-row keys. These functions are typically accessed by holding the **Fn** key and pressing the corresponding F-key.

Key Combination	Function
Fn + F1	Mute
Fn + F2	Volume Down
Fn + F3	Volume Up
Fn + F4	Play/Pause

Key Combination	Function
Fn + F5	Previous Track
Fn + F6	Next Track

DIP Switch Settings

The DIP switches on the underside of the keyboard allow for customizing certain key functions. Refer to the diagram on the keyboard's underside for specific switch positions.

- **DIP Switch 1:** Toggles Caps Lock and Left Ctrl key functions.
- **DIP Switch 2:** Toggles Left Alt and Left Windows key functions.
- **DIP Switch 3:** Toggles Fn and Right Ctrl key functions.
- **DIP Switch 4:** Enables/Disables Bluetooth mode. (ON for Bluetooth, OFF for Wired)



Image: Angled view of the Leopold FC750RBT keyboard, providing a perspective on the keycap profile and overall build.

FEATURES

- **Dual Connectivity:** Connects via wired USB-C or wireless Bluetooth 5.3.
- **Premium Keycaps:** Equipped with 1.5mm thick PBT Double Shot keycaps for superior durability and legend longevity.

- **Cherry MX Switches:** Features genuine Cherry MX Blue mechanical switches for a tactile and clicky typing experience.
- **Sound Absorbing Pad:** Integrated sound absorbing pad to reduce typing noise and improve acoustics.
- **Customizable Functions:** DIP switches allow for remapping of certain key functions.
- **Cable Management:** 3-way cord channel allows the USB-C cable to exit from the left, right, or middle underneath the keyboard.
- **Multimedia Controls:** Convenient F-row multimedia keys for quick access to audio and media playback.

MAINTENANCE

Cleaning Your Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the keycaps and casing.
- For deeper cleaning, use a keycap puller to remove keycaps and clean dust and debris from underneath with compressed air or a small brush.
- Do not use harsh chemicals or abrasive materials.

Battery Replacement (Wireless Mode)

When the keyboard's wireless performance degrades or the indicator light suggests low power, replace the AAA batteries.

1. Flip the keyboard over.
2. Open the battery compartment cover.
3. Remove the old AAA batteries and dispose of them responsibly.
4. Insert two new AAA batteries, ensuring correct polarity (+/-).
5. Close the battery compartment cover.

TROUBLESHOOTING

Problem	Possible Solution
Keyboard not responding (Wired)	◦ Ensure the USB-C cable is securely connected to both the keyboard and the computer. ◦ Try a different USB port on your computer. ◦ Test with a different USB-C cable if available. ◦ Check DIP switch 4 is set to OFF for wired mode.

Problem	Possible Solution
Keyboard not connecting (Bluetooth)	◦ Ensure batteries are inserted correctly and have sufficient charge. ◦ Verify Bluetooth is enabled on your device. ◦ Ensure DIP switch 4 is set to ON for Bluetooth mode. ◦ Re-enter pairing mode (Fn + F11/F12) and re-attempt pairing. ◦ Remove "Leopold FC750RBT" from your device's Bluetooth list and try pairing again. ◦ Move the keyboard closer to your device.
Keys not registering or double-typing	◦ Clean under the affected keycap for any debris. ◦ Ensure the keycap is properly seated on the switch stem. ◦ If using wireless, check battery level.

SPECIFICATIONS

Feature	Detail
Model	FC750RBT
Brand	Leopold
Connectivity	Bluetooth 5.3, USB-C Wired
Keyboard Layout	Tenkeyless (TKL), 87 Keys
Switch Type	Genuine Cherry MX Blue Mechanical Switches
Keycap Material	PBT Double Shot
Special Features	Sound Absorbing Pad, DIP Switches, 3-Way Cord Channel, Multimedia Controls
Power Source (Wireless)	2 x AAA Batteries
Compatible Devices	Laptop, PC, Tablet, Smartphone

WARRANTY AND SUPPORT

Leopold products are manufactured to high quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Leopold website.

For technical support, troubleshooting assistance, or to inquire about repairs, please contact Leopold customer service through their official channels. You can often find support information on the manufacturer's website:

[Visit the Official Leopold Store on Amazon](#)

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question