

[manuals.plus](#) /

› [SICOTAS](#) /

› [SICOTAS 57" Modern Sideboard Buffet Cabinet Instruction Manual](#)

SICOTAS SCEWA10003WT-2

SICOTAS 57" Modern Sideboard Buffet Cabinet Instruction Manual

Model: SCEWA10003WT-2

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your SICOTAS 57" Modern Sideboard Buffet Cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: The SICOTAS 57" Modern Sideboard Buffet Cabinet.

IMPORTANT SAFETY INFORMATION

- For safety, please attach the cabinet to the wall with the anti-tip kits provided. This prevents accidental tipping and potential injury.
- Ensure all parts are present and undamaged before assembly. Do not use damaged parts.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging the material.
- Keep small parts away from children during assembly.
- The maximum weight limit for the top is 77 pounds. Do not exceed this limit.

PARTS LIST

Please verify that all components are present before starting assembly. A detailed list of hardware and panels is typically included in the packaging. Ensure you have all items before proceeding.

Typical components include:

- Top Panel
- Base Panel
- Side Panels
- Back Panels
- Cabinet Doors (4)
- Adjustable Shelves (2)
- Metal Legs
- Gold Handles
- Hinges
- Cam Bolts, Cam Locks, Screws
- Shelf Pins
- Anti-tip Kit

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. An assembly video is provided for visual guidance.

Assembly Video Guide

Your browser does not support the video tag.

Video: Step-by-step installation guide for the SICOTAS Fluted Sideboard.

Step-by-Step Written Instructions

1. **Prepare Components:** Lay out all panels and hardware on a clean, soft surface. Identify each part using the provided diagrams.
2. **Attach Cam Bolts:** Insert cam bolts into the designated holes on the side and top/base panels. Ensure they are fully seated.
3. **Connect Side Panels:** Attach the side panels to the base panel using the cam locks and screws.
4. **Install Back Panel:** Slide the back panel into the grooves of the assembled frame. Secure it with small nails or screws as indicated.
5. **Attach Top Panel:** Place the top panel onto the assembled frame, aligning the cam bolts with the cam lock holes. Secure with cam locks.
6. **Install Legs:** Attach the metal legs to the bottom of the cabinet using screws. Ensure they are tightened securely.
7. **Mount Hinges to Doors:** Attach the hinges to the cabinet doors using screws.
8. **Attach Doors to Cabinet:** Mount the doors to the cabinet frame by aligning the hinges and securing them with screws.
9. **Install Handles:** Attach the gold handles to the doors using screws.
10. **Insert Shelf Pins and Shelf:** Insert shelf pins into the desired height holes and place the adjustable shelf on top.
11. **Install Anti-Tip Kit:** Secure the anti-tip kit to the back of the cabinet and to a wall stud using the provided hardware. This is a critical safety step.

Adjustable Shelves

Your SICOTAS sideboard features adjustable shelves with 6 height settings, allowing you to customize storage space for various items. To adjust a shelf:

1. Remove all items from the shelf.
2. Lift the shelf slightly and remove the four shelf pins from their current positions.
3. Reinsert the shelf pins into the desired holes at the new height. Ensure all four pins are securely in place and level.
4. Carefully place the shelf back onto the pins.



Figure 2: Adjustable shelf with multiple height options.

Door Operation

The cabinet doors are designed for smooth operation. Use the integrated gold handles to open and close the doors. Avoid

forcing the doors if they feel stiff or misaligned.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the UV-cured paint finish.
- **Spills:** Clean spills immediately to prevent staining, especially on the high-gloss finish.
- **Hardware:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the finish.

TROUBLESHOOTING

Door Alignment Issues

If the cabinet doors are not level or have a gap after assembly, the hinges may need adjustment. Refer to the video and diagram below for guidance.

Your browser does not support the video tag.

Video: Guide on how to align cabinet doors properly.



Figure 3: Hinge adjustment instructions for door alignment.

1. **Adjusting Gap (Side-to-Side):** Locate the screw closest to the cabinet frame on each hinge. Turning this screw clockwise or counter-clockwise will move the door horizontally, allowing you to adjust the gap between doors.
2. **Adjusting Height (Up-and-Down):** Loosen the screws that attach the hinge plate to the cabinet. Adjust the door to the desired height, then re-tighten the screws firmly.
3. **Adjusting Depth (In-and-Out):** Loosen the screw furthest from the cabinet frame. Push the door in or pull it out to adjust its depth, then re-tighten the screw.

SPECIFICATIONS

Attribute	Detail
Brand	SICOTAS
Model Number	SCEWA10003WT-2
Color	White
Product Dimensions	16"D x 57"W x 34.3"H

Item Weight	50 Pounds
Material	White-Painted Engineered Wood + Metal Legs
Finish Type	Painted (UV-cured, high-gloss)
Number of Doors	4
Number of Adjustable Shelves	2 (with 6 height settings)
Weight Limit (Top)	77 Pounds
Mounting Type	Floor Mount (with anti-tip kit for wall attachment)
Assembly Required	Yes
Included Components	Assembly tools, Instructions, Anti-tip kits



Figure 4: Product dimensions and load capacity.

CUSTOMER SUPPORT

Our customer service team is available to support you throughout your entire shopping journey. Should you have any questions or require assistance, please do not hesitate to contact us. Refer to your purchase documentation for contact details.

