

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEVOIT](#) /

› [LEVOIT Tower Fan User Manual](#)

LEVOIT LTF-F361-WUS White

LEVOIT Tower Fan User Manual

Model: LTF-F361-WUS White

INTRODUCTION

The LEVOIT Tower Fan is designed to provide efficient and quiet cooling for your home or office. Featuring an innovative airflow design, it delivers a soft, soothing breeze similar to natural winds. With multiple modes, speed settings, and smart features, this fan ensures optimal comfort and convenience.



Image: The LEVOIT Tower Fan in white, showcasing its sleek design and the powerful airflow it generates, accompanied by its remote control.

SETUP

Assembling your LEVOIT Tower Fan is straightforward. Ensure all components are present before beginning. The main body of the fan needs to be securely attached to its base.

- Carefully align the tower fan body with the base.

- Tighten the base nut firmly to ensure a stable and upright installation. Proper alignment prevents a crooked setup and ensures optimal performance.



Image: A person demonstrating the simple process of attaching the tower fan to its base, highlighting the ease of setup.

OPERATING INSTRUCTIONS

Your LEVOIT Tower Fan offers various settings to customize your cooling experience. Control the fan using the top panel or the included remote control.

Modes of Operation

The fan features 4 distinct modes to suit different needs:

- **Normal Mode:** This is the default setting, allowing you to manually adjust fan speed and oscillation.
- **Auto Mode:** Utilizes a built-in sensor to automatically adjust fan speed based on the room's ambient temperature, maintaining optimal comfort.
- **Turbo Mode:** Provides rapid cooling and air circulation by starting at the highest speed with oscillation. The fan speed will decrease as the room temperature lowers.
- **Advanced Sleep Mode:** Designed for quiet operation during sleep. The display and sound automatically turn off after 5 seconds.
 - During the first hour, the fan operates without oscillation at a speed determined by your current setting.
 - After one hour, the fan begins to oscillate and gradually decreases speed to prevent over-cooling.
 - Subsequently, fan speeds adjust according to temperature, ensuring a comfortable night's sleep.

Speed Settings and Oscillation

The fan offers 5 speed settings for precise control over airflow. Its 90° oscillation feature ensures wide air distribution, providing curtain-like coverage across large spaces with a wind speed of 25ft/s and 1062 CFM airflow.

Timer Function

Set the fan to automatically turn off after a specified period, up to 12 hours, for energy saving and convenience.



Image: A close-up of the fan's top control panel, illustrating the four distinct modes (Normal, Turbo, Auto, Advanced Sleep) and the five available speed settings.

90° Oscillation Wraps You in Coolness

Vast coverage for greater circulation.



Image: The tower fan demonstrating its 90-degree oscillation, effectively circulating air throughout a room, providing wide coverage.

MAINTENANCE

Regular cleaning ensures your LEVOIT Tower Fan operates efficiently and maintains optimal airflow. The fan is designed for easy maintenance.

- The back cover and internal fan blades are detachable for thorough cleaning.
- Use a vacuum cleaner to remove dust and debris from the internal components. The vacuum cleaner is not included.
- If cleaning the wind wheel, ensure the screws are aligned with the *flat surface* of the motor shaft during reinstallation, not the arc surface. Incorrect alignment will reduce air output.

Sleep in NaturalWind

Adjusts speed to temperature and operates with minimal noise



Rapid Cooling
as you fall asleep

Temperature Responsive
while you sleep

Smart
Sensor

Image: The tower fan with its back cover removed, illustrating how to easily access and clean the internal fan blades and components using a vacuum.

Easy to Use & Maintain

Top Control Panel

Remote Control Storage

Detachable & Washable
Back Cover

Note: The vacuum cleaner is not included

Image: A detailed view of the fan's side, highlighting the convenient remote control storage slot and the easily detachable back cover for maintenance.

TROUBLESHOOTING

If you encounter any issues with your LEVOIT Tower Fan, refer to the following common problems and their solutions:

- **Fan suddenly starts to oscillate:** This is normal behavior when the fan is in Advanced Sleep Mode. It is designed to automatically begin oscillating after one hour of operation to provide varied airflow.
- **Decreased air output after cleaning the wind wheel:** Ensure that the screws are aligned with the *flat surface* of the motor shaft during reinstallation, not the arc surface. Incorrect alignment will reduce air output.
- **Fan suddenly stops:** Check if the timer function was accidentally set. Verify the timer settings and try operating the fan again.
- **Top control panel is not responsive:** Your fan might be in Advanced Sleep Mode or have the screen manually turned off. When the screen is off, the control panel enters a semi-sleep state to prevent accidental touches. To

adjust settings, press the button twice: once to wake up the panel, and a second time to make your desired adjustment.

SPECIFICATIONS


 
 



Feature	Detail
Brand	LEVOIT
Model Name	Classic 36-inch white
Color	White
Style	Classic 36"
Product Dimensions	6.5"D x 6.5"W x 36.2"H
Item Weight	8.5 Pounds
Power Source	Corded Electric
Wattage	39 watts
Noise Level	28 dB
Air Flow Capacity	1044 Cubic Feet Per Minute
Speed	25 Feet Per Second
Number of Power Levels	5
Special Features	Remote Controlled, Timer, LED Light, Oscillating
Included Components	Remote
Indoor/Outdoor Usage	Indoor
Assembly Required	Yes

WARRANTY AND SUPPORT

For warranty information, product registration, or further assistance, please refer to the official LEVOIT website or the documentation included with your product. You can also find additional support and user guides online.

Official User Guide (PDF): [Download User Guide](#)

Official User Manual (PDF): [Download User Manual](#)

 <p>Levoit USER MANUAL 36-Inch Tower Fan</p> <p>Questions or Concerns? Please contact us at 1-800-405-4050 or support@levoit.com</p>	<p>Levoit 36-Inch Tower Fan User Manual</p> <p>Comprehensive user manual for the Levoit 36-Inch Tower Fan (Model LTF-F361-WUS), covering safety, operation, controls, maintenance, troubleshooting, and warranty information from Arovast Corporation.</p>
 <p>Levoit USER MANUAL Classic 36-Inch Tower Fan</p> <p>Questions or Concerns? Please contact us at 1-800-405-4050 or support@levoit.com</p>	<p>Levoit Classic 36-Inch Tower Fan User Manual</p> <p>User manual for the Levoit Classic 36-Inch Tower Fan (Model LTF-F361-WUS). Includes safety information, operating instructions, care and maintenance, troubleshooting, and warranty details.</p>
 <p>Levoit USER MANUAL Classic 36-Inch Tower Fan</p> <p>Questions or Concerns? Please contact us at 1-800-405-4050 or support@levoit.com</p>	<p>Levoit Classic 36-Inch Tower Fan User Manual Safety, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for the Levoit Classic 36-Inch Tower Fan (Model LTF-F361-WUS). Learn about safety precautions, operating modes, troubleshooting, and warranty information.</p>
 <p>Levoit Classic 36-Inch Tower Fan 取扱説明書 Model: LTF-F361-WJP</p> <p>もくじ 目次 1. 安全に関する注意事項 2. 製品の概要 3. 各部の名称 4. 電源の接続 5. 運転モードの選択 6. 風速の調整 7. タイマー機能 8. リモートコントロール 9. 掃除とメンテナンス 10. 故障のトラブルシューティング 11. 保証とお問い合わせ</p>	<p>Levoit Classic 36-inch Tower Fan User Manual</p> <p>User manual for the Levoit Classic 36-inch Tower Fan (Model: LTF-F361-WJP), covering safety precautions, product features, operation, maintenance, and warranty information.</p>
 <p>Levoit 36-Inch Tower Fan Quick Start Guide</p>	<p>Levoit 36-Inch Tower Fan Quick Start Guide</p> <p>A quick start guide for the Levoit 36-inch Tower Fan, covering assembly, remote control functions, and basic operation in multiple languages.</p>
 <p>Levoit USER MANUAL 42-Inch Tower Fan</p> <p>Questions or Concerns? Please contact us at 1-800-405-4050 or support@levoit.com</p>	<p>Levoit 42-Inch Tower Fan User Manual</p> <p>User manual for the Levoit 42-Inch Tower Fan, including safety information, product features, operating instructions, maintenance, troubleshooting, and warranty details.</p>

