

[Manuals.plus](#) /

› [Navaris](#) /

› Navaris Wooden Push Walker with Building Blocks Instruction Manual

Navaris Wooden Push Walker with Building Blocks

Navaris Wooden Push Walker with Building Blocks

Instruction Manual

1. Safety Information

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **WARNING:** This product contains small parts that may present a choking hazard. Not suitable for children under 18 months.
- **WARNING:** Always use under direct adult supervision. Never leave a child unattended with the push walker.
- Ensure all parts are securely fastened before each use.
- Do not use on uneven surfaces, near stairs, or in areas with potential hazards.
- Regularly inspect the product for any damage or loose parts. Discontinue use if any damage is found.
- Keep packaging materials away from children to prevent suffocation.

2. Package Contents

Verify that all components are present before beginning assembly.

- 1x Wooden Push Walker frame (unassembled)
- 46x Wooden Building Blocks
- Assembly hardware (screws, wrench if applicable)
- 1x Instruction Manual

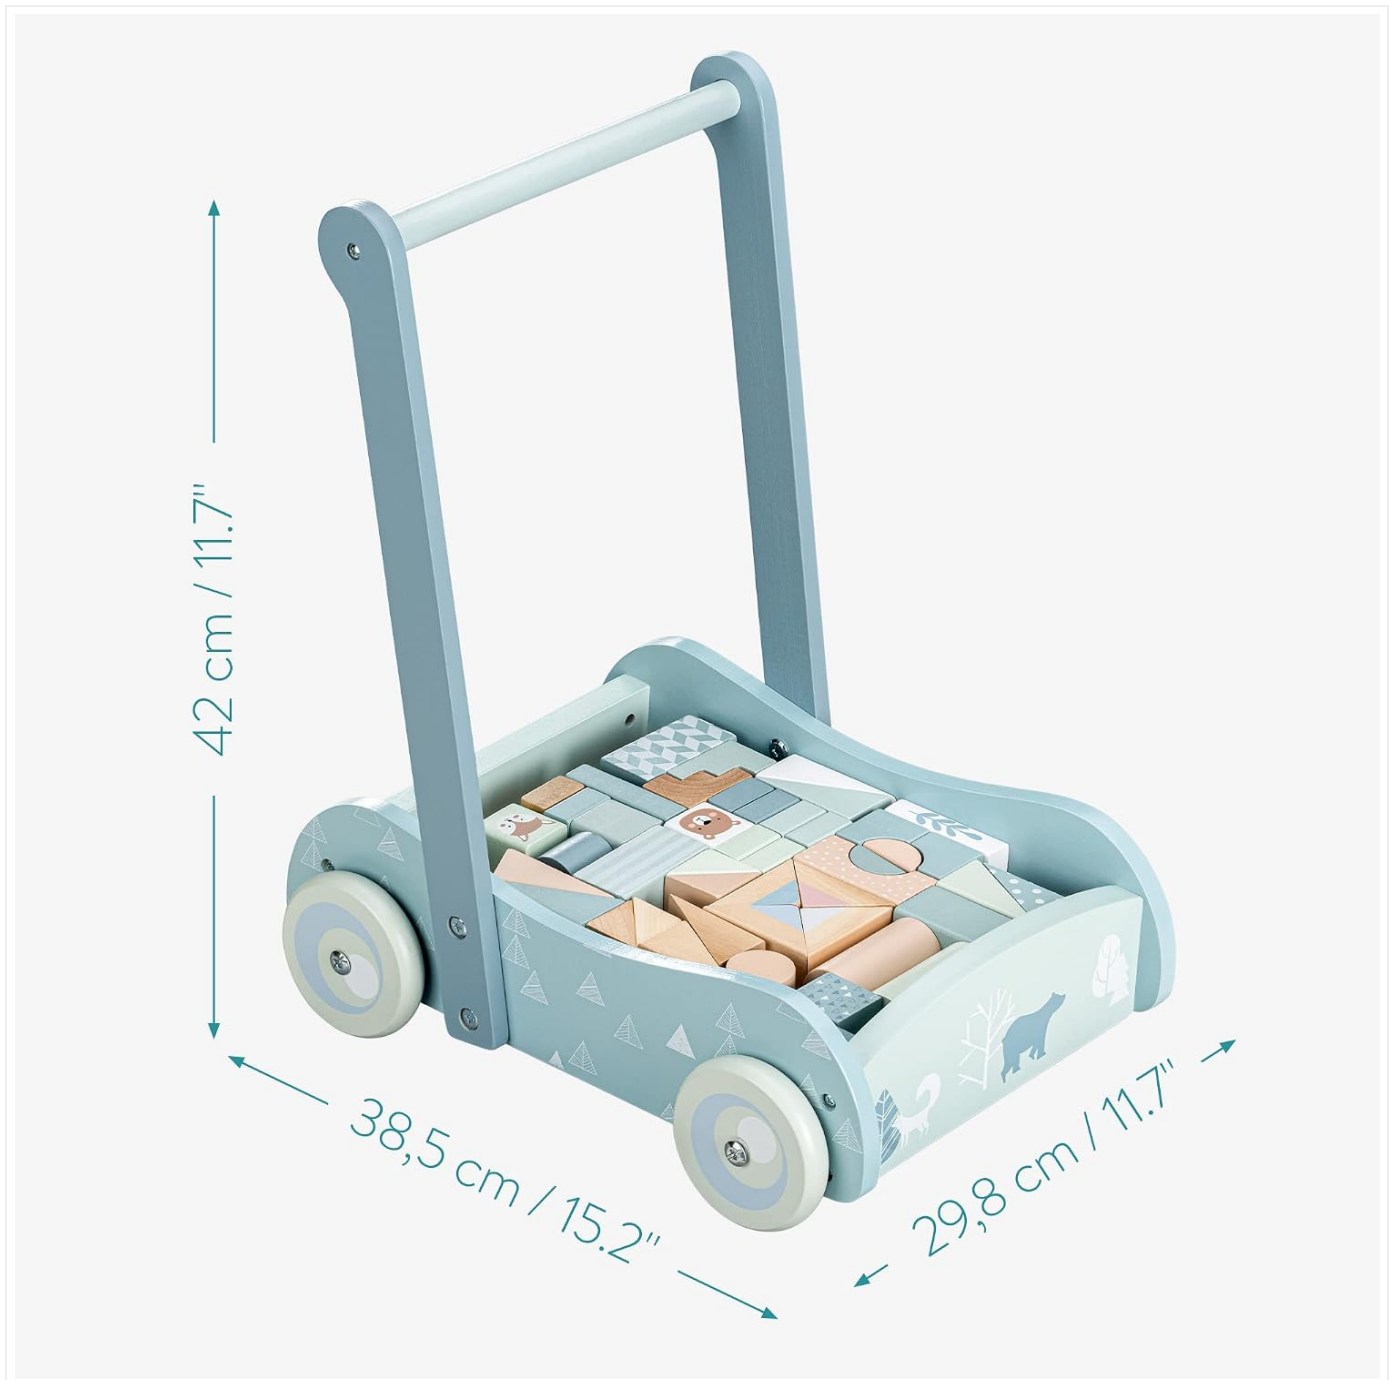


Image 2.1: The Navaris Wooden Push Walker with its included 46 building blocks, showcasing the product's design and components.

3. Assembly Instructions

Assembly should be performed by an adult. Please follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the "Package Contents" list.
2. **Attach Handlebar Supports:** Identify the two side panels of the walker and the handlebar. Align the handlebar supports with the pre-drilled holes on the side panels. Secure them using the provided screws. Do not overtighten.
3. **Assemble Base:** Connect the front and back panels to the side panels, forming the main storage compartment for the blocks. Ensure all connections are flush and secure with screws.
4. **Attach Wheels:** Securely attach the four wheels to the designated axles on the walker's base. Ensure they spin freely.
5. **Final Check:** Once assembled, gently shake the walker to ensure all connections are tight and stable. There should be no wobbling or loose parts.



Image 3.1: Diagram showing the dimensions of the assembled push walker: 42 cm (16.5") height, 38.5 cm (15.2") width, and 29.8 cm (11.7") depth.

4. Operating Instructions

The Navaris Wooden Push Walker is designed to assist children aged 18 months and older in developing motor skills and coordination.

- **Push Walker Function:** The child can hold onto the handlebar and push the walker forward, aiding in balance and walking practice. Always ensure an adult is present to supervise and assist.
- **Building Blocks Play:** The 46 wooden building blocks can be stored in the walker's compartment. Children can use these blocks for creative construction, stacking, and sorting, which helps develop fine motor skills, problem-solving abilities, and spatial awareness.
- **Interactive Play:** The walker can also be used to transport other toys, encouraging imaginative play and movement around the house.

5. Care and Maintenance

- **Cleaning:** Wipe the wooden surfaces with a damp cloth and mild soap if necessary. Dry immediately with a clean, soft cloth. Do not immerse in water.
- **Storage:** Store the walker and blocks in a dry place, away from direct sunlight and extreme temperatures, to prevent warping or damage to the wood.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten if necessary. Inspect for any splinters, cracks, or other damage to the wood.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the wood finish.

6. Troubleshooting

Problem	Possible Cause	Solution
Walker is wobbly or unstable.	Loose screws or improper assembly.	Check all screws and connections. Tighten any loose screws. Refer to assembly instructions.
Wheels do not turn smoothly.	Debris in the wheel mechanism or overtightened wheel attachment.	Remove any debris from the wheels. Ensure wheels are not overtightened during assembly.
Child is unable to push the walker.	Child's age/developmental stage, or resistance from wheels.	Ensure the child meets the recommended age (18+ months). Check wheels for smooth operation. Provide assistance and encouragement.

7. Specifications

- Model:** Navaris Wooden Push Walker with Building Blocks
- Dimensions (L x W x H):** 29.8 cm x 38.5 cm x 42 cm (approximately 11.7" x 15.2" x 16.5")
- Materials:** Plywood, Solid Schima Wood, MDF
- Recommended Age:** 18+ Months
- Number of Blocks:** 46

8. Warranty and Support

For warranty information or customer support, please refer to the purchase documentation or contact Navaris customer service through the retailer where the product was purchased. Keep your proof of purchase for any warranty claims. You can also visit the official Navaris store for more information:[Navaris Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question