

[Manuals.plus](#) /

› [VYTRONIX](#) /

› VYTRONIX L4RK Cordless Vacuum Cleaner User Manual

VYTRONIX L4RK

VYTRONIX L4RK Cordless Vacuum Cleaner User Manual

Model: L4RK

1. INTRODUCTION

Thank you for choosing the VYTRONIX L4RK Cordless Vacuum Cleaner. This 3-in-1 upright, handheld, and stick vacuum is designed for efficient and convenient cleaning of various surfaces. Featuring a powerful 29.6V lithium-ion battery, a 20Kpa brushless motor, and a lightweight design, it offers versatile cleaning solutions for your home. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



The VYTRONIX L4RK Cordless Vacuum Cleaner, showcasing its versatile 3-in-1 design for upright, handheld, and stick cleaning.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Use extra care when cleaning on stairs.
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.

3. PACKAGE CONTENTS

Please check the box for the following components:

- Main Motor Unit (Handheld Vacuum)
- Extension Tube
- Motorised Floorhead with LED Lights
- Crevice Tool
- Upholstery Tool
- Rechargeable Lithium-Ion Battery
- Charging Adapter
- Wall Mount Bracket
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your VYTRONIX L4RK vacuum cleaner.



Key components of the VYTRONIX L4RK, highlighting the battery, brushless motor, motorised brushbar, and LED floorhead.

Main Motor Unit: Contains the brushless motor, dust cup, and power controls.

Extension Tube: Connects the main unit to the floorhead for upright cleaning.

Motorised Floorhead: Features a brushbar for effective cleaning on various floor types and LED lights to illuminate dust.

Attachments: Crevice tool for narrow spaces and upholstery tool for fabrics.

5. SETUP AND ASSEMBLY

Your VYTRONIX L4RK vacuum cleaner can be assembled in various configurations:

5.1. Upright Stick Vacuum Assembly

1. Insert the extension tube into the main motor unit until it clicks securely into place.
2. Attach the motorised floorhead to the other end of the extension tube, ensuring it clicks firmly.
3. Ensure the battery is fully charged before first use. Insert the charged battery into the slot on the main motor unit until it

locks.

5.2. Handheld Vacuum Assembly

1. For handheld use, detach the extension tube and floorhead from the main motor unit by pressing the release buttons.
2. Attach either the crevice tool or the upholstery tool directly to the main motor unit until it clicks.



The main motor unit configured as a handheld vacuum with the crevice tool.

6. OPERATING INSTRUCTIONS

6.1. Charging the Battery

The lithium-ion battery provides approximately 35 minutes of run time. A full charge takes 3-4 hours.

1. Connect the charging adapter to the charging port on the battery or the main motor unit.
2. Plug the adapter into a wall outlet. The battery indicator lights will show charging progress.
3. Once fully charged, all indicator lights will be solid. Disconnect the charger.

6.2. Powering On/Off and Mode Selection




POWER CONTROLS

Detailed view of the power controls, including Max/Min suction settings and battery indicator.

- Press the **Power** button to turn the vacuum on or off.
- Use the **Min/Max** buttons to switch between standard suction mode and Boost Mode for increased power on tougher messes.
- The LED lights on the floorhead will automatically illuminate when the vacuum is in operation, providing visibility in dark areas.

6.3. Using Attachments

- **Crevice Tool:** Ideal for cleaning tight corners, edges, and narrow gaps.
- **Upholstery Tool:** Designed for cleaning furniture, curtains, and other fabric surfaces.

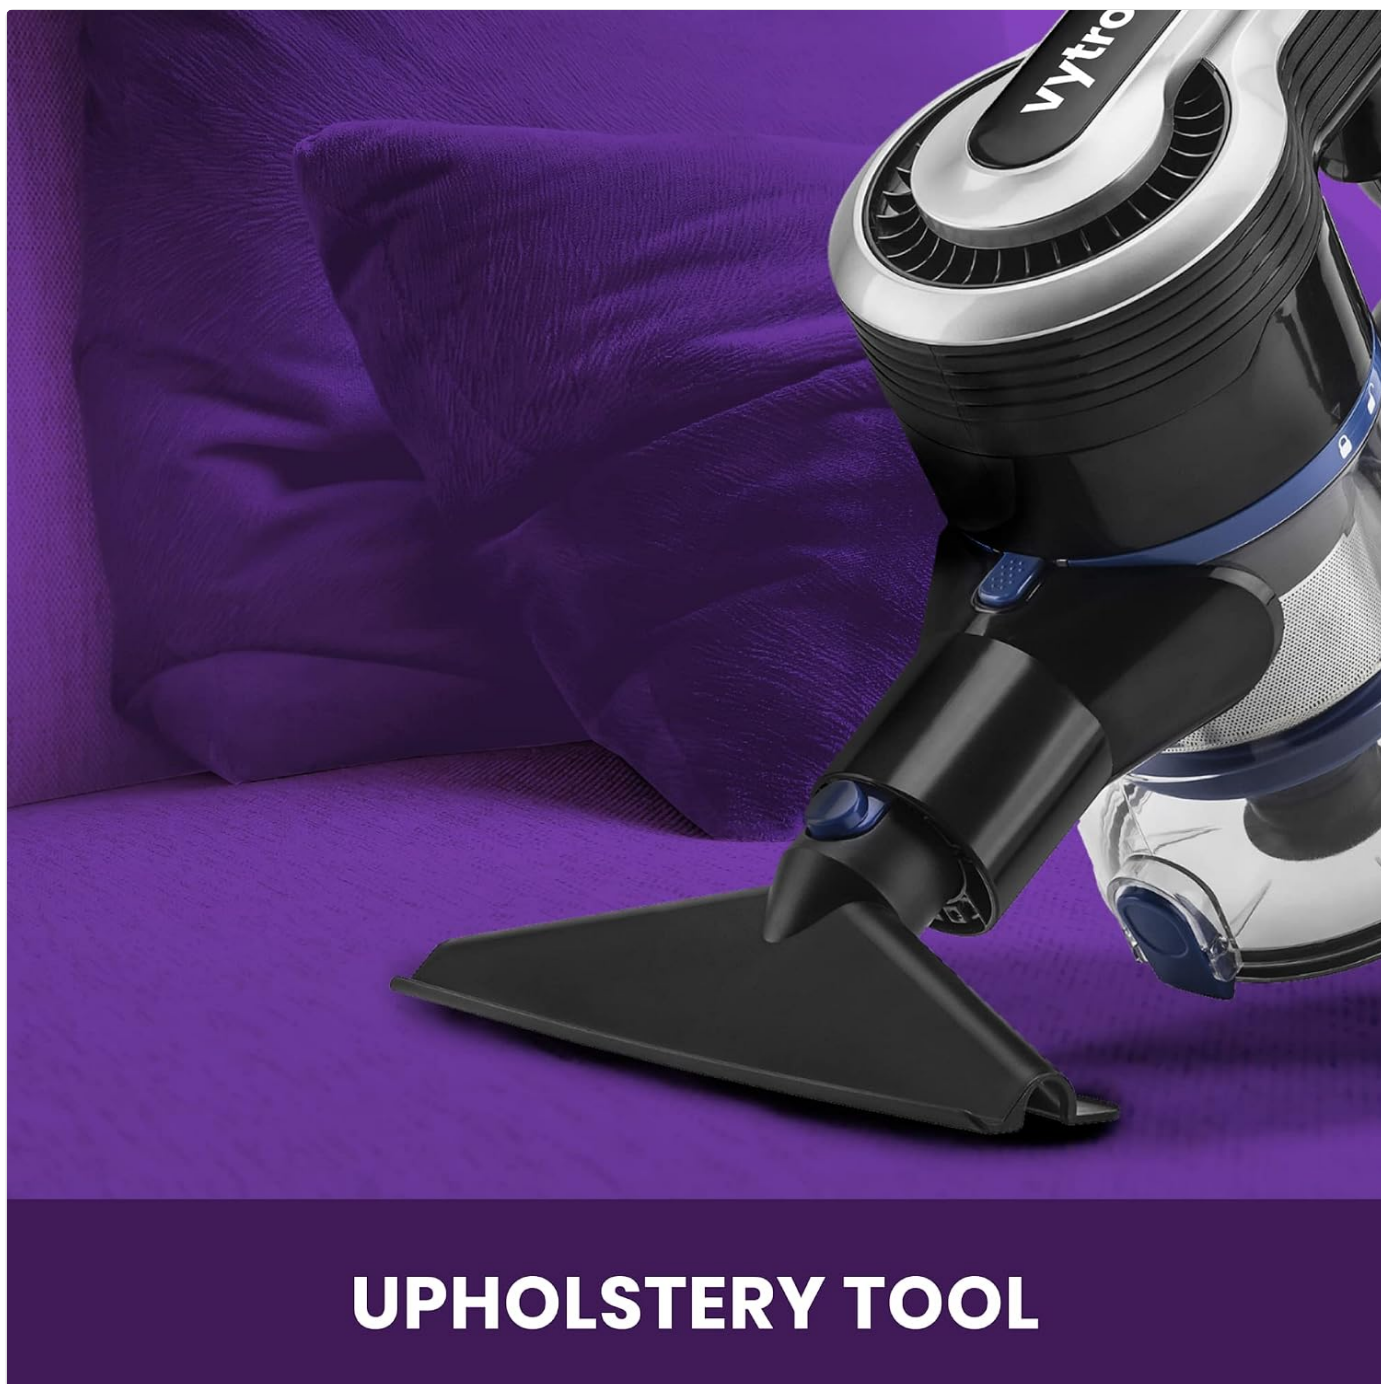

The handheld unit with the upholstery tool, suitable for cleaning fabric surfaces.

7. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

7.1. Emptying the Dust Cup

Empty the 0.5-litre dust cup regularly, especially when the MAX line is reached, to maintain suction power.

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Press the dust cup release button and remove the dust cup from the main motor unit.
3. Position the dust cup over a waste bin and press the bottom release latch to open the lid and empty contents.
4. Close the dust cup lid and reattach it to the main motor unit until it clicks.

7.2. Cleaning the Filters

The vacuum uses a HEPA filter system. Clean filters regularly to prevent loss of suction.

1. Remove the dust cup as described above.
2. Twist and pull out the filter assembly from the dust cup.
3. Tap the filter gently over a bin to remove loose dust. For a deeper clean, rinse the filter under cold running water.
4. Allow the filter to air dry completely for at least 24 hours before reassembling. Do not use heat to dry.
5. Reinsert the dry filter assembly into the dust cup and reattach the dust cup to the main unit.

7.3. Cleaning the Brushbar

Periodically check the motorised brushbar for tangled hair or debris.

1. Turn off the vacuum and detach the floorhead.
2. Locate the brushbar access latch on the side of the floorhead and open it.
3. Remove the brushbar. Use scissors to cut away any tangled hair or threads.
4. Clean any debris from the brushbar housing.
5. Reinsert the brushbar and close the access latch securely.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or not inserted correctly.	Ensure battery is fully charged and securely inserted.
Loss of suction	Dust cup full; Filters clogged; Blockage in hose/tube/floorhead.	Empty dust cup. Clean filters. Check for and remove any blockages.
Brushbar not rotating	Brushbar tangled with hair/debris; Floorhead blocked.	Clean brushbar. Check floorhead for obstructions.
Short run time	Battery not fully charged; Battery degradation.	Ensure battery is fully charged. If issue persists, battery may need replacement.

9. SPECIFICATIONS

Feature	Detail
Model Number	L4RK
Brand	VYTRONIX
Type	Cordless 3-in-1 Stick Vacuum
Battery	29.6V Lithium-Ion
Motor	Brushless, 20Kpa suction power
Power / Wattage	300 watts
Run Time	Up to 35 minutes

Feature	Detail
Charging Time	3-4 hours
Dust Cup Capacity	0.5 litres
Filter Type	HEPA Filter
Product Dimensions	105 x 24 x 25 cm
Item Weight	2.3 kg
Special Features	Boost Mode, Lightweight, Bagless, Floorhead LED Lights

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official VYTRONIX website. Keep your proof of purchase for any warranty claims.