

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit MTWE91495WUKN 9kg Washing Machine User Manual

Indesit MTWE91495WUKN_WH

Indesit MTWE91495WUKN 9kg Washing Machine User Manual

Model: MTWE91495WUKN_WH | Brand: Indesit

1. INTRODUCTION

Thank you for choosing the Indesit MTWE91495WUKN 9kg Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

Key Features:

- 9kg drum capacity, ideal for medium-sized households.
- Water Balance Plus Sensors for optimized water and energy consumption.
- Features 8 Fast Cycles for quick washing needs.
- Includes 3 Full Load Fast Cycles to clean a full drum more quickly.
- Maximum spin speed of 1400 RPM for efficient water extraction.



Image: Front view of the Indesit MTWE91495WUKN 9kg Washing Machine, showcasing its white finish and central door.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

General Safety:

- Ensure the appliance is properly earthed.
- Do not allow children to play with or near the appliance.
- Never force the door open during operation.
- Unplug the appliance before cleaning or maintenance.
- Do not install the appliance in areas exposed to extreme temperatures or high humidity.

Electrical Safety:

- Check that the voltage and frequency indicated on the rating plate correspond to your household supply.
- Do not use extension cords or multiple adapters.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended that installation be performed by a qualified technician.

Unpacking:

1. Remove all packaging materials, including the polystyrene base and any inserts from the drum.
2. Carefully remove the transport bolts from the rear of the machine. Keep these bolts for future transport if needed.



Image: Rear view of the washing machine, highlighting the position of the transport bolts and water hoses for installation.

Positioning:

- Place the machine on a flat, stable surface, away from direct sunlight or heat sources.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- Adjust the feet to ensure the machine is perfectly level.

Water Connection:

- Connect the water inlet hose to a cold water tap with a 3/4" thread.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

Electrical Connection:

- Plug the appliance into a properly earthed socket.
- Do not switch on the power until all installation steps are complete.

4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Indesit washing machine.

Control Panel Overview:



Image: Detailed view of the control panel, showing the program selector dial, display, and function buttons.

- **Program Selector Dial:** Used to select the desired wash program.
- **Display:** Shows program duration, error codes, and selected options.
- **Function Buttons:** Allow selection of additional options like temperature, spin speed, and delay start.
- **Start/Pause Button:** To start or pause a wash cycle.

Loading Laundry:

1. Open the washing machine door.
2. Load laundry, ensuring not to overload the drum. For optimal results, leave enough space for clothes to tumble freely.
3. Close the door firmly until it clicks.



Image: The washing machine door is open, revealing the spacious drum, ready for loading laundry.

Adding Detergent:

1. Pull out the detergent dispenser drawer.
2. Add detergent and fabric softener to the appropriate compartments as indicated in the drawer.
3. Push the drawer back in gently.



Image: The detergent dispenser drawer is pulled out, showing compartments for pre-wash, main wash, and fabric softener.

Selecting a Program:

1. Turn the program selector dial to the desired wash program (e.g., Cotton, Synthetics, Mixed, Express).
2. Adjust temperature and spin speed using the corresponding buttons if needed.
3. Press the Start/Pause button to begin the cycle.

Program Examples:

Program	Description	Load (Max)
Mixed	For lightly soiled mixed cotton and synthetic garments.	Up to 3 kg

Program	Description	Load (Max)
Cotton 60°	Standard program for cottons at 60°C.	9 kg
Express	Quick wash for small loads of lightly soiled items.	Up to 1 kg
Eco 40-60	Energy-efficient program for normally soiled cotton garments.	9 kg

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

Cleaning the Exterior:

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser:

- Remove the dispenser drawer and rinse it under running water.
- Clean any residue from the compartments and the housing.
- Reinsert the drawer.

Cleaning the Door Seal:

- Regularly wipe the rubber door seal with a damp cloth to remove lint and detergent residue.
- Leave the door slightly ajar after use to allow the drum to air dry and prevent odors.

Cleaning the Pump Filter:

- Locate the filter cover at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Carefully open the cover and unscrew the filter.
- Remove any debris, then rinse the filter under running water.
- Screw the filter back in securely and close the cover.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power connection; Ensure door is fully closed; Select a program; Press Start/Pause.
No water intake	Water tap closed; Water inlet hose kinked; Water supply cut off.	Open water tap; Straighten hose; Check household water supply.
Machine vibrates excessively	Transport bolts not removed; Machine not level; Laundry unevenly distributed.	Remove transport bolts; Adjust leveling feet; Redistribute laundry in drum.
Water not draining	Drain hose kinked or blocked; Pump filter clogged.	Check and straighten drain hose; Clean pump filter.

7. SPECIFICATIONS

Feature	Detail
Brand	Indesit
Model	MTWE91495WUKN_WH
Capacity	9 Kilograms
Maximum Rotational Speed	1400 RPM
Product Dimensions (H x W x D)	85 x 59.5 x 60.5 cm
Installation Type	Freestanding
Control Console	Buttons
Number of Standard Cycles	8
Access Location	Front Load
Colour	White
Material Type	Plastic
Energy Efficiency	B Rated (as per product title)

8. WARRANTY AND SUPPORT

Your Indesit washing machine comes with a manufacturer's warranty. Please refer to the warranty card provided with

your appliance for specific terms and conditions, including the warranty period and coverage details.

Customer Support:

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact details can typically be found on the official Indesit website or in the documentation supplied with your appliance.

When contacting support, please have your appliance's model number (MTWE91495WUKN_WH) and serial number ready. The serial number is usually located on a sticker inside the door frame or on the back of the appliance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question