

Indesit BDE107625XWUKN

Indesit 10kg Wash 7kg Dry 1600rpm Freestanding Washer Dryer

Model: BDE107625XWUKN

Brand: Indesit

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Indesit 10kg Wash 7kg Dry 1600rpm Freestanding Washer Dryer, model BDE107625XWUKN. Please read this manual thoroughly before using the appliance and keep it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Unplug the appliance before cleaning or performing maintenance.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep packaging materials out of reach of children.
- Do not install the appliance in an area exposed to direct sunlight or extreme temperatures.

SETUP AND INSTALLATION

Unpacking and Positioning

Carefully remove all packaging materials. The appliance comes with a power cord, manual, fill hose, and drain hose. Ensure all transit bolts are removed from the rear of the appliance before use. Failure to do so can cause significant damage.

- Position the washer dryer on a firm, level floor. Adjust the feet to ensure stability.

- Connect the fill hose to a cold water tap and the drain hose to a suitable drain point.
- Plug the power cord into a grounded electrical outlet.

First Use

Before washing laundry for the first time, run an empty wash cycle to clean the drum and remove any manufacturing residues.

- Add a small amount of detergent to the detergent dispenser.
- Select a short wash program (e.g., Rapid 30).
- Start the cycle without any laundry inside.

OPERATING INSTRUCTIONS

Control Panel Overview



This image displays the front of the Indesit 10kg Wash 7kg Dry 1600rpm Freestanding Washer Dryer. The top left features the Indesit logo and the detergent dispenser. The central part of the top panel includes the program selection dial with various wash and dry cycles, and the 'Start/Pause' button. To the right, a digital display shows cycle information and additional options.

The large circular door for the drum is prominently featured in the center.

The control panel consists of a program selection dial, function buttons, and a digital display. Turn the dial to select your desired program. Use the buttons to select additional options like temperature, spin speed, or delay

start.

Wash and Dry Programs

The Indesit Washer Dryer offers a variety of programs tailored for different fabric types and needs:

Category	Program	Description
Traditionals	1. Cotton	For cotton garments.
	2. Synthetics	For synthetic fabrics.
	3. Mixed	For mixed loads of cotton and synthetics.
	4. Eco 40-60	Energy-efficient program for cotton and mixed items washable at 40°C or 60°C.
	5. White	For white cottons.
	6. Delicates	For delicate garments requiring gentle care.
Specials	7. Colours	Helps preserve the vibrancy of colored items.
	8. Dark	Specific program for dark garments.
	9. Anti-odour	Removes unpleasant odors from fabrics.
	10. 20°C	Low-temperature wash for lightly soiled items.
	11. Wool	Gentle wash for wool garments.
	12. Rapid 30	Quick 30-minute wash cycle.
Dry & Extra	13. Wash & Dry 45	A quick 45-minute wash and dry cycle for small loads.
	14. AirFresh	Refreshes clothes with air, without washing.
	15. Rinse + Spin	For rinsing and spinning items.
	16. Spin + Drain	For spinning and draining water from items.

Special Features

- **Push & Go:** This program simplifies daily laundry by automatically setting the optimal wash and dry cycle for mixed loads, taking the guesswork out of selecting settings. Simply load your laundry and press the "Push & Go" button.
- **Quick Wash and Dry:** The appliance offers a 45-minute quick wash and dry program, ideal for small loads that need to be cleaned and dried rapidly.
- **Sensor Drying:** This feature automatically detects the moisture level in your clothes and stops the drying cycle once the desired dryness is achieved, preventing over-drying and protecting your fabrics.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washer dryer.

- **Cleaning the Detergent Dispenser:** Periodically remove and clean the detergent dispenser drawer to prevent residue buildup.
- **Cleaning the Drum:** Run a maintenance wash (e.g., a hot wash with no laundry and a descaling agent) regularly to keep the drum clean and free of odors.
- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Checking the Filter:** Refer to the full manual for instructions on how to access and clean the pump filter, which should be done periodically.

TROUBLESHOOTING

If you encounter issues with your appliance, consult the following table for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Appliance does not start	Not plugged in; door not closed properly; power outage.	Check power connection; ensure door is latched; check household fuse/breaker.
Excessive noise/vibration	Transit bolts not removed; appliance not level; unbalanced load.	Ensure transit bolts are removed; adjust feet to level appliance; redistribute laundry in drum.
Water not draining	Drain hose kinked or blocked; pump filter clogged.	Check drain hose for kinks; clean pump filter (refer to full manual).
Clothes not drying properly	Overloaded; wrong program selected; lint filter clogged.	Reduce load size; select appropriate drying program; clean lint filter (if applicable).

SPECIFICATIONS

Feature	Detail
Model Number	BDE107625XWUKN
Dimensions (H x W x D)	850mm x 595mm x 605mm
Wash Capacity	10 kg
Drying Capacity	7 kg
Maximum Spin Speed	1600 RPM
Noise Rating	80dB
Energy Rating	E
Drum Material	Stainless Steel
Controls Type	Push Button, Rotary Dial
Included Components	Power Cord, Manual, Fill Hose, Drain Hose

WARRANTY AND SUPPORT

Your Indesit Washer Dryer comes with a **10-year parts guarantee**, providing peace of mind regarding the durability of key components. For specific terms and conditions, please refer to the warranty card included with your appliance or visit the official Indesit website.

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Have your model number (BDE107625XWUKN) and serial number ready when contacting support.

You can find contact information for your region on the official Indesit website or in the documentation provided with your purchase.