



Manuals.plus /

- › Shocknshop /
- › Shocknshop Digital Sports Watch User Manual

## Shocknshop WCH79

# Shocknshop Digital Sports Watch User Manual

Model: WCH79

## 1. INTRODUCTION

---

Thank you for purchasing the Shocknshop Digital Sports Watch, Model WCH79. This manual provides detailed instructions for setting up, operating, and maintaining your watch. Please read this manual carefully before using the product to ensure proper function and longevity.



Figure 1: Front view of the Shocknshop Digital Sports Watch.

## 2. PRODUCT OVERVIEW

---

The Shocknshop Digital Sports Watch WCH79 features a black dial, silicone band, and multiple digital functions designed for daily use and sports activities. Familiarize yourself with the watch's components and buttons.

# Watch Function Show



Figure 2: Watch button layout and functions.

## 2.1 Button Functions

- **MODE Button (M):** Used to cycle through different modes (Time, Alarm, Stopwatch, Countdown).
- **SET/EL Button (L):** Used to enter setting mode and activate the EL (Electro-Luminescent) backlight.
- **START/LAP/+ Button (S):** Used to start/stop functions, increment values during setting, or record laps.
- **STOP/RESET Button (R):** Used to stop functions, reset values, or confirm settings.

## 2.2 Display Features

- **Digital Time Display:** Shows hours, minutes, and seconds.
- **Date/Week Display:** Shows the current date and day of the week.
- **Alarm Indicator:** Icon appears when the alarm is active.
- **Hourly Chime Indicator:** Icon appears when the hourly chime is active.
- **EL Backlight:** Illuminates the display for visibility in low light conditions.

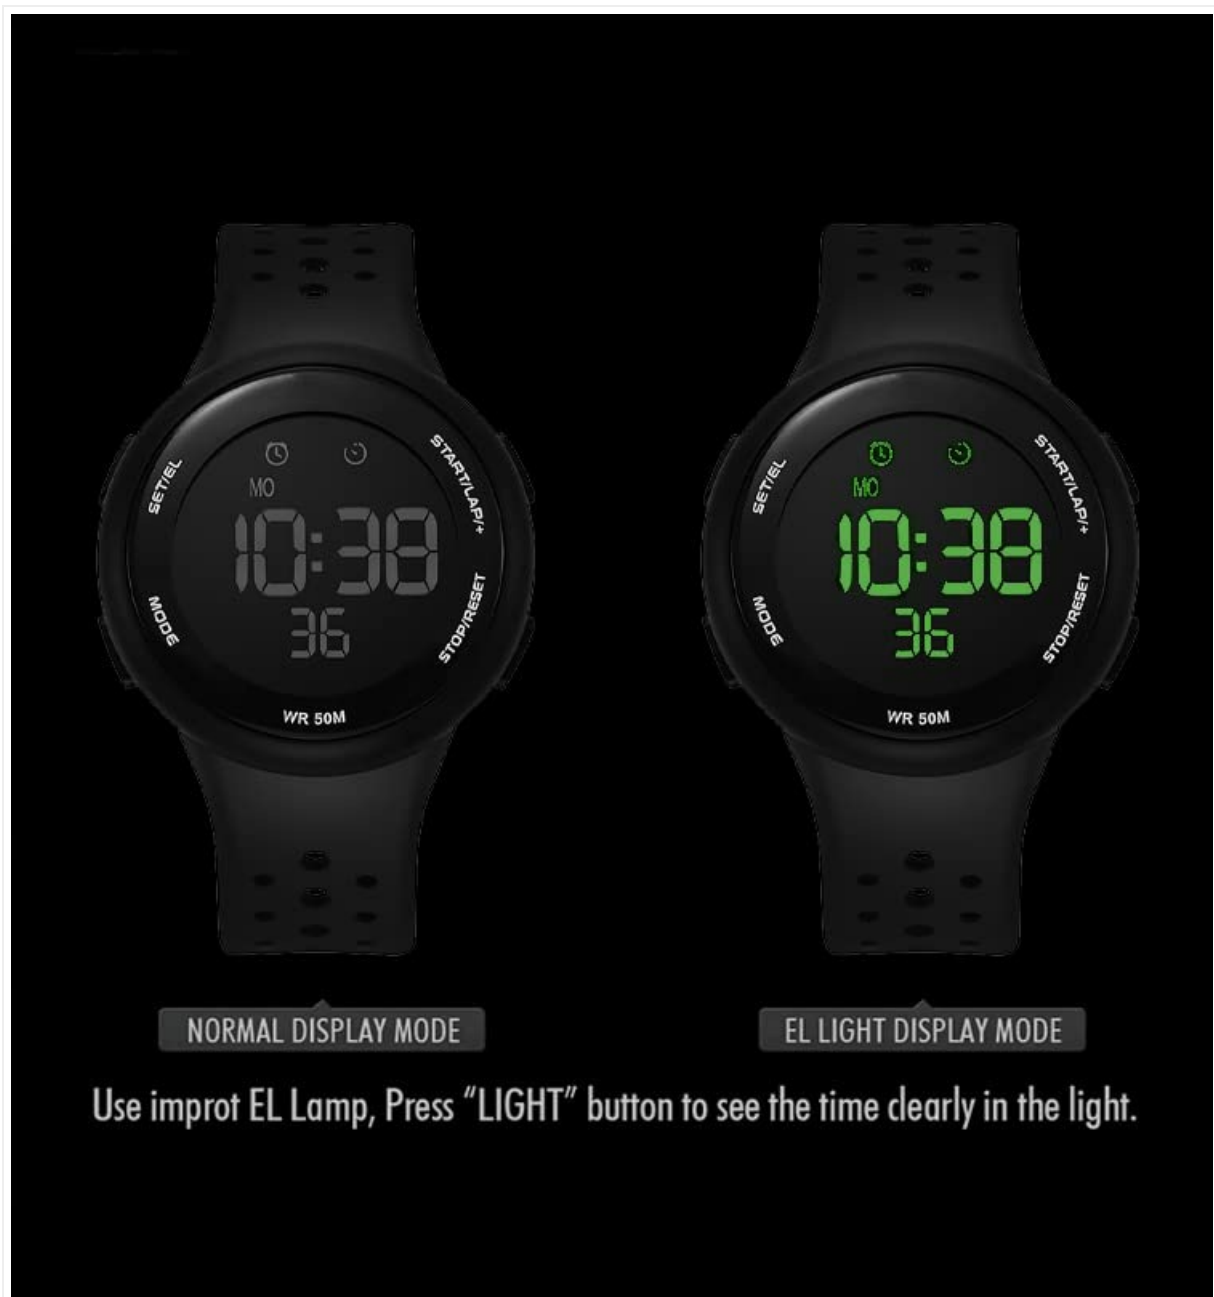


Figure 3: Normal display mode versus EL light display mode.

## 3. INITIAL SETUP AND TIME SETTING

---

### 3.1 Power On

The watch is typically ready for use out of the box. If the display is blank, the battery may need to be installed or activated. Refer to the "Maintenance" section for battery replacement instructions.

### 3.2 Setting Time and Date

1. From the normal time display, press and hold the **SET/EL** button (L) for a few seconds until the seconds digits start flashing. This indicates you are in setting mode.
2. Press the **MODE** button (M) to cycle through the setting items in the following order: Seconds → Hours → Minutes → Year → Month → Day.
3. Use the **START/LAP/+** button (S) to increase the flashing value.
4. Use the **STOP/RESET** button (R) to decrease the flashing value (if applicable) or to reset seconds to zero.
5. Once all settings are adjusted, press the **SET/EL** button (L) again to exit the setting mode and save your

changes.

### 3.3 12/24 Hour Format

While in time setting mode (seconds flashing), press the **START/LAP/+** button (S) to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

## 4. OPERATING INSTRUCTIONS

---

Press the **MODE** button (M) to navigate through the different operational modes of the watch:

- Time Mode (Default)
- Alarm Mode
- Stopwatch Mode
- Countdown Timer Mode

### 4.1 Using the Alarm

1. From Time Mode, press the **MODE** button (M) once to enter Alarm Mode.
2. Press and hold the **SET/EL** button (L) until the alarm hour digits flash.
3. Press the **MODE** button (M) to select between hour and minute settings.
4. Use the **START/LAP/+** button (S) to adjust the flashing value.
5. Press the **SET/EL** button (L) to confirm and exit alarm setting.
6. To turn the alarm ON/OFF, in Alarm Mode, press the **START/LAP/+** button (S). An alarm icon will appear/disappear on the display.

### 4.2 Using the Stopwatch

1. From Time Mode, press the **MODE** button (M) twice to enter Stopwatch Mode. The display will show 00:00:00.
2. Press the **START/LAP/+** button (S) to start the stopwatch.
3. Press the **START/LAP/+** button (S) again to pause the stopwatch.
4. Press the **STOP/RESET** button (R) to reset the stopwatch to zero.
5. To record lap times (if supported), press the **START/LAP/+** button (S) while the stopwatch is running. The lap time will be displayed briefly. Press **START/LAP/+** again to return to the running stopwatch.

### 4.3 Using the Countdown Timer

1. From Time Mode, press the **MODE** button (M) three times to enter Countdown Timer Mode.
2. Press and hold the **SET/EL** button (L) until the countdown hour digits flash.
3. Press the **MODE** button (M) to select between hour, minute, and second settings.
4. Use the **START/LAP/+** button (S) to adjust the flashing value.
5. Press the **SET/EL** button (L) to confirm and exit countdown setting.
6. Press the **START/LAP/+** button (S) to start the countdown.
7. Press the **START/LAP/+** button (S) again to pause the countdown.
8. Press the **STOP/RESET** button (R) to reset the countdown to the preset time.
9. When the countdown reaches zero, an alarm will sound.

### 4.4 Activating the EL Backlight

In any mode, press the **SET/EL** button (L) briefly to activate the EL backlight. The backlight will illuminate the

display for a few seconds, allowing for visibility in dark conditions.

## 5. MAINTENANCE AND CARE

---

### 5.1 Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Do not use chemical cleaners, abrasive materials, or solvents, as these can damage the watch's finish and internal components.

### 5.2 Water Resistance

This watch is designed with a certain level of water resistance (WR 50M). This means it is suitable for short periods of recreational swimming, but not for diving or prolonged submersion. Do not operate buttons while the watch is wet or submerged, as this can compromise the water seal.

### 5.3 Battery Replacement

The watch uses a Silver Oxide battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance. If replacing yourself, carefully open the back case, replace the battery with the correct type (e.g., CR2025 or equivalent), and ensure the gasket is properly seated before closing the case tightly.

*Note: Improper battery replacement can void the warranty and damage the watch.*

### 5.4 Storage

When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Setting Time and Date" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode (unlikely for this model) or internal issue.	Try removing and reinserting the battery (if comfortable). If issue persists, contact customer support.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, damaged seal).	Immediately take the watch to a qualified technician for repair to prevent further damage. Do not attempt to dry it yourself.

## 7. SPECIFICATIONS

---

<b>Brand</b>	Shocknshop
<b>Model Number</b>	WCH79
<b>Display Type</b>	Digital, LED Display
<b>Movement</b>	Digital Movement
<b>Dial Color</b>	Black
<b>Dial Material</b>	Hard Plastic
<b>Dial Shape</b>	Round
<b>Band Material</b>	Silicone
<b>Strap Color</b>	Black
<b>Strap Width</b>	22 MM
<b>Case Diameter</b>	45 MM
<b>Water Resistance</b>	WR 50M
<b>Special Features</b>	Count Down, Crono (Stopwatch), Double Time, EL Light, Alarm
<b>Battery Type</b>	Silver Oxide
<b>Average Battery Life</b>	1 Year
<b>Item Weight</b>	100 g
<b>Product Dimensions</b>	5 x 5 x 5 cm
<b>Included Components</b>	User Manual
<b>Country of Origin</b>	India

*Note: Specifications are subject to change without prior notice.*

## 8. WARRANTY AND SUPPORT

---

### 8.1 Warranty Information

The Shocknshop Digital Sports Watch WCH79 comes with a **6-month warranty** covering manufacturing defects only. This warranty does not cover damage caused by misuse, accidents, unauthorized repairs, normal wear and tear, or battery depletion.

### 8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Shocknshop customer support through the retailer where you purchased the product or visit the official Shocknshop store on Amazon:

Shocknshop Official Store on Amazon.in

Please have your product model number (WCH79) and purchase details ready when contacting support.

