

Manuals.plus /

- › Bosch /
- › Bosch ErgoMaster Series 4 Hand Blender MSM4W210 Instruction Manual

Bosch MSM4W210

Bosch ErgoMaster Series 4 Hand Blender MSM4W210 Instruction Manual

Model: MSM4W210

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Bosch ErgoMaster Series 4 Hand Blender, model MSM4W210. Please read these instructions carefully before first use and keep them for future reference.

The Bosch ErgoMaster Series 4 hand blender is designed for blending, mixing, and pureeing various food items. Its powerful 600-watt motor and QuattroBlade system ensure efficient processing of even tough ingredients.





Figure 1: Bosch ErgoMaster Series 4 Hand Blender MSM4W210 and included mixing beaker.

2. PRODUCT COMPONENTS

The Bosch ErgoMaster Series 4 Hand Blender MSM4W210 includes the following main components:

- **Motor Unit:** The main body containing the 600-watt motor and speed control.
- **Blender Foot (Stainless Steel):** Detachable shaft with the QuattroBlade system.
- **Mixing Beaker:** Graduated, BPA-free beaker for blending and measuring.



Figure 2: The detachable blender foot for easy assembly and cleaning.

3. SETUP AND ASSEMBLY

Before using your hand blender for the first time, ensure all packaging materials are removed and components are clean.

1. **Attach the Blender Foot:** Align the blender foot with the motor unit and twist until it locks securely into place. You should hear a click.
2. **Connect to Power:** Plug the appliance into a suitable power outlet.
3. **Unlock (if applicable):** Some models may feature a safety unlock button. Press and hold the unlock button (if present) before pressing the speed control lever.



Figure 3: Detail of the safety unlock button on the handle.

4. OPERATING INSTRUCTIONS

The ErgoMaster Series 4 hand blender features intuitive speed control for precise blending.

1. **Prepare Ingredients:** Cut larger ingredients into smaller pieces to facilitate blending. Place ingredients into the mixing beaker or a suitable pot.
2. **Immerse Blender:** Submerge the blender foot into the ingredients before switching on the appliance to prevent splashing.
3. **Activate and Control Speed:**
 - Press and hold the unlock button (if present).
 - Press the speed control lever. The blending speed is directly proportional to how firmly you press the lever. Press gently for lower speeds and more firmly for higher speeds.
4. **Blending Technique:** Move the blender foot up and down gently to ensure all ingredients are processed evenly. The unique bell design helps reduce splashes.
5. **Switch Off:** Release the speed control lever to stop the appliance.



Figure 4: Using the hand blender to mix ingredients in a pot.



Figure 5: Blending pesto in the graduated mixing beaker.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your hand blender.

1. **Disconnect Power:** Always unplug the appliance from the power outlet before cleaning.
2. **Detach Blender Foot:** Twist and remove the blender foot from the motor unit.
3. **Clean Blender Foot:** Rinse the blender foot under running water immediately after use. The stainless steel blender foot is also dishwasher-safe. Ensure no food particles remain around the blades.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. **Clean Mixing Beaker:** The mixing beaker can be washed by hand with warm soapy water or placed in the dishwasher.
6. **Storage:** Store the cleaned and dried appliance in a safe place, away from children.



Figure 6: Cleaning the blender foot by rinsing and in a dishwasher.

6. TROUBLESHOOTING

If you encounter issues with your hand blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not switch on.	Not plugged in, power outage, safety lock engaged.	Check power connection. Ensure the safety unlock button is pressed before operating.
Blender is not mixing effectively.	Ingredients too large, insufficient liquid, blender foot not fully immersed.	Cut ingredients smaller. Add more liquid if necessary. Ensure blender foot is fully submerged.
Excessive splashing during operation.	Blender switched on before immersion, or lifted too high during operation.	Always immerse the blender foot before switching on. Keep the bell housing submerged during blending.

7. SPECIFICATIONS

Technical specifications for the Bosch ErgoMaster Series 4 Hand Blender MSM4W210:

Feature	Detail
Model Number	MSM4W210
Brand	Bosch
Power	600 Watts
Voltage	220.0 V
Material	Plastic, Stainless Steel
Dimensions (L x W x H)	7.8 x 5.7 x 38.5 cm
Weight	1 Kilogram
Capacity (Mixing Beaker)	1 Litre
Noise Level	75 dB
Special Features	Variable speed control, QuattroBlade system, Ceramic gear, Dishwasher-safe parts (blender foot, beaker)



Figure 7: Product dimensions: 385mm height, 80mm top width, 60mm base width.

8. WARRANTY AND SUPPORT

Bosch provides a 10-year motor warranty for the ErgoMaster Series 4 Hand Blender, ensuring long-term reliability.



Figure 8: Bosch ErgoMaster Series 4 Hand Blender with 10-year motor warranty.

For detailed warranty conditions and customer support, please refer to the official Bosch website or contact your local Bosch service center.

Spare parts availability: 7 Years.

