



Manuals.plus /

› QNIGLO /

› QNIGLO Q168Plus Kids Walkie Talkie 3-Pack Rechargeable User Manual

## QNIGLO Q168P

# QNIGLO Q168Plus Kids Walkie Talkie User Manual

Model: **Q168P** | Brand: **QNIGLO**

Your guide to clear and reliable two-way communication for outdoor adventures.

## 1. INTRODUCTION

The QNIGLO Q168Plus Kids Walkie Talkie set provides a fun and effective way for children to communicate over distances. Designed for ease of use and durability, these walkie-talkies feature clear voice transmission, noise reduction technology, and a rechargeable battery for extended play. They are ideal for various outdoor activities such as hiking, camping, and general play, fostering communication and teamwork among children.



Image: The QNIGLO Q168Plus Walkie Talkie set, showcasing the three distinct color patterns and the included USB charging cables.

## 2. SETUP AND FIRST USE

### 2.1 Unboxing and Initial Charge

Upon receiving your QNIGLO Q168Plus Walkie Talkie set, carefully remove all items from the packaging. The box typically contains three walkie-talkies, rechargeable batteries (pre-installed or separate), and USB charging cables. Before first use, ensure the walkie-talkies are fully charged.

- Connect the provided USB charging cable to the charging port on each walkie-talkie.
- Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
- The charging indicator (usually on the display) will show charging status. A full charge typically takes a few hours.



Image: The QNIGLO Q168Plus Walkie Talkie set with its packaging, illustrating the contents you will find upon unboxing.

## 2.2 Component Identification

Familiarize yourself with the main components and buttons of the walkie-talkie:

# Features

Weight:0.1(kg)

Size: 55\*25\*145mm(L\*M\*H)



Image: Detailed diagram showing the various parts and functions of the QNIGLO Q168Plus Walkie Talkie.

- **Antenna:** For signal transmission and reception.
- **PTT (Push-to-Talk) Button:** Press and hold to transmit your voice.
- **Power/Menu Button:** Long press to turn on/off, short press to access menu options.
- **UP/DOWN Buttons:** Navigate menu options and adjust settings (e.g., channel, volume).
- **Speaker & Microphone:** For audio output and input.
- **LED Display:** Shows channel, battery level, and other indicators.
- **Call/Lock Button:** Initiates a call tone or locks the keypad.
- **Scan/Monitor Button:** Scans for active channels or monitors current channel.
- **USB Charging Port:** For recharging the internal battery.
- **Earphone Jack:** For connecting an external earphone (not included).

## 3. OPERATING INSTRUCTIONS

### 3.1 Power On/Off

To turn the walkie-talkie on or off, press and hold the **Power/Menu** button until the display lights up or turns off.

### 3.2 Channel Selection

The QNIGLO Q168Plus features 8 PMR channels. For communication, all walkie-talkies must be set to the same channel.

1. Short press the **Power/Menu** button to enter the menu. The channel number will flash.
2. Use the **UP** or **DOWN** buttons to select your desired channel (1-8).
3. Short press the **Power/Menu** button again to confirm the channel and exit the menu.

### 3.3 Transmitting and Receiving

To speak, press and hold the **PTT (Push-to-Talk)** button. Speak clearly into the microphone. Release the PTT button to listen for a response. Ensure you are on the same channel as the person you wish to communicate with.



Image: Children demonstrating the use of the walkie-talkies for communication over a distance, highlighting the effective range.

### 3.4 VOX Function (Voice Operated Exchange)

The VOX function allows for hands-free communication. When activated, the walkie-talkie will automatically transmit when it detects your voice, without needing to press the PTT button.

1. Short press the **Power/Menu** button multiple times until "VOX" appears on the display.
2. Use the **UP** or **DOWN** buttons to select the VOX sensitivity level (e.g., 1-3, with 3 being most sensitive).
3. Short press the **Power/Menu** button to confirm and exit.



Image: Children using the walkie-talkies during outdoor activities, demonstrating the convenience of the VOX hands-free feature.

### 3.5 Keypad Lock

To prevent accidental button presses, you can lock the keypad. Press and hold the **Call/Lock** button until a lock icon appears on the display. Repeat the action to unlock.

### 3.6 Call Tone

To send a call tone to other walkie-talkies on the same channel, short press the **Call/Lock** button.

## 4. MAINTENANCE AND CARE

### 4.1 Charging the Battery

The QNIGLO Q168Plus walkie-talkies are equipped with a rechargeable 1100mAh Lithium-Polymer battery. When the battery is low, the device will emit a warning beep. Use the provided USB cable to charge.

- Connect the USB cable to the walkie-talkie's charging port.
- Connect the other end to a USB power source (e.g., wall adapter, power bank, computer).
- The display will indicate charging status. A full charge provides approximately 16 hours of talk time and 5 days of standby.

# 16 hours talking 5 days standby

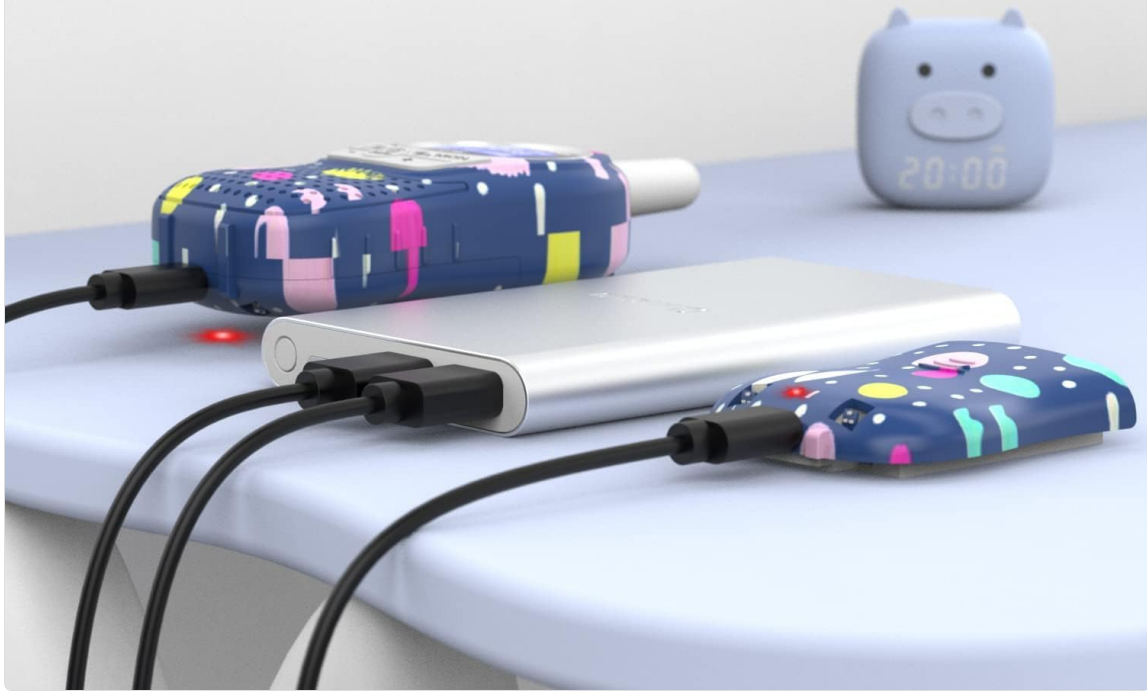


Image: Walkie-talkies connected to a power bank for charging, highlighting their long battery life.

## 4.2 Cleaning and Storage

- Clean the walkie-talkies with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- The device is not waterproof; avoid exposure to water or excessive moisture.
- Store in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the walkie-talkie fully.
Cannot communicate with other units	Units are on different channels. Out of range.	Ensure all units are on the same channel. Move closer to the other unit.
Poor sound quality / Static	Weak signal. Interference. Low battery.	Move to an open area. Avoid obstacles. Charge the battery.
VOX not working	VOX sensitivity too low.	Adjust VOX sensitivity to a higher level in the menu.
Keypad unresponsive	Keypad is locked.	Press and hold the <b>Call/Lock</b> button to unlock.

## 6. PRODUCT SPECIFICATIONS

- **Model:** Q168P
- **Brand:** QNIGLO
- **Channels:** 8 PMR Channels
- **Max. Talk Range:** Up to 3 km (2 miles) in open areas
- **Battery:** 1100mAh Lithium-Polymer (rechargeable)
- **Battery Life:** Approx. 16 hours talk time, 5 days standby
- **Dimensions:** 5.5 x 2.5 x 14.5 cm (2.17 x 0.98 x 5.71 inches)
- **Weight:** 100 grams (per unit)
- **Input Voltage:** 5 Volts (DC)
- **Special Features:** Noise reduction, Rechargeable, VOX (Voice Operated Exchange)
- **Water Resistance:** Not waterproof

## 7. WARRANTY AND SUPPORT

QNIGLO products are designed for quality and reliability. For specific warranty information, please refer to the warranty card included with your product or visit the official QNIGLO website. If you encounter any issues not covered in this manual, or require further assistance, please contact QNIGLO customer support through their official channels.

For the latest support information and FAQs, please visit the QNIGLO store on Amazon or their official brand website.

### Contact Information:

- **Brand Store:** QNIGLO Amazon Store
- Refer to product packaging for direct customer service contact details.

