



Manuals.plus /

› LINSY HOME /

› LINSY HOME Farmhouse End Table with Charging Station (Model LH518J2-C) Instruction Manual

LINSY HOME LH518J2-C

LINSY HOME Farmhouse End Table with Charging Station

MODEL: LH518J2-C

Brand: LINSY HOME

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your LINSY HOME Farmhouse End Table with Charging Station. This versatile piece of furniture is designed to enhance your living space with its farmhouse aesthetic and practical features, including integrated charging capabilities and ample storage.



Image: The LINSY HOME Farmhouse End Table, featuring a washed grey and brown finish, positioned beside a light-colored sofa. The table top displays a vase with flowers, books, and a smartphone charging.

Product Features

- **Integrated Charging Station:** Equipped with a safety switch, 3 standard outlets (125V/12A), and 2 USB ports (5V/2.1A) to keep your devices powered. Thoughtfully designed grooves on the tabletop manage cables for a tidy appearance.
- **Detachable Drawer Holder:** The top drawer includes a removable holder with dedicated spots for remote controls and cups, preventing spills and keeping essentials organized. This holder can be removed to utilize the full drawer space.
- **Versatile Storage:** Features a storage cabinet with a glass door and an adjustable shelf, offering flexible space for books, decor, or other items. An additional back shelf provides extra display or storage options.
- **Durable Construction:** Crafted from sturdy engineered wood with a waterproof surface for easy cleaning and extended service life. Metal slides ensure smooth drawer operation, and robust table legs provide stability.
- **Farmhouse Design:** Blends farmhouse and modern styles, adding personality and charm to various home decors.



Image: An overhead view of the end table with the top panel slid open, revealing the hidden charging station with multiple outlets and USB ports. A tablet and smartphone are shown charging on the table surface.



Image: The top drawer of the end table is pulled out, showcasing a detachable wooden insert with two circular cutouts for cups and a rectangular slot for remote controls. A glass of water and a remote are placed in the slots.

Setup and Assembly

Your LINSY HOME End Table is designed for straightforward assembly. All necessary components are clearly labeled and individually packaged. An assembly guide is included in the packaging. For a visual step-by-step walkthrough, please refer to the official instruction video below.

Your browser does not support the video tag.

Video: Official instruction video demonstrating the assembly process for the LINSY HOME Farmhouse End Table (Model LH518J1J2). This video provides a detailed visual guide for putting the table together.

Assembly Tips:

- Carefully identify all parts and hardware using the provided labels before starting.
- The included screwdriver is magnetic, which can be helpful for handling small screws.
- When installing drawer slides, note that they need to be separated. Look for a small plastic spring lever that allows you to detach the inner and outer parts of the slide.
- Extra hardware parts are included for your convenience.

- Assembly can be time-consuming; allocate sufficient time and follow each step carefully.

Operating Instructions

Familiarize yourself with the table's functionalities for optimal use.

- **Using the Charging Station:** To access the charging station, gently slide open the top panel. Plug your devices into the 3 outlets or 2 USB ports. Ensure the safety switch is in the 'ON' position. When finished, slide the panel back to conceal the station and cables.
- **Utilizing the Top Drawer:** Pull the drawer open to access the detachable holder. Use the designated slots for cups and remote controls. To use the full drawer space for larger items, simply lift and remove the detachable holder.
- **Accessing the Storage Cabinet:** Open the glass door to reveal the interior shelves. The shelf height can be adjusted to accommodate items of various sizes.

Maintenance

To ensure the longevity and appearance of your end table, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the waterproof surface with a damp cloth. Avoid using harsh chemical cleaners that may damage the finish.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Tighten if necessary to maintain stability.
- **Spills:** Promptly wipe up any spills to prevent potential damage to the wood finish.

Troubleshooting

If you encounter any issues with your end table, please consider the following:

- **Assembly Difficulties:** If you find assembly challenging, re-examine the assembly guide and the instruction video. Ensure all parts are correctly oriented and fastened.
- **Missing or Damaged Parts:** In the event of missing or damaged components, please contact LINSY HOME customer support for assistance.
- **Drawer Operation:** If a drawer is not sliding smoothly, ensure the drawer slides are correctly installed and lubricated if needed. Check for any obstructions.
- **Charging Station Not Working:** Verify that the power cord is securely plugged into a wall outlet and that the safety switch on the charging station is in the 'ON' position.

Specifications

Product size

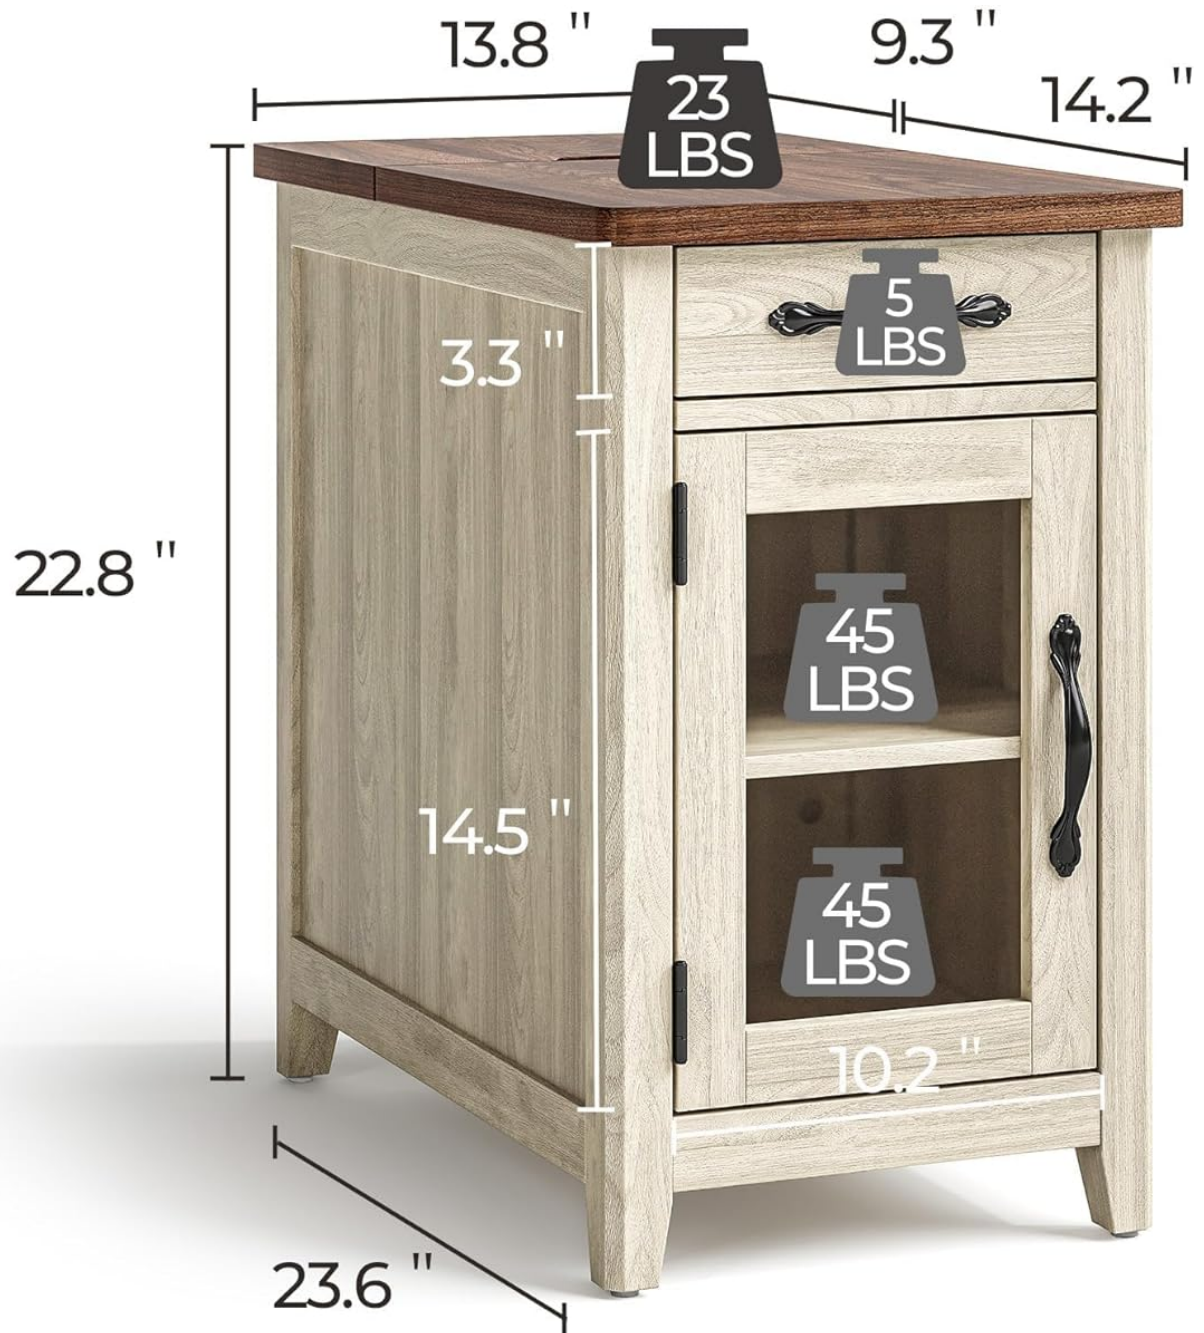


Image: A diagram illustrating the product dimensions (23.6"D x 13.8"W x 22.8"H) and weight capacities for the top (23 lbs), drawer (5 lbs), and shelves (45 lbs each).

Attribute	Detail
Brand	LINSY HOME
Model Name	LH518J2-C
Product Dimensions	23.5"D x 13.8"W x 22.8"H
Item Weight	40 Pounds
Maximum Weight Recommendation	100 Pounds (total)
Frame Material	Engineered Wood
Color	Washed Grey and Brown
Table Design	End Table
Style Name	Farmhouse
Furniture Finish	Waterproof
Handle Material	Metal
Number of Drawers	1
Number of Doors	1
Recommended Uses	Storage
Indoor Outdoor Usage	Indoor
Tools Recommended For Assembly	Screw Driver

Safety Information

Please observe the following safety guidelines:

- **Electrical Safety:** Ensure the charging station is properly connected to a functioning power outlet. Do not overload the outlets. Disconnect power when not in use or during cleaning.
- **Weight Limit:** Do not exceed the maximum weight recommendations for the table top (23 lbs), drawer (5 lbs), and shelves (45 lbs each) to prevent damage or injury. The total weight supported is 118 lbs.
- **Assembly Cautions:** Follow all assembly instructions carefully. Keep small parts away from children. Ensure the table is stable before placing items on it.

Warranty and Support

For warranty information, customer support, or to purchase replacement parts, please visit the official LINSY HOME website or contact their customer service department. Keep your purchase receipt for any warranty claims.