

[Manuals.plus](#) /

> [Goshyda](#) /

> Goshyda Portable Multimedia 1080P Projector User Manual (Model Goshyda89pkg17g0)

Goshyda Goshyda89pkg17g0

Goshyda Portable Multimedia 1080P Projector

Model: Goshyda89pkg17g0

1. INTRODUCTION

Thank you for choosing the Goshyda Portable Multimedia 1080P Projector. This compact and versatile device is designed to provide a personal cinema experience, supporting various multimedia inputs for entertainment, presentations, and more. Please read this manual carefully before using the projector to ensure proper operation and to maximize its lifespan.



Image 1.1: The Goshyda YG300 Mini Portable Projector in a home entertainment setting.

2. SAFETY INFORMATION

- **Power Supply:** Use only the specified 5V 2A power adapter or a compatible power bank. Incorrect voltage may damage the device.
- **Ventilation:** Do not block the ventilation openings. Ensure adequate airflow around the projector to prevent overheating.
- **Environment:** Avoid exposing the projector to water, moisture, dust, or extreme temperatures. Operate in a clean, dry environment.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Disassembly:** Do not attempt to disassemble or repair the projector yourself. Refer all servicing to qualified personnel.
- **Eye Protection:** Do not look directly into the projector lens when the lamp is on.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact your retailer.

- Goshyda Portable Projector
- Remote Control
- AV Cable
- Power Adapter
- User Manual (this document)



Image 3.1: Included accessories with the Goshyda Portable Projector.

4. PRODUCT OVERVIEW

4.1. Projector Features

- **1080P Resolution Support:** Delivers clear and detailed images.
- **Compact and Portable Design:** Weighing approximately 290g, it is easy to carry.
- **Multi-Port Connectivity:** Includes USB, HDMI, AV, memory card slot, and audio output.
- **Built-in Speakers:** Provides integrated audio for convenience.
- **Flexible Power:** Can be powered by a 5V 2A wall charger or power bank.



Image 4.1: Visual representation of the projector's main features.

4.2. Projector Ports and Controls

Familiarize yourself with the various ports and controls on your projector.

- **Lens:** Front-facing projection lens.
- **Focus Ring:** Adjusts image clarity.
- **Power Input (DC IN):** Connects to the 5V 2A power adapter.
- **HDMI Port:** For connecting devices via HDMI cable.
- **USB Port:** For connecting USB storage devices.
- **AV Port:** For connecting devices via AV cable.
- **MicroSD Card Slot:** For inserting a memory card.
- **Audio Output:** For connecting external speakers or headphones.
- **Control Buttons:** On the top panel for basic navigation and selection.

Size: Approx. 12x8.5x4.6cm / 4.7x3.3x1.8in



Image 4.2: Side view of the projector highlighting its connectivity ports.



Image 4.3: Close-up of the projector lens.

5. SETUP

5.1. Power Connection

1. Connect the provided power adapter to the DC IN port on the projector.
2. Plug the power adapter into a standard electrical outlet.
3. Alternatively, for portable use, connect a 5V 2A power bank to the DC IN port.

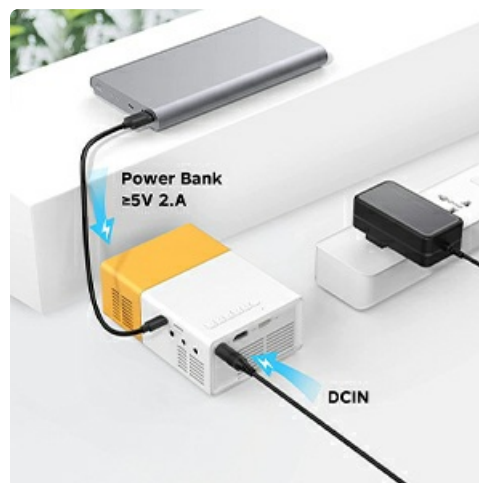


Image 5.1: Powering the projector via wall adapter or power bank.

5.2. Placement and Projection

Place the projector on a stable, flat surface. The optimal projection distance is between 1 to 2.5 meters, allowing for a screen size of up to 60 inches.

- For a 24-inch screen, place the projector approximately 0.8 meters away.
- For a 47-inch screen, place the projector approximately 1.2 meters away.

- For a 60-inch screen, place the projector approximately 1.6 meters away.

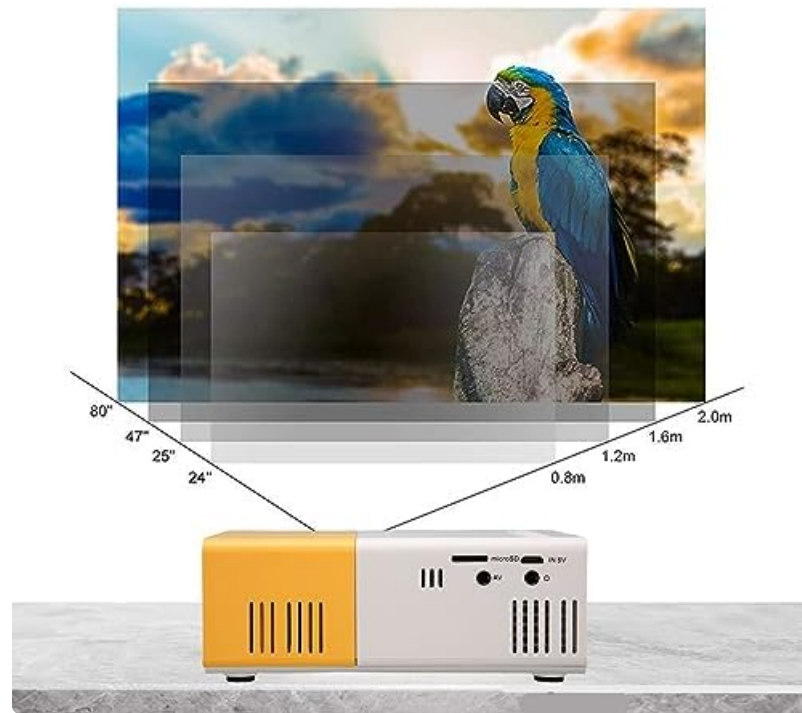


Image 5.2: Projection distance guidelines for various screen sizes. Note: Maximum recommended projection size is 60 inches.

5.3. Focus Adjustment

After placing the projector and powering it on, rotate the focus ring located around the lens until the projected image appears clear and sharp.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- **Power On:** Press the power button on the projector or the remote control.
- **Power Off:** Press the power button again. The projector will shut down.

6.2. Input Source Selection

Use the 'Source' button on the remote control or the projector's control panel to cycle through available input sources (HDMI, USB, AV, MicroSD).

6.3. Menu Navigation

Use the arrow buttons on the remote control or projector to navigate through menus. Press 'OK' or 'Enter' to confirm selections. Use the 'Return' or 'Back' button to go back to the previous menu.

7. CONNECTIVITY

The projector offers multiple connectivity options for various devices.



Image 7.1: Connectivity options for the Goshyda projector.

7.1. HDMI Connection

Connect devices such as laptops, TV Sticks, game consoles (e.g., for Xbox One), or Blu-ray players using an HDMI cable. Select 'HDMI' as the input source.

7.2. USB Connection

Insert a USB flash drive into the USB port to play media files directly. Select 'USB' as the input source and navigate through your files.

7.3. AV Connection

Use the provided AV cable to connect older devices like DVD players. Select 'AV' as the input source.

7.4. Smartphone/Tablet Connection

To connect directly to your smartphone or tablet, you will need an appropriate adapter (e.g., Micro USB to HDMI, Type-C to HDMI, or a dedicated HD multimedia interface device), depending on your device's operating system (OS X or Android) and available ports. These adapters are sold separately.

7.5. Audio Output

Connect external speakers or headphones to the audio output port for enhanced sound.

8. MAINTENANCE

- **Lens Cleaning:** Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Do not use abrasive materials or harsh chemicals.
- **Exterior Cleaning:** Wipe the projector's exterior with a soft, dry cloth.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and dust.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty; insufficient power supply.	Ensure the 5V 2A power adapter is securely connected and plugged into a working outlet. Try a different power source or power bank.
No image	Incorrect input source selected; cable not connected properly; device not outputting signal.	Select the correct input source (HDMI, USB, AV). Check all cable connections. Ensure the connected device is powered on and outputting a signal.
Image is blurry	Focus not adjusted; projector too close/far from screen.	Rotate the focus ring to sharpen the image. Adjust the projection distance within the recommended range (1-2.5m).
No sound	Volume too low or muted; external speakers not connected; audio format not supported.	Increase the volume on the projector and the source device. Check if external speakers are properly connected. Ensure the audio format is supported.

10. SPECIFICATIONS

Feature	Detail
Brand	Goshyda
Model Number	Goshyda89pkbg17g0
Display Resolution	1920 x 1080 (1080P Support)
Brightness	200 Lumens
Aspect Ratio	4:3
Projection Distance	1 - 2.5 meters
Projection Size	Up to 60 inches
Connectivity Technology	HDMI, USB, AV, MicroSD, Audio Out
Power Input	5V 2A
Display Type	LCD
Product Dimensions	12L x 8.5W x 4.6H cm (Approx. 4.7 x 3.3 x 1.8 inches)
Form Factor	Portable
Mounting Type	Table Mount

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer directly. Keep your proof of purchase for warranty claims.

