



Manuals.plus /

› Amposei /

› Amposei Farmhouse Rustic Wood Console Table (Model: B0BW376ZVT) Instruction Manual

Amposei B0BW376ZVT

Amposei Farmhouse Rustic Wood Console Table Instruction Manual

Model: B0BW376ZVT

INTRODUCTION

Thank you for purchasing the Amposei Farmhouse Rustic Wood Console Table. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The Amposei Farmhouse Rustic Wood Console Table, featuring a distressed antique black finish, four drawers, and an open bottom shelf, styled in an entryway.

SAFETY INFORMATION

Always assemble the table according to the provided instructions. Do not exceed the weight capacity of 110 lbs for the top and bottom shelves, and 44 lbs for the drawers. Ensure the table is stable and properly anchored to prevent tipping or collapse. It is recommended to anchor the table to a wall, especially if used in households with children or pets, as some users have noted potential wobbling when drawers are opened.

Keep all small parts and packaging materials away from children during assembly to prevent choking hazards. Use on a flat, stable surface.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Tabletop with integrated drawers (1)
- Legs (6)
- Bottom Shelf (1)
- Assembly Hardware (screws, washers, Allen wrench, etc.)

- Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

This console table is designed for straightforward assembly, typically requiring less than 20 minutes. All necessary hardware and a detailed instruction sheet are included in the package.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Legs to Tabletop:** Securely fasten the six legs to the designated points on the underside of the tabletop using the provided hardware. Ensure all connections are tight.
3. **Attach Bottom Shelf:** Connect the bottom shelf to the lower sections of the legs. Verify that the shelf is level and all fasteners are tightened.
4. **Insert Drawers:** Slide the four drawers into their respective compartments in the tabletop.
5. **Final Check:** Confirm all screws are tightened and the table is stable. If desired, attach the table to a wall using appropriate anchoring hardware (not included) for added stability.



Image: Technical drawing showing the dimensions of the console table: 63 inches (length), 13.3 inches (depth), and 31 inches (height). Drawer and shelf dimensions are also indicated.



Wood Knobs

MDF & Solid Wood
Construction

Image: Close-up views highlighting the wood knobs on the drawers and the MDF and solid wood construction of the table legs and base.

USAGE

The Amposei Console Table is designed for various uses in living rooms, entryways, hallways, or behind sofas. The tabletop and bottom shelf provide space for displaying decorative items, lamps, or books. The four integrated drawers offer concealed storage for smaller items such as keys, mail, or remote controls.

Ensure that items placed on the table do not exceed the specified weight capacities:

- **Tabletop:** 110 lbs
- **Bottom Shelf:** 110 lbs
- **Drawers:** 44 lbs (each)



Image: An angled view of the console table with its four drawers partially open, demonstrating the storage capability.

MAINTENANCE

To maintain the appearance and longevity of your console table, follow these care guidelines:

- **Cleaning:** Wipe surfaces with a soft, dry cloth. For stubborn marks, a slightly damp cloth followed immediately by a dry cloth can be used. Avoid abrasive cleaners or harsh chemicals, as these can damage the distressed finish.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Heat and Moisture:** Protect the surface from direct heat and excessive moisture. Use coasters under beverages and placemats under hot items.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.
- **Drawer Care:** The drawers are not on rails. To ensure smooth operation, avoid overloading them and pull them out gently.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table wobbles after assembly.	Loose connections; uneven floor; inherent design.	Ensure all screws are fully tightened. Place shims under legs if the floor is uneven. For enhanced stability, consider anchoring the table to a wall using appropriate hardware.
Drawers are difficult to open or close.	Overloaded drawers; misalignment; friction.	Reduce the weight in the drawers. Ensure drawers are inserted correctly and are not misaligned. Apply a small amount of furniture wax or silicone spray to the contact points for smoother operation.
Surface scratches or minor damage.	Impact; abrasive cleaning.	For minor scratches, a wood repair marker or furniture polish matching the antique black finish may help. Always use soft cloths for cleaning.

SPECIFICATIONS

Feature	Detail
Brand	Amposei
Model	B0BW376ZVT
Color	Antique Black
Product Dimensions (L x D x H)	63 inches x 13.3 inches x 31 inches
Material	MDF, Pine Legs (Engineered Wood, Solid Wood)
Weight Capacity (Top)	110 lbs
Weight Capacity (Shelf)	110 lbs
Weight Capacity (Drawers)	44 lbs (each)
Number of Drawers	4
Number of Shelves	1
Assembly Required	Yes (Partial)
Finish Type	Distressed

WARRANTY AND SUPPORT

For any issues encountered during or after installation, or for questions regarding your Amposei Farmhouse Rustic Wood Console Table, please do not hesitate to contact the seller, Atglus. They can provide assistance and support for your product.

Please refer to your purchase documentation for specific warranty details, as these may vary.

