

[Manuals.plus](#) /

› [Severin](#) /

› SEVERIN HV 7147 Handheld Vacuum Cleaner User Manual

Severin HV 7147

SEVERIN HV 7147 Handheld Vacuum Cleaner User Manual

1. INTRODUCTION

The SEVERIN HV 7147 is a versatile handheld vacuum cleaner designed for efficient cleaning of various surfaces. It can be comfortably converted into a practical floor vacuum using the extension tube and floor head. Featuring a powerful 18.5V lithium-ion battery, it offers extended runtime, a rotating turbo brush for effective dirt and pet hair removal, and a convenient LED light to illuminate hard-to-see dust particles. Its Wet & Dry function allows for effortless absorption of liquids. This manual provides detailed instructions for safe and effective use, maintenance, and troubleshooting.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- Do not immerse the appliance in water or other liquids.
- Do not vacuum burning or glowing ashes, sharp objects, or liquids other than those specified for the Wet & Dry function.
- Ensure the charging station is placed on a stable, level surface and connected to a suitable power outlet.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner without the dust container and filter properly installed.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- SEVERIN HV 7147 Handheld Vacuum Unit
- Extension Tube
- Floor Head
- Rotating Turbo Brush

- Flexible Crevice Tool with Car Cleaning Accessory
- Charging Station
- Wall Mount
- Carrying Bag
- Interchangeable Rubber Nozzle (for Wet & Dry function)





Figure 3.1: The SEVERIN HV 7147 handheld vacuum cleaner shown with its complete set of accessories, including the main unit, extension tube, floor head, various nozzles, and charging station.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your SEVERIN HV 7147 vacuum cleaner.

Bis zu 50 Minuten Akku-Laufzeit

**Mit rotierender Turbobürste
für mehr Saugleistung**



Figure 4.1: Front view of the handheld vacuum unit, highlighting the power button, LED indicator, and dust container.

Hochwertige Tragetasche zur Aufbewahrung aller Zubehörteile mit praktischem Reißverschluss und einer Schlaufe zum Aufhängen.



Figure 4.2: A close-up of the handheld unit, showing the integrated LED light for improved visibility during cleaning.

5. SETUP

5.1 Charging the Battery

Before first use, fully charge the vacuum cleaner. The powerful 18.5V lithium-ion battery provides up to 50 minutes of runtime in Eco mode.

1. Connect the charging station to a power outlet.
2. Place the handheld vacuum unit onto the charging station. Ensure it is securely seated.
3. The LED indicator on the unit will show the charging status. Once fully charged, the indicator will change.

Aufladestation mit Zubehör und Wandhalterung.



Figure 5.1: The handheld vacuum unit is shown charging on its wall-mounted station, demonstrating a convenient storage and charging solution.

5.2 Assembling for Floor Cleaning

To use the appliance as a floor vacuum:

1. Attach the extension tube firmly to the main handheld vacuum unit.
2. Connect the floor head to the other end of the extension tube until it clicks into place.



Figure 5.2: The SEVERIN HV 7147 assembled with the extension tube and floor head, ready for use as a stick vacuum.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the power button located on the handle to turn the vacuum cleaner on or off.

6.2 Dry Vacuuming

For general dry cleaning, select the appropriate attachment:

- **Standard Nozzle:** For everyday dust and debris on hard surfaces.
- **Rotating Turbo Brush:** Ideal for carpets, rugs, and upholstery to effectively remove pet hair and embedded dirt. The integrated LED light illuminates the cleaning path.
- **Flexible Crevice Tool:** For reaching narrow gaps, corners, and tight spaces, such as in car interiors.

**All-in-1 System:
Ideal für die
Reinigung von
Polstern, zur
Autoreinigung und
zur Entfernung von
Tierhaaren.**



Figure 6.1: The handheld vacuum unit equipped with the rotating turbo brush, effectively cleaning upholstery.

6.3 Wet Vacuuming

The Wet & Dry function allows for the absorption of liquids up to 150 ml.

1. Ensure the dust container is empty and clean before wet vacuuming.
2. Attach the interchangeable rubber nozzle to the handheld unit.
3. Carefully vacuum the liquid spill. Do not exceed the maximum liquid capacity of 150 ml.
4. Immediately after use, empty and clean the dust container and rubber nozzle.



Figure 6.2: The handheld vacuum unit with the rubber nozzle, demonstrating its capability to absorb liquid spills.

6.4 Car Cleaning

The included flexible crevice tool and car cleaning accessory are designed for thorough cleaning of vehicle interiors.

Lange Laufzeit von bis zu 50 Minuten im Eco-Modus dank leistungsstarkem 18,5 V Lithium-Ionen-Akku.



Figure 6.3: The handheld vacuum unit utilizing the crevice tool to clean hard-to-reach areas within a car interior.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Container


The dust container should be emptied regularly, especially when the MAX line is reached or suction power decreases.

1. Press the release button to detach the dust container from the handheld unit.
2. Open the dust container and empty its contents into a waste bin.
3. Reattach the dust container securely to the handheld unit.

SEVERIN

Inkl. LED-Beleuchtung

Inkl.
Wandhalterung
mit Ladestation

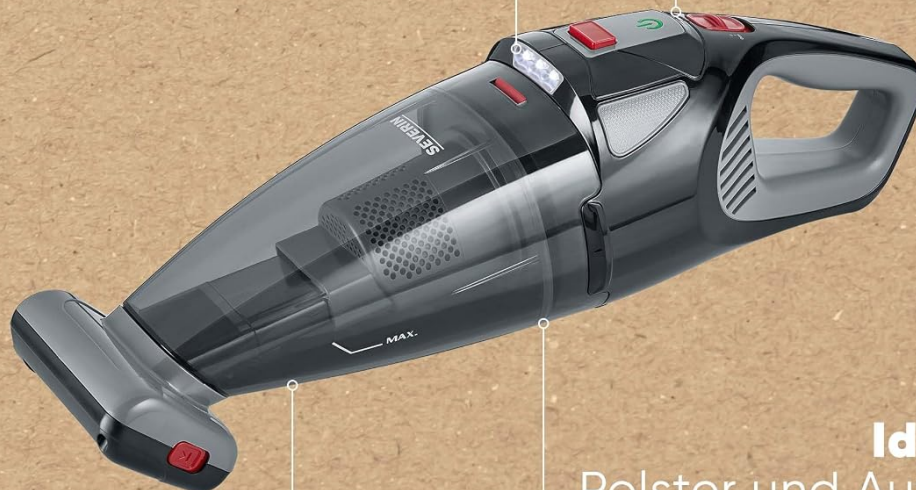

Ideal für
Polster und Autositze

Mit "Wet & Dry"
-Funktion

Figure 7.1: The handheld vacuum unit with its dust container detached, illustrating the ease of removal for emptying and cleaning.

7.2 Cleaning the Filter

The filter should be cleaned regularly to maintain suction power. For optimal performance, clean the filter after every few uses.

1. Remove the dust container as described in section 7.1.
2. Carefully remove the filter from the dust container.
3. Tap the filter gently to dislodge dust. For a more thorough cleaning, rinse the filter under running water.
4. Ensure the filter is completely dry before reinserting it into the dust container and reattaching it to the vacuum unit.

7.3 Cleaning the Wet & Dry Nozzle

After wet vacuuming, detach and rinse the rubber nozzle and the interior of the dust container with water. Allow all parts to air dry completely before reassembly.

8. TROUBLESHOOTING

If you encounter issues with your SEVERIN HV 7147, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully.
Low suction power.	Dust container is full. Filter is clogged. Nozzle/hose is blocked.	Empty the dust container. Clean or replace the filter. Check and clear any blockages in the nozzles or extension tube.
Short operating time.	Battery not fully charged. Operating in high power mode.	Ensure the battery is fully charged. Use Eco mode for maximum runtime.
Liquid leaks during wet vacuuming.	Dust container is overfilled. Rubber nozzle not properly attached.	Do not exceed 150 ml liquid capacity. Ensure the rubber nozzle is securely attached.

9. SPECIFICATIONS

- **Brand:** Severin
- **Model Number:** HV 7147
- **Color:** Black
- **Product Dimensions (L x W x H):**24 x 13 x 122 cm
- **Weight:** 1.45 kg
- **Dust Capacity:** 650 Milliliters
- **Liquid Capacity:** 150 Milliliters
- **Power:** 120 Watts
- **Voltage:** 18.5 Volts
- **Noise Level:** 65 dB
- **Runtime:** Up to 50 minutes (in Eco mode)
- **Battery Type:** 1 Lithium-ion (included)
- **Special Features:** Compact, Portable, Wet & Dry function, LED light, Rotating Turbo brush

10. WARRANTY AND SUPPORT

This product comes with a 1-year warranty on spare parts availability. For further assistance, technical support, or warranty claims, please refer to the official Severin website or contact their customer service department. Keep your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BW3YQVFZ>

More documents and user manuals: **<https://manuals.plus/>**