

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN G9N9N Voice Remote Control User Manual for Google Chromecast 4K TV

PERFASCIN ANG-G9N9N-YN-Voice-US

PERFASCIN G9N9N Voice Remote Control User Manual

For Google Chromecast 4K TV

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your PERFASCIN G9N9N Voice Remote Control. This remote is designed as a replacement for the 2020 Google Chromecast 4K TV models.

SETUP

1. Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Rear view of the PERFASCIN G9N9N remote control with the battery cover removed, illustrating the correct orientation for inserting two AAA batteries.

2. Pairing Instructions

Before using the remote control, it must be paired with your Google Chromecast 4K TV device. Follow these steps:

1. Ensure your Google Chromecast 4K TV is powered on and visible on your display.
2. On the PERFASCIN G9N9N remote, simultaneously press and hold the **BACK** button (left arrow) and the **POWER ON/OFF** button (circle with a line) for several seconds.
3. Continue holding until you observe a pulsing light on the remote control.
4. Release both buttons. The remote should now attempt to pair with your device.
5. Follow any on-screen prompts on your TV to complete the pairing process.

If pairing is unsuccessful, ensure the batteries are fresh and correctly installed, then repeat the pairing steps.

OPERATING THE REMOTE CONTROL

The PERFASCIN G9N9N remote control features several buttons for navigating and controlling your Google Chromecast 4K TV:







Image: Front view of the PERFASCIN G9N9N remote control, highlighting the layout of its buttons.

- **Directional Pad (Circular Ring):** Navigate through menus and content.
- **Select Button (Center of Directional Pad):** Confirm selections.
- **Back Button (Left Arrow):** Return to the previous screen or menu.
- **Home Button (House Icon):** Go to the main home screen.
- **Voice Assistant Button (Microphone Icon):** Activate voice commands for search and control.
- **Volume Mute Button (Speaker with X):** Mute or unmute audio.
- **YouTube Button:** Direct access to the YouTube application.
- **Netflix Button:** Direct access to the Netflix application.
- **Power Button (Circle with Line):** Turn the connected device on or off.
- **Input/Source Button (Rectangle with Arrow):** Change input source on your TV.

COMPATIBLE MODELS

This PERFASCIN G9N9N Voice Remote Control is compatible with the following 2020 Google Chromecast 4K TV models:

- GA01920-US
- GA01923-US
- GA01919-US
- GA02463-US
- GA01409-US
- GA02464-US

SPECIFICATIONS

Model Number	ANG-G9N9N-YN-Voice-US
Brand	PERFASCIN
Power Supply	2 x 1.5V AAA Alkaline Batteries
Special Feature	Voice Search
Color	White
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1.13 ounces

TROUBLESHOOTING

- **Remote Not Responding:**
Ensure batteries are fresh and correctly installed. Re-attempt the pairing process as described in the Setup section.

Check for any obstructions between the remote and the Chromecast device.

- **Buttons Not Working Consistently:**

This can sometimes indicate low battery power; replace batteries. Re-pair the remote with your Chromecast device. Ensure the remote's infrared emitter is not blocked.

- **Voice Control Not Working:**

Verify that the remote is successfully paired. Ensure your Chromecast device has an active internet connection. Check the device's settings to confirm voice control is enabled.

- **Remote Goes into Sleep Mode / Becomes Unresponsive:**

This issue may be resolved by re-pairing the remote. Ensure fresh batteries are used, as low power can affect consistent connectivity.

SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact PERFASCIN customer service. Provide your product model number (ANG-G9N9N-YN-Voice-US) for efficient support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BW467ZL6>

More documents and user manuals: <https://manuals.plus/>