

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SENSYNE](#) /

› [Sensyne 67-inch Phone Tripod Stand & Selfie Stick Instruction Manual](#)

## SENSYNE AB Shutter3

# Sensyne 67-inch Phone Tripod Stand & Selfie Stick Instruction Manual

## INTRODUCTION

---

Thank you for choosing the Sensyne 67-inch Phone Tripod Stand & Selfie Stick. This versatile accessory combines the functionality of a phone stand and a selfie stick, designed to enhance your photography, videography, vlogging, and live streaming experiences. It features adjustable height, 360-degree rotation, and wide compatibility with various devices. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

## PRODUCT FEATURES

---

- **Versatile Design:** Functions as both an extendable phone tripod stand and a selfie stick.
- **Adjustable Height:** Extends up to 67 inches to meet diverse photography height requirements.
- **Flexible Viewing Angles:** Features 360-degree rotation for capturing shots vertically or horizontally.
- **Wide Compatibility:** Universal phone holder fits cellphones from 2.8" to 5.7" wide. Includes a 1/4" screw mount for digital cameras, action cameras, webcams, and camcorders.
- **Wireless Remote Control:** Includes a Bluetooth remote shutter for convenient photo and video capture from a distance.
- **Durable Construction:** Made from aluminum for stability and longevity.

## PACKAGE CONTENTS

---

Please ensure all items are present in your package:

- Sensyne Phone Tripod Stand
  - Universal Phone Holder
  - Adapter (for cameras/GoPro)
  - Wireless Remote Shutter
-



Image: All components included in the Sensyne 67-inch Phone Tripod Stand & Selfie Stick package.

## SETUP INSTRUCTIONS

- 1. Unfold the Tripod Legs:** Gently pull the three legs outwards from the main shaft until they are fully extended and stable. Ensure the locking mechanism at the base is engaged to prevent accidental collapse.
- 2. Attach Phone Holder/Camera:**
  - For Smartphones: Screw the universal phone holder onto the 1/4" screw mount at the top of the tripod. Place your smartphone securely into the holder, ensuring it is centered and stable.
  - For Cameras/GoPro: Attach your camera or GoPro (using the provided adapter if necessary) directly to the 1/4" screw mount.
- 3. Adjust Height:** Unlock the quick-flip locks on each section of the tripod shaft. Extend the shaft to your desired height. Once the desired height is reached, firmly close all quick-flip locks to secure the extension.
- 4. Adjust Angle:** Loosen the knob on the ball head to adjust the phone holder or camera to your preferred angle (360-degree rotation, vertical, or horizontal). Tighten the knob firmly to secure the angle.
- 5. Pair Wireless Remote:**
  - Turn on the wireless remote shutter.
  - Enable Bluetooth on your smartphone.
  - Search for "AB Shutter3" (or similar) in your device's Bluetooth settings and pair.
  - Once paired, you can use the remote to trigger your phone's camera.



Image: The tripod's adjustable height feature, demonstrating its compact folded size and full extension up to 67 inches, secured by quick-flip locks.



Image: The phone holder rotating 360 degrees for vertical or horizontal shooting, alongside the wireless remote for convenient photo capture.

Your browser does not support the video tag.

Video: A demonstration of the Sensyne tripod's setup, showing how to extend the legs, adjust height, and position a phone for various shots.

## OPERATING INSTRUCTIONS

### Using as a Tripod:

- Ensure the tripod legs are fully extended and stable on a flat surface.
- Mount your device (smartphone or camera) securely.
- Adjust the height and angle as needed for your shot.
- Use the wireless remote to capture photos or start/stop video recording without touching your device, minimizing shake.

### Using as a Selfie Stick:

- Fold the tripod legs together to form a handle.
- Extend the main shaft to your desired length.
- Adjust the angle of your device for the perfect selfie or group shot.
- Utilize the wireless remote for convenient capture.



Image: The tripod demonstrating its versatility for different photography and videography needs, including macro shots, video recording, and as a selfie stick.

Your browser does not support the video tag.

Video: A user demonstrating the easy setup and compact folding of the Sensyne tripod, highlighting its portability and quick deployment.

## COMPATIBILITY

The Sensyne 67-inch Phone Tripod Stand & Selfie Stick offers broad compatibility:

- **Smartphones:** Compatible with all cellphones between 2.8 inches and 5.7 inches in width, including iPhone and Android devices.
- **Cameras:** Features a universal 1/4" screw mount, making it suitable for most digital cameras, action cameras (like GoPro with adapter), webcams, and camcorders.
- **Wireless Remote:** Compatible with iOS 6+ and Android 4.4+ operating systems.

Image: Visual representation of the tripod's compatibility with various devices, including traditional cameras, smartphones, and GoPro action cameras.

## SPECIFICATIONS

Feature	Detail
Model Name	AB Shutter3
Maximum Height	67 Inches
Minimum Height	17 Inches (approx. when folded)
Item Weight	1.61 pounds (0.73 Kilograms)
Material	Aluminum
Compatible Devices	Smartphones (2.8"-5.7" width), Digital Cameras, Action Cameras, Webcams, Camcorders
Special Feature	Wireless Remote Control
Tripod Head Type	Ball Heads
Batteries	1 Lithium Metal battery (included for remote)

## MAINTENANCE

- **Cleaning:** Wipe the tripod with a soft, dry cloth to remove dust and dirt. For stubborn stains, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid harsh chemicals.
- **Storage:** Store the tripod in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully collapsed and secured before storage.
- **Lubrication:** Periodically check the moving parts and joints. If they become stiff, apply a small amount of silicone-based lubricant.

- **Battery Replacement:** If the wireless remote stops responding, replace its lithium metal battery.

## TROUBLESHOOTING

---

- **Tripod is unstable:** Ensure the legs are fully extended and the base locking mechanism is engaged. Check that the ground surface is level.
- **Wireless remote not pairing:**
  - Make sure the remote is turned on and its battery is not depleted.
  - Ensure Bluetooth is enabled on your smartphone and it's discoverable.
  - Forget previously paired devices on your phone and try pairing again.
  - Move closer to the remote to ensure it's within range.
- **Phone holder not secure:** Ensure your phone is within the specified width range (2.8" to 5.7") and is properly centered in the holder. Tighten any adjustment knobs firmly.

## WARRANTY AND SUPPORT

---

Sensyne provides professional after-sales support for 12 months from the date of purchase. If you encounter any questions or issues with your product, please contact our customer service team for assistance. For further assistance, please visit the [SENSYNE Store on Amazon](#).