

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CAMCLID](#) /

› [CAMCLID Kids Instant Camera User Manual](#)

CAMCLID RKE3

CAMCLID Kids Instant Camera User Manual

Model: RKE3 / ET-2

INTRODUCTION

This manual provides instructions for the CAMCLID Kids Instant Camera, Model RKE3 / ET-2. This camera is designed for children aged 3-12, featuring inkless thermal printing, dual lenses for photos and videos, and various creative functions.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- CAMCLID Kids Instant Camera (Pink)
- 3 Rolls of Print Paper
- 32GB Memory Card (pre-installed)
- USB Charging Cable
- Lanyard
- Color Pens
- Stickers
- Mini Clothespins and Twine



Image: The CAMCLID Kids Instant Camera in pink, shown with all included accessories: print paper rolls, 32GB memory card, USB cable, lanyard, color pens, stickers, mini clothespins, and twine.

SETUP

1. Memory Card Installation

The 32GB memory card is typically pre-installed in the camera's card slot. Please check the side of the camera to confirm its presence.

2. Charging the Camera

The camera is equipped with a 1000mAh rechargeable battery. Connect the camera to a USB power source using the provided USB charging cable. A full charge supports 3-5 hours of continuous use.

3. Installing Print Paper

This camera uses inkless thermal printing. Follow these steps to install the print paper:

1. Pull open the film door on the camera.
2. Insert a roll of print paper, ensuring that the printable side is facing the correct direction. Only one side of the paper roll has printing function. Leave about 1-2 inches of paper extending from the slot.
3. Close the film door securely.
4. To test, enter the camera function and press the "Print" button. The print icon in the upper right corner of the screen will switch to print mode.



Image: A four-step visual guide demonstrating how to open the film door, insert the thermal paper roll, close the door, and initiate printing.

OPERATING INSTRUCTIONS

1. Basic Functions

- **Power On/Off:** Press and hold the power button to turn the camera on or off.
- **Navigation:** Use the directional buttons to navigate menus and select options.
- **Photo Mode:** Switch to photo mode to capture still images. The camera features 20MP dual front and rear lenses.
- **Video Mode:** Switch to video mode to record high-definition videos (up to 2.5K resolution, adjustable in settings).
- **Printing:** After capturing a photo, press the print button to instantly print a black and white version.

1080P HD Recording



**Record every joy and
sorrow of childhood**

Image: The camera screen displaying a video recording interface, highlighting its 1080P HD recording capability.



Image: A visual representation of the camera's 20MP dual front and rear lenses, showing examples of photos taken with each.

2. Advanced Features

- **Self-Portrait Function:** Utilize the front lens for taking selfies.
- **Print Density Setting:** Adjust the printing density (1-7, 7 being brightest) in the camera settings for optimal print quality based on lighting conditions.
- **Burst Shot:** Capture multiple photos in quick succession.
- **Time-Lapse:** Set the camera to take photos at intervals (2s, 5s, 10s).
- **Cycle Recording:** Enable continuous video recording that overwrites the oldest files when the memory card is full.
- **10x Zoom:** Magnify your subject up to 10 times.
- **Color Filters:** Apply 6 different color filters to your photos.
- **Photo Frames:** Choose from 20 cute photo frames to add to your pictures.
- **Mirror Effects:** Experiment with various mirror effects.
- **Puzzle Games:** Enjoy 3 built-in puzzle games.
- **Music Player:** The camera includes a music player function.

2s,5s,10s Time-Lapse & Burst Shot



2s



5s



10s



Image: An illustration showing the time-lapse and burst shot features, with examples of photos taken at 2, 5, and 10-second intervals.



Image: A visual demonstrating the 10x zoom capability of the camera, showing progressive magnification of a rabbit.

Color Pen DIY



Image: Examples of various fun photo frames that can be applied to pictures taken with the camera.

Fun Photo Frames



Image: A child coloring a printed photo, illustrating the "Color Pen DIY" feature where black and white prints can be colored.

MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures, direct sunlight, or moisture.
- Store the camera in a safe place when not in use to prevent damage.

TROUBLESHOOTING

- **Stripes on Screen or Camera Freezes:** If the screen displays stripes or the camera freezes and cannot be turned off, use a thin needle to press the reset button located in the round hole on the side of the camera. This will typically restore normal operation.
- **Poor Print Quality:** Ensure the print paper is installed in the correct direction, as only one side is printable. Adjust the print density setting in the camera menu according to the light conditions for better results.

- **No Power:** Ensure the camera is fully charged. If the issue persists, try resetting the camera as described above.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4.1 x 1.8 x 4.33 inches
Item Weight	15.5 ounces (0.44 Kilograms)
Model Number	RKE3 / ET-2
Manufacturer Recommended Age	12 months - 10 years
Battery	1 Lithium Polymer battery (included)
Special Feature	Time Lapse
Film Format Type	Instant
Film Color	Black and White (for prints)
Exposure Control Type	Automatic
Lenses	20MP Dual Front and Rear Lenses
Video Resolution	Up to 2.5K (adjustable)
Memory Card	32GB (included)

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For support, warranty claims, or further assistance, please refer to the contact information provided with your product packaging or visit the official CAMCLID website.

