



Manuals.plus /

› SCHLAGE /

› Schlage Encode Smart Wi-Fi Lever Lock Instruction Manual

SCHLAGE FE789WBCAM619ACC

Schlage Encode Smart Wi-Fi Lever Lock Instruction Manual

Model: FE789WBCAM619ACC

Brand: SCHLAGE

1. INTRODUCTION

The Schlage Encode Smart Wi-Fi Lever Lock provides convenient and secure keyless entry for your home. With built-in Wi-Fi, this smart lock connects directly to your home network, allowing remote control and monitoring via the Schlage Home app. It supports up to 100 access codes, offers customizable notifications, and integrates with popular smart home platforms like Amazon Alexa and Google Assistant. Designed for durability and security, it is ideal for various doors including garage, side, and interior doors where controlled access is desired.



Figure 1: Schlage Encode Smart Wi-Fi Lever Lock (Satin Nickel)

2. KEY FEATURES

- **ANYWHERE ACCESS:** Built-in Wi-Fi allows secure connection to your home network for remote control and monitoring via the Schlage Home app, no additional accessories needed.
- **PEACE OF MIND:** Lock/unlock remotely, manage up to 100 access codes, view lock history, and receive customizable notifications.
- **ADVANCED SECURITY:** Secure, encrypted connection; built-in, customizable alarm for door movement and forced entry attempts; fingerprint-resistant touchscreen; certified highest residential Security, Durability and Finish rating by BHMA industry experts.
- **EASY INSTALL:** Installs in minutes with just a screwdriver, no hardwiring required; reversible levers fit right and left handed doors; fits standard doors with 1-3/8 in to 1-3/4 in door thickness and 2-3/8 in or 2-3/4 in backset.
- **COME AND GO WITH EASE:** Auto-lock feature with various time delay options; convenient control buttons on the interior for quick unlocking.
- **SECURE AND STYLISH:** Available in traditional and contemporary styles with multiple finishes, offering premium

quality and craftsmanship.

- **BATTERY-OPERATED:** Uses four AA batteries (included); up to six months of battery life with typical use; low-battery indicator on lock touchscreen and in Schlage Home app; one physical backup key included.



Schlage Encode™

SMART WIFI LEVER











-  BUILT-IN WIFI
-  REMOTE ACCESS
-  APP CONTROL
-  100 CODES SCHEDULE CODES
-  SMART HOME READY
-  VOICE CONTROL
-  BUILT-IN ALARM
-  BATTERY OPERATED NO HARDWIRING



Figure 2: Overview of Schlage Encode Smart Wi-Fi Lever features.

3. PACKAGE CONTENTS

The Schlage Encode Smart Wi-Fi Lever Lock package includes all necessary components for installation and immediate use:

- Schlage Encode Smart Wi-Fi Lever Lock (Exterior and Interior Assemblies)
- Installation Hardware
- Installation Instructions
- Four AA Batteries
- One Physical Backup Key

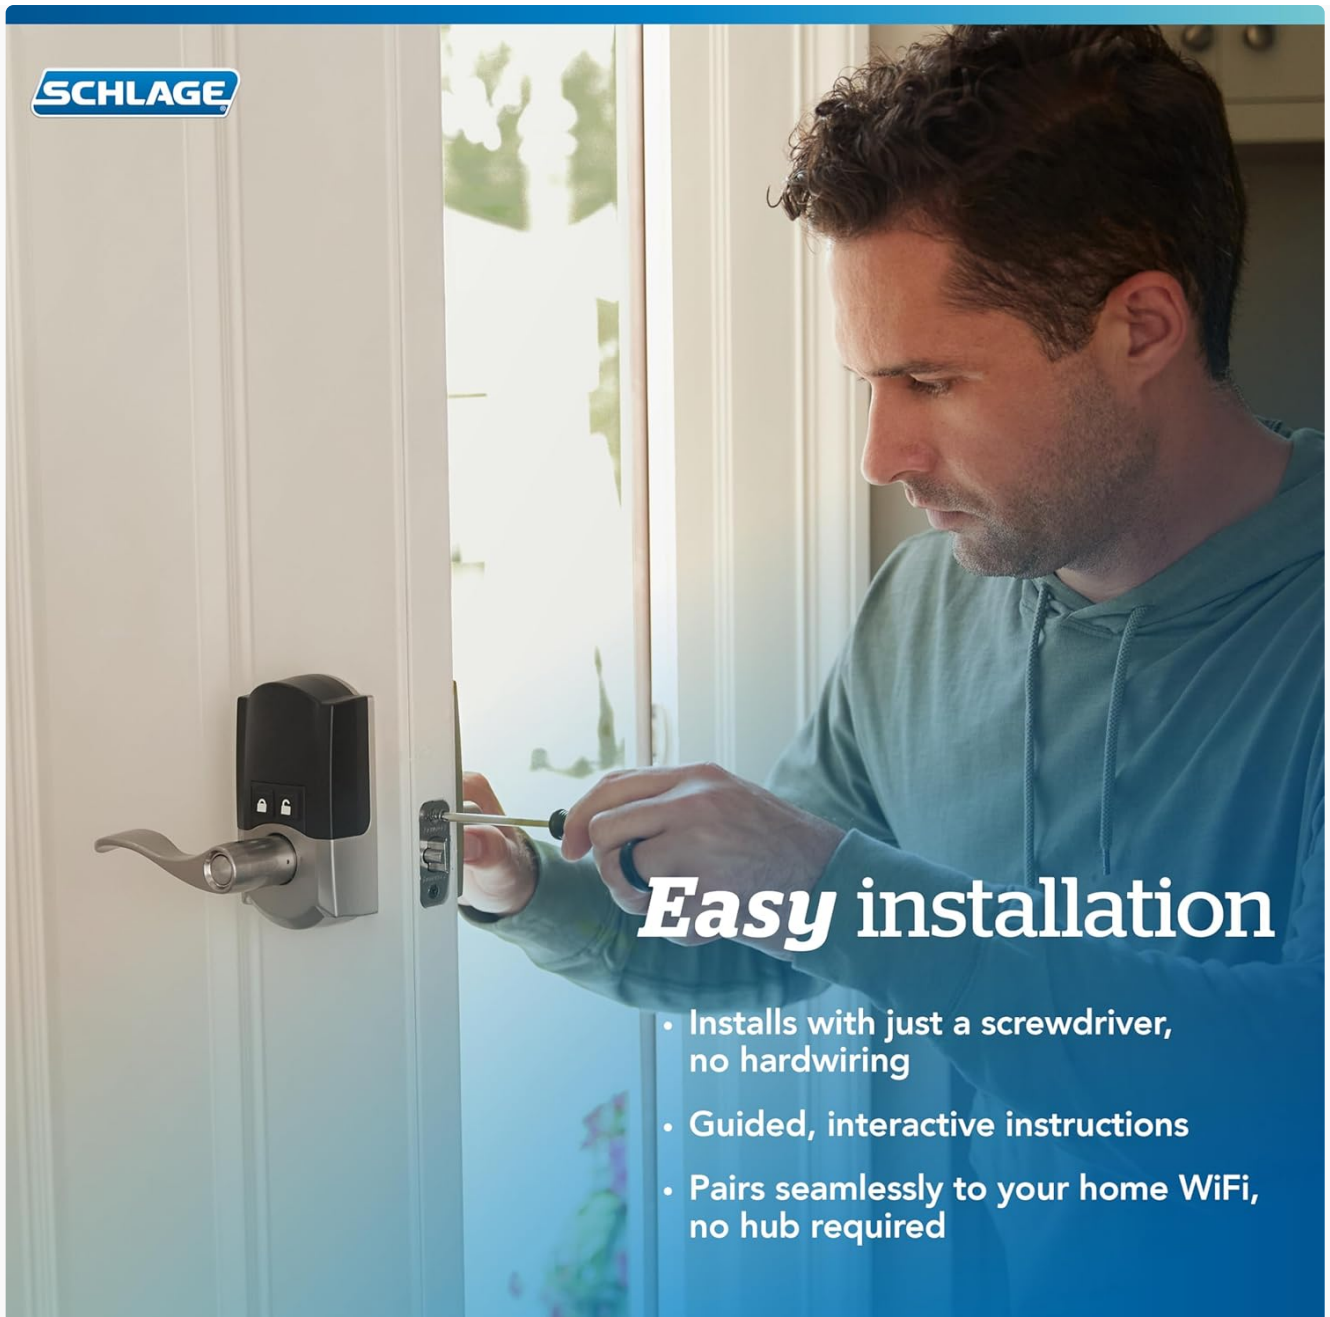


Figure 3: What's included in the box.

4. INSTALLATION

Installation of the Schlage Encode Smart Wi-Fi Lever Lock is designed to be straightforward, requiring only a screwdriver. No hardwiring is necessary.

1. **Prepare Door:** Ensure your door meets the standard thickness (1-3/8 in to 1-3/4 in) and backset (2-3/8 in or 2-3/4 in) requirements.
2. **Remove Old Hardware:** Carefully remove any existing door hardware.
3. **Install Latch and Strike Plate:** Follow the included instructions to install the new latch and strike plate.
4. **Install Exterior Assembly:** Position the exterior keypad assembly on the door. The reversible levers accommodate both right and left-handed doors.
5. **Install Interior Assembly:** Connect the interior assembly, ensuring the wiring harness is properly routed and connected.
6. **Insert Batteries:** Install the four AA batteries into the interior assembly.
7. **Test Operation:** Verify that the lock operates smoothly both manually and electronically.

The Schlage logo is located in the top left corner of the image. It consists of the word "SCHLAGE" in a bold, white, sans-serif font, enclosed within a blue rectangular border with rounded corners.

Easy installation

- Installs with just a screwdriver, no hardwiring
- Guided, interactive instructions
- Pairs seamlessly to your home WiFi, no hub required


Figure 4: Easy installation with a screwdriver.

Video 1: Official product video demonstrating the Schlage Encode Smart WiFi Lever.

5. SETUP & CONFIGURATION

After physical installation, configure your lock using the Schlage Home app:

1. **Download App:** Download the Schlage Home app from your device's app store.
2. **Create Account:** Register for a new account or log in if you already have one.
3. **Add Device:** Follow the in-app instructions to add your new Schlage Encode lock. This typically involves scanning a QR code or entering a serial number.
4. **Connect to Wi-Fi:** The app will guide you through connecting the lock to your home's Wi-Fi network. No additional hub is required.
5. **Program Access Codes:** Create and manage up to 100 unique 4-8 digit access codes for family, friends, or service providers. You can set permanent, recurring, or temporary codes.
6. **Customize Settings:** Adjust auto-lock times, enable/disable the built-in alarm, and set up notifications for lock

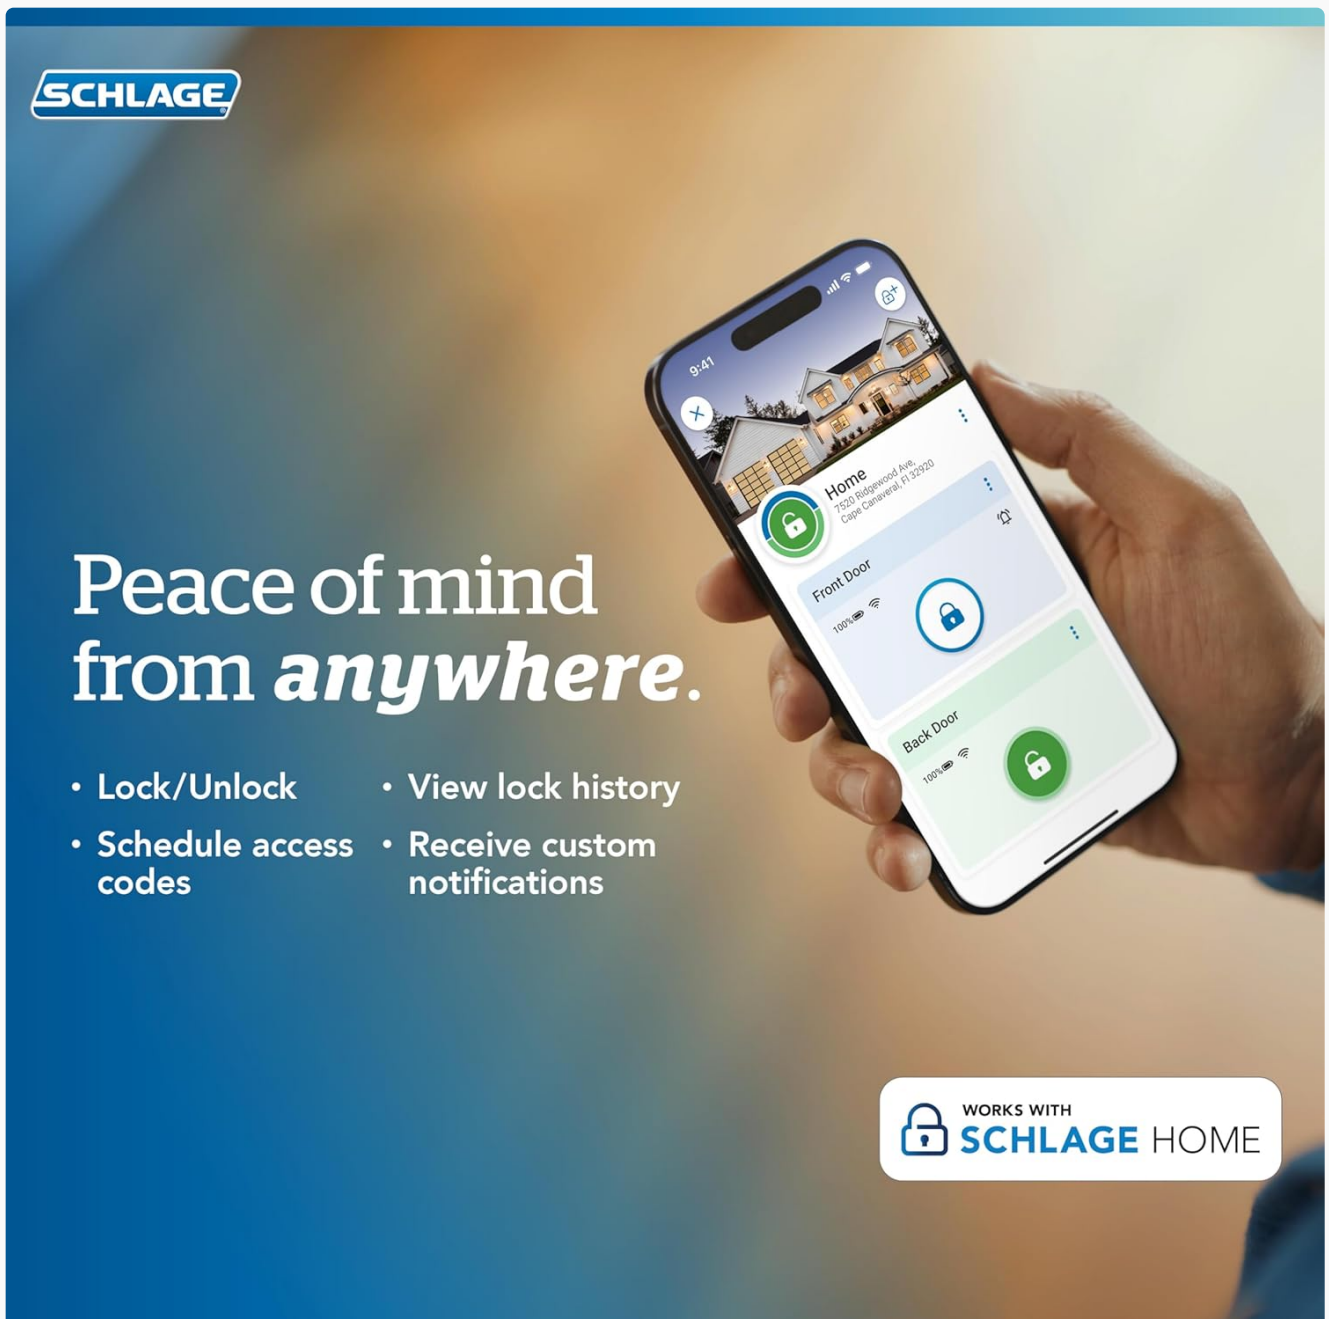

Peace of mind from *anywhere*.

- Lock/Unlock
- View lock history
- Schedule access codes
- Receive custom notifications

WORKS WITH
SCHLAGE HOME

Figure 5: Managing your lock with the Schlage Home app.

6. OPERATING INSTRUCTIONS

6.1. Keypad Operation (Exterior)

1. **To Unlock:** Touch the keypad to activate it. Enter your 4-8 digit access code. The lock will unlock, and you can turn the lever to open the door.
2. **To Lock:** Press the dedicated lock button (usually a padlock icon) on the keypad. The lock will engage automatically.

6.2. Manual Operation (Interior)

From the interior side of the door, you have two buttons for quick control:

- **Lock Button:** Press the lock button to secure the door.
- **Unlock Button:** Press the unlock button to disengage the lock.

You can also use the physical key for manual override if needed.

7. SMART HOME INTEGRATION

The Schlage Encode Smart Wi-Fi Lever Lock offers seamless integration with various smart home ecosystems:

- **Amazon Alexa:** Pair your lock with Amazon Alexa for voice control. You can ask Alexa to lock or unlock your door (with a voice PIN for unlocking).
- **Google Assistant:** Connect to Google Assistant for similar voice commands and smart home routines.
- **Airbnb Compatible:** Ideal for rental properties, the lock can integrate with Airbnb to automatically generate and manage access codes for guests, expiring upon their departure.

The graphic features the Schlage logo in the top left corner. To its right, the text "Works with" is displayed in a large, bold, black font. Below this, seven horizontal sections are separated by thin lines. Each section contains a feature name in blue, bold, uppercase letters on the left, and a corresponding description or logo on the right. The features include: 1. APP CONTROL with a "WORKS WITH SCHLAGE HOME" logo; 2. SMART DEVICE CONTROL with "iOS and Android smartphones" and "Manage and control from app screen"; 3. PROPERTY ACCESS MANAGEMENT with the "Works with Airbnb" logo; 4. ACCESS CODES with "100 codes" and "Always on | Reoccurring | Temporary"; 5. VOICE CONTROL with "works with alexa" and "works with Google Home" logos; 6. REMOTE ACCESS with "Remote access out of the box" and "when connected to your home WiFi network, no hub required". At the bottom, a grey box contains a paragraph about the Schlage Home App.

SCHLAGE

Works with

APP CONTROL

WORKS WITH **SCHLAGE HOME**

SMART DEVICE CONTROL

iOS and Android smartphones
Manage and control from app screen

PROPERTY ACCESS MANAGEMENT

Works with **Airbnb**

ACCESS CODES

100 codes
Always on | Reoccurring | Temporary

VOICE CONTROL

works with **alexa** | works with **Google Home**

REMOTE ACCESS

Remote access out of the box
when connected to your home WiFi network, no hub required

The Schlage Home App for Apple iOS and Android lets you control and monitor your compatible Schlage Encode Lever from anywhere using your smartphone. Peace of mind in the palm of your hand.

Figure 6: Smart home compatibility.

8. MAINTENANCE

8.1. Battery Replacement

The lock is powered by four AA batteries, providing approximately six months of battery life with typical use. The lock features a low-battery indicator on the touchscreen and within the Schlage Home app to provide advance notice for replacement.

1. Access the battery compartment on the interior assembly (refer to the full installation guide for specific instructions).
2. Remove the old batteries.
3. Insert four new AA batteries, ensuring correct polarity.
4. Close the battery compartment.

8.2. Cleaning

To clean the touchscreen and exterior of the lock, use a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.

9. TROUBLESHOOTING

- **Lock Not Responding:** Check battery levels. Replace batteries if low. Ensure the lock is properly installed and all connections are secure.
- **Wi-Fi Connectivity Issues:** Verify your home Wi-Fi network is active and the signal strength at the door is adequate. Re-pair the lock with the Schlage Home app if necessary. If Wi-Fi drops, the lock will still operate using previously saved codes.
- **Keypad Not Lighting Up:** The keypad is touch-sensitive. Ensure you are touching the screen firmly. If still unresponsive, check battery levels.
- **Physical Key Not Working:** The physical key is designed to turn the mechanism that controls the lever, not directly retract the latch. Ensure the key is fully inserted and turned correctly.
- **Door Alarm Triggering:** The lock has a built-in alarm for door movement and forced entry attempts. Adjust sensitivity or disable the alarm through the Schlage Home app if it's triggering unnecessarily.

10. SPECIFICATIONS

Feature	Detail
Brand	SCHLAGE
Model Number	FE789WBCAM619ACC
Lock Type	Keypad
Material	Zinc
Item Dimensions (L x W x H)	3 x 3 x 5.88 inches
Item Weight	4.25 Pounds
Color	Satin Nickel
Style Name	Camelot
Connectivity Protocol	Bluetooth, Wi-Fi
Control Method	Touch
Controller Type	Amazon Alexa, Google Assistant
Power Source	4 AA Batteries (included)
Door Thickness Compatibility	1-3/8 in to 1-3/4 in
Backset Compatibility	2-3/8 in or 2-3/4 in



A HEIGHT **B** WIDTH **C** DEPTH

CAMELOT TRIM

Figure 7: Product Dimensions (Camelot Trim)

11. WARRANTY & SUPPORT

The Schlage Encode Smart Wi-Fi Lever Lock is backed by a limited lifetime mechanical and finish warranty, and a limited three-year electronics warranty. For full details, please refer to the official Schlage warranty documentation. Warranty is valid only on purchases shipped from and sold by Amazon or Buildcom.

For further assistance, technical support, or warranty claims, please visit the official SCHLAGE website or contact their customer service.