

Manuals.plus /

› Coaster Fine Furniture /

› Coaster Home Furnishings Arika Leatherette Dining Arm Chair Instruction Manual - Model 193372BLK

Coaster Fine Furniture 193372BLK

Coaster Home Furnishings Arika Leatherette Dining Arm Chair Instruction Manual

Model: 193372BLK

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference. Ensure all components are present and undamaged before beginning assembly. Do not use power tools for assembly unless specifically instructed, as overtightening may damage the product. Always place the chair on a flat, stable surface. Do not stand on the chair. Maximum weight recommendation: 300 pounds.

Proposition 65 Warning: This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

2. PRODUCT OVERVIEW

The Coaster Home Furnishings Arika Leatherette Dining Arm Chair (Model 193372BLK) is a mid-century style dining chair designed for comfort and durability. It features a tufted back, sloped arms, an upholstered seat, and a swivel base, making it suitable for dining rooms and kitchens.



Figure 2.1: Front view of the Coaster Arika Leatherette Dining Arm Chair in black.



Figure 2.2: Angled view of the Arika dining chair, highlighting its sloped arms and tufted back.

3. COMPONENTS LIST

The package includes one (1) Swivel Arm Chair. All necessary hardware for assembly is typically included within the packaging. Please verify all parts are present before proceeding.

- Upholstered Seat and Back Assembly
- Swivel Base Assembly
- Hardware Pack (screws, washers, Allen wrench, etc.)

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the Arika Dining Arm Chair is generally straightforward. It is recommended to assemble the chair on a soft, clean surface to prevent scratching. Two people may be required for easier assembly.

1. Carefully unpack all components and place them on a protected surface.
2. Identify the upholstered seat and back assembly and the swivel base assembly.
3. Align the mounting points on the swivel base with the corresponding points on the underside of the seat.
4. Secure the swivel base to the seat using the provided screws and washers. Hand-tighten all screws initially.
5. Once all screws are in place, fully tighten them with the Allen wrench. Do not overtighten.
6. Ensure the chair is stable and all connections are secure before use.

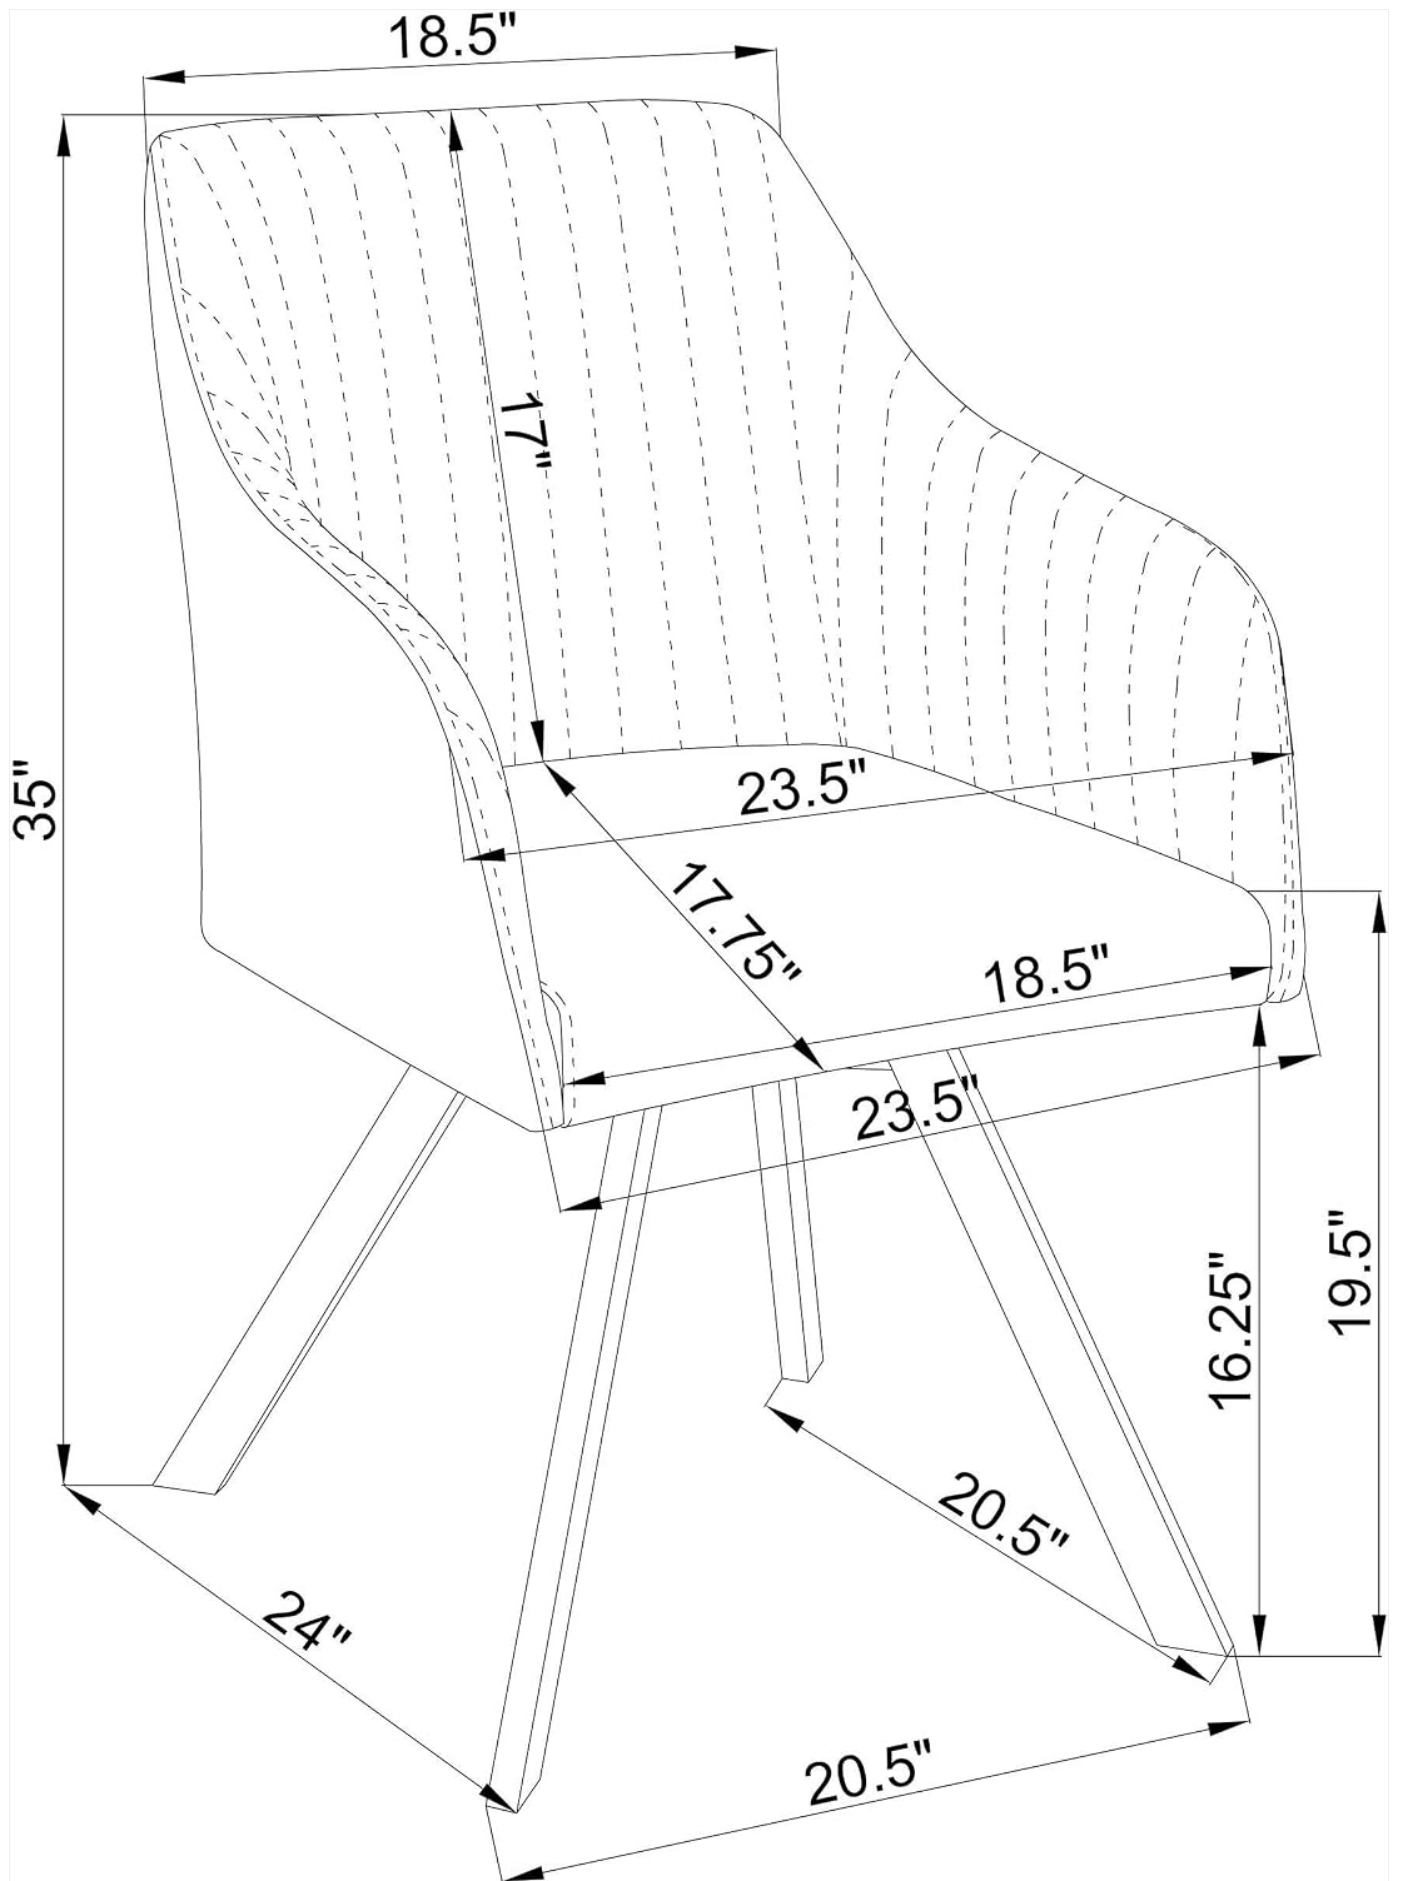


Figure 4.1: Technical drawing showing the dimensions of the Coaster Arika Leatherette Dining Arm Chair.

5. OPERATING INSTRUCTIONS

This chair is designed for seating purposes in dining room and kitchen environments. The swivel base allows for 360-degree rotation, providing flexibility and ease of movement while seated. Ensure the chair is placed on a level surface to prevent tipping.



Figure 5.1: The Arika dining chair positioned at a dining table, showcasing its design and function.

6. MAINTENANCE AND CARE

To maintain the appearance and longevity of your Coaster Arika Leatherette Dining Arm Chair, follow these care instructions:

- **Cleaning Code: S** (Solvent-based cleaners only). Do not use water-based cleaners.
- For general cleaning, wipe the faux leather with a soft, dry cloth.
- For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a solvent-based upholstery cleaner as directed by the product manufacturer. Test in an inconspicuous area first.
- Avoid direct sunlight and heat sources to prevent fading and material degradation.

- Periodically check and tighten all screws to ensure stability.

7. TROUBLESHOOTING

If you encounter any issues with your dining chair, refer to the following common solutions:

- **Chair feels wobbly:** Check all assembly screws and tighten them securely. Ensure the chair is on a level surface.
- **Swivel mechanism is stiff:** The swivel mechanism is designed for smooth rotation. If it feels stiff, ensure no debris is obstructing the mechanism. Avoid applying lubricants unless specifically recommended by the manufacturer.
- **Faux leather appears dull or stained:** Refer to the "Maintenance and Care" section for appropriate cleaning methods.

8. SPECIFICATIONS

Feature	Detail
Brand	Coaster Fine Furniture
Model Name	Arika
Item Model Number	193372BLK
Color	Black
Material	Engineered Wood, Faux Leather, Foam
Product Dimensions (D x W x H)	24"D x 23.5"W x 35"H
Item Weight	22 pounds
Back Style	Tufted Back
Special Features	Bucket Seat, Channel Tufted, Sloped Arms, Swivel Base, Upholstered Leather
Recommended Uses	Dining
Maximum Weight Recommendation	300 Pounds
Cleaning Code	S
Furniture Base Movement	Swivel
Indoor/Outdoor Usage	Indoor
Seat Height	19.5 Inches
Seat Depth	17.75 inches
Seat Length	18.5 Inches
Chair Backrest Width	18.5 Inches

9. OFFICIAL PRODUCT VIDEO

Watch the official Coaster Home Furnishings introduction video to learn more about the brand's commitment to quality and style.

Your browser does not support the video tag.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Coaster Fine Furniture website or contact their customer service department directly. Keep your purchase receipt for any warranty claims.

Contact Information:

- Visit the [Coaster Fine Furniture Store on Amazon](#) for more information.
- Refer to the product packaging or official website for direct customer service contact details.

© 2023 Coaster Fine Furniture. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0BW5ZTQDK>

More documents and user manuals: <https://manuals.plus/>