

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA GODMORGON High Cabinet User Manual

IKEA GODMORGON 40x32x192 cm Kasjön light grey

IKEA GODMORGON High Cabinet User Manual

Model: GODMORGON 40x32x192 cm, Kasjön light grey

Brand: IKEA

INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your IKEA GODMORGON high cabinet. Please read these instructions carefully before beginning assembly or use to ensure safe and proper functionality.

The IKEA GODMORGON high cabinet is designed for spacious storage with adjustable shelves and soft-closing doors, suitable for various rooms including bathrooms, kitchens, and entryways. Its tempered glass shelves offer high load-bearing capacity and resistance to heat and impact.





Image: The IKEA GODMORGON high cabinet, featuring a glass upper door and a solid lower door, in light grey finish.

SETUP AND ASSEMBLY

Assembly of the GODMORGON high cabinet is required. Follow the detailed instructions provided in the separate assembly guide that accompanies your product. Ensure all components are present before starting.

- **Safety First:** Handle with care during assembly. Glass components are present.
- **Wall Mounting:** This cabinet must be secured to the wall to prevent tipping. Use appropriate wall fasteners for your wall material (fasteners sold separately).
- **Door Orientation:** The door can be mounted to open from either the right or the left, depending on your preference and room layout.

- **Shelf Installation:** Adjustable shelves can be placed at desired heights to suit your storage needs.



Image: The IKEA GODMORGON high cabinet installed in a bathroom setting, demonstrating its vertical storage capability.

Important Safety Information:

WARNING: To prevent tipping, this furniture must be permanently fixed to the wall. Different wall materials require different types of fastening devices. Use fastening devices suitable for the walls in your home (not included).

WARNING: Handle glass components with care to avoid breakage. Do not overload shelves beyond their specified weight capacity.

OPERATING INSTRUCTIONS

The GODMORGON high cabinet is designed for ease of use and durability.

- **Opening and Closing Doors:** The cabinet features soft-closing doors, ensuring quiet and gentle operation. Apply gentle pressure to open and close.
- **Adjusting Shelves:** The tempered glass shelves are adjustable. To change their position, carefully lift the

shelf, remove the shelf pins, reposition the pins to the desired height, and then place the shelf back on the pins.

- **Storage:** Utilize the spacious interior for organizing various items. The glass door allows for display while protecting contents from dust.



Image: An interior view of the GODMORGON cabinet, showing adjustable glass shelves and organized items like towels and baskets.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your GODMORGON high cabinet.

- **Cleaning Surfaces:** Wipe clean with a cloth dampened in a mild cleaner. Wipe dry with a clean cloth. Avoid abrasive cleaners or scouring pads.
- **Glass Care:** For glass surfaces, use a glass cleaner and a soft, lint-free cloth.
- **Hardware:** Periodically check and tighten any screws or fittings to ensure stability.
- **Moisture:** While designed for bathroom environments, avoid prolonged exposure to excessive moisture. Wipe up spills immediately.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause / Solution
Cabinet feels wobbly or unstable.	Ensure all assembly screws are tightened. Verify that the cabinet is securely anchored to the wall using appropriate fasteners. Check if the floor is level.
Door does not close properly or is misaligned.	Adjust the hinges. Refer to the assembly guide for detailed instructions on hinge adjustment. Ensure the cabinet is level.
Shelves are difficult to insert or remove.	Ensure shelf pins are correctly inserted into the desired holes and are aligned. Do not force shelves.
Glass door appears scratched or damaged.	Avoid using abrasive cleaners or sharp objects on glass surfaces. Contact IKEA customer service for replacement parts if damage is significant.

SPECIFICATIONS

Detailed specifications for the IKEA GODMORGON high cabinet:

- Brand:** IKEA
- Model Name:** GODMORGON
- Color:** Light Grey
- Product Dimensions (D x W x H):** 12.6"D x 15.75"W x 75.59"H (32 cm D x 40 cm W x 192 cm H)
- Recommended Uses:** Display, General Storage, Kitchen, Bathroom, Entryway
- Special Feature:** Adjustable shelves
- Mounting Type:** Floor Mount (requires wall securing)
- Door Style:** Flat Panel (lower), Glass (upper)
- Included Components:** Shelves
- Finish Type:** White (referring to internal finish/frame)
- Number of Shelves:** 3 (adjustable)
- Installation Type:** Freestanding (with wall attachment)
- Top Material Type:** Glass
- Handle Material:** Nylon or Aluminum or Stainless Steel
- Assembly Required:** Yes
- Frame Material:** Glass (for glass door section)
- Number of Compartments:** 3 (implied by shelves)
- Date First Available:** February 15, 2023





15.75

Image: Diagram illustrating the dimensions of the IKEA GODMORGON high cabinet: 15.75 inches width, 12.6 inches depth, and 75.59 inches height.

WARRANTY AND SUPPORT

Your IKEA GODMORGON high cabinet comes with a **10-year guarantee**. This guarantee covers defects in material and workmanship. Please refer to the separate guarantee brochure provided with your purchase for full terms and conditions.

For further assistance, replacement parts, or to report any issues not covered in this manual, please contact IKEA customer service. Keep your proof of purchase for warranty claims.

You can find more information and contact details on the official IKEA website www.ikea.com

© 2023 IKEA. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question