

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA POÄNG Footstool User Manual

## IKEA POÄNG Footstool

# IKEA POÄNG Footstool User Manual

Model: POÄNG Footstool, Black-Brown/Hillared Beige

### INTRODUCTION

The IKEA POÄNG Footstool is designed to be a comfortable and durable companion to your POÄNG armchair. Its unique shape and strong layer-glued frame provide a stable and relaxing place to rest your feet. This manual provides essential information for the proper use, care, and maintenance of your footstool.



Image: The POÄNG Footstool featuring a black-brown frame and a Hillared beige cushion.

## IMPORTANT SAFETY INFORMATION

---

- Do not exceed the maximum weight recommendation of 30 kg (66 lbs). Exceeding this limit may compromise the stability and integrity of the footstool.
- Place the footstool on a stable, level surface to prevent tipping and ensure user safety.
- Regularly check all fittings and tighten them as necessary to maintain stability.

---

## SETUP

The IKEA POÄNG Footstool requires no assembly. It is delivered as a single piece, ready for immediate use.

1. **Unpacking:** Carefully remove the footstool from its packaging. Retain packaging materials for potential future transport or returns.
2. **Placement:** Position the footstool on a flat, stable surface in your desired location. Ensure there is adequate space around it for comfortable use and movement.
3. **Companion Use:** For optimal comfort, place the footstool in front of your POÄNG armchair.



Image: The POÄNG Footstool shown in a room setting, paired with a POÄNG armchair.

## OPERATING

The POÄNG Footstool is designed for simple and comfortable use.

- **Foot Rest:** Use the footstool to elevate your feet while seated in an armchair or sofa, promoting relaxation and improved circulation.
- **Versatility:** While primarily a footrest, its sturdy construction allows for occasional use as a temporary seat for light loads, provided the weight limit is respected.

## MAINTENANCE

Proper care will extend the life and appearance of your POÄNG Footstool.

- **Frame Care:** Wipe the wooden frame with a damp cloth. For stubborn dirt, use a mild soap solution, then wipe dry with a clean cloth. Avoid abrasive cleaners.
- **Cushion Care:** The Hillared Beige cushion is designed for durability. For general cleaning, vacuum regularly. For spills, gently blot with a clean, damp cloth. Refer to the care label on the cushion for specific washing instructions, if applicable.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the cushion fabric and potential drying of the wood frame.

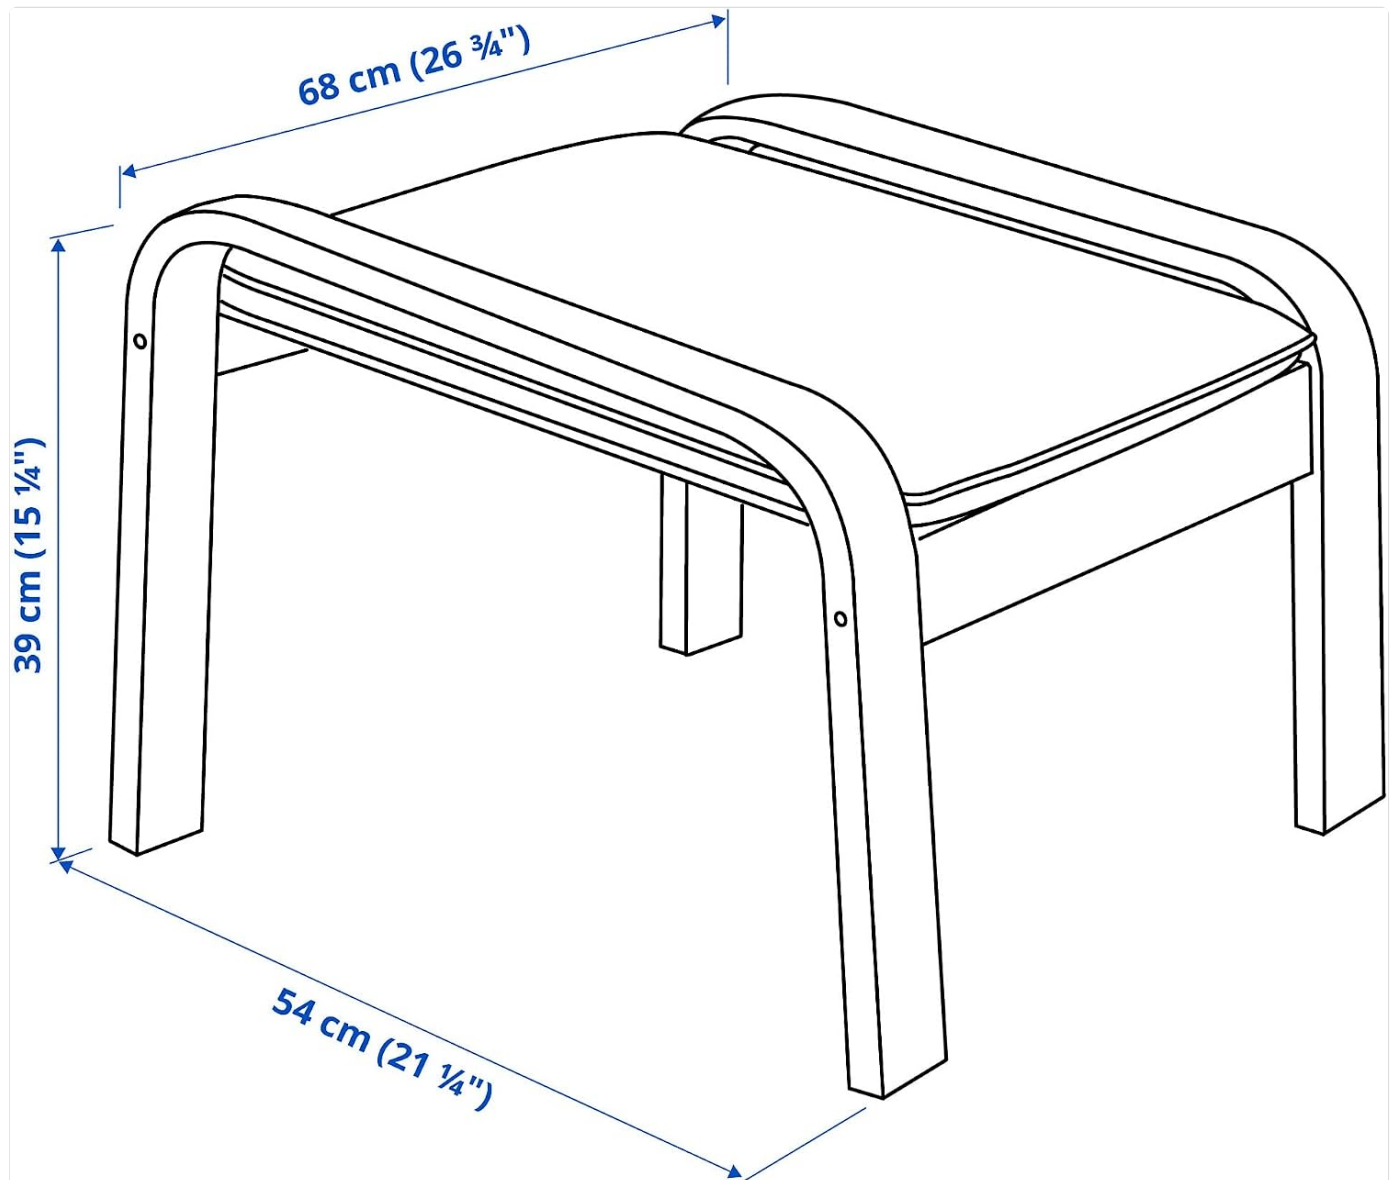


Image: A detailed view of the Hillared Beige cushion fabric.

## TROUBLESHOOTING

- **Footstool feels wobbly:** Ensure the footstool is placed on a completely flat and level surface. Check if any floor irregularities are causing instability.

- **Creaking noises:** While unlikely for this product, if any creaking occurs, inspect the frame for any loose joints. Although no assembly is required, prolonged use can sometimes cause minor shifts.
- **Cushion appears flattened:** Rotate or fluff the cushion periodically to maintain its shape and comfort.

## SPECIFICATIONS

| Feature                   | Detail                       |
|---------------------------|------------------------------|
| Brand                     | IKEA                         |
| Style                     | Contemporary                 |
| Furniture Finish          | Beech, Beige                 |
| Seat Height               | 38 Centimeters (15 inches)   |
| Leg Style                 | Straight                     |
| Product Care Instructions | Wipe with Damp Cloth         |
| Assembly Required         | No                           |
| Number of Pieces          | 1                            |
| Item Weight               | 3.53 ounces (approx. 0.1 kg) |
| Manufacturer              | IKEA                         |
| ASIN                      | B0BW8QH5C5                   |



Image: Dimensional diagram of the POÄNG Footstool.

## WARRANTY

---

The IKEA POÄNG Footstool comes with a 10-year guarantee. This guarantee covers defects in materials and workmanship under normal domestic use. For full terms and conditions, please refer to the guarantee brochure available at IKEA stores or on the official IKEA website.

## SUPPORT

---

For further assistance, spare parts, or detailed product information, please contact IKEA Customer Service or visit your

local IKEA store. You can find contact information and support resources on the official IKEA website:

[www.ikea.com](http://www.ikea.com)

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question