

Ikea 33243310-f40b-47c5-b1fc-5f5f689f6fe9

Ikea ÖVERSIDAN LED Wardrobe Lighting User Manual

Model: 33243310-f40b-47c5-b1fc-5f5f689f6fe9

1. INTRODUCTION

Welcome to the user manual for your new Ikea ÖVERSIDAN LED Wardrobe Lighting. This manual provides essential information on how to install, operate, maintain, and troubleshoot your lighting unit. Please read this manual carefully before use to ensure safe and optimal performance.

Product Overview

The Ikea ÖVERSIDAN LED wardrobe lighting is designed to illuminate the interior of your wardrobe, making it easier to see and choose your clothes. It features an integrated sensor for automatic on/off functionality and wireless dimming capabilities. The LED light source is energy-efficient and long-lasting, making it suitable for confined spaces like wardrobes, shelves, and cabinets due to its low heat emission.



Figure 1.1: The Ikea ÖVERSIDAN LED Wardrobe Lighting unit, a long, slim beige bar with a sensor in the middle.

2. PRODUCT FEATURES

- **Automatic On/Off:** The light automatically turns on when you open the wardrobe door and turns off when you close it, conserving energy.
- **Easy Installation:** Designed for simple installation on the wardrobe frame, on top, or under a shelf using the included accessories.
- **Integrated Cable Management:** Includes specially designed accessories to easily fix and manage cables.
- **Color Matching:** The LED light strip is available in colors that perfectly match PAX wardrobe frames.

- **Low Heat Emission:** Suitable for use in confined spaces like wardrobes and cabinets due to the LED light source emitting very little heat.
- **Enhanced Visibility:** Illuminates the wardrobe interior for easy viewing and selection of clothes, even in low light conditions.
- **Energy Efficient:** The LED light source consumes up to 85% less energy and lasts 20 times longer than incandescent bulbs.
- **Wireless Dimmable:** Allows for wireless dimming to easily adjust the lighting intensity based on your activity or preference.

3. WHAT'S IN THE BOX

Upon unpacking your Ikea ÖVERSIDAN LED Wardrobe Lighting, please ensure all components are present and undamaged.

- Ikea ÖVERSIDAN LED Wardrobe Lighting Unit (71 cm, Beige)
- Power Cable
- Installation Accessories (brackets, screws, cable clips)

4. SETUP AND INSTALLATION

The ÖVERSIDAN LED lighting is designed for straightforward installation. Follow these steps to properly install your unit.

1. **Choose Location:** Identify the desired location within your wardrobe. The light can be installed on the wardrobe frame, on top of a shelf, or underneath a shelf. Ensure the sensor area (small circular indentations on the light strip) is unobstructed for optimal performance.
2. **Secure the Unit:** Use the provided installation accessories (brackets and screws) to securely attach the LED light strip to your chosen surface. Ensure it is firmly mounted to prevent accidental dislodgement.
3. **Connect Power:** Connect the power cable to the LED light unit and then to a suitable power outlet.
4. **Manage Cables:** Utilize the included cable clips to neatly route and secure the power cable along the inside of your wardrobe. This helps maintain a tidy appearance and prevents snagging.



Figure 4.1: The LED light strip installed at the top of a wardrobe, illuminating clothes hanging below.

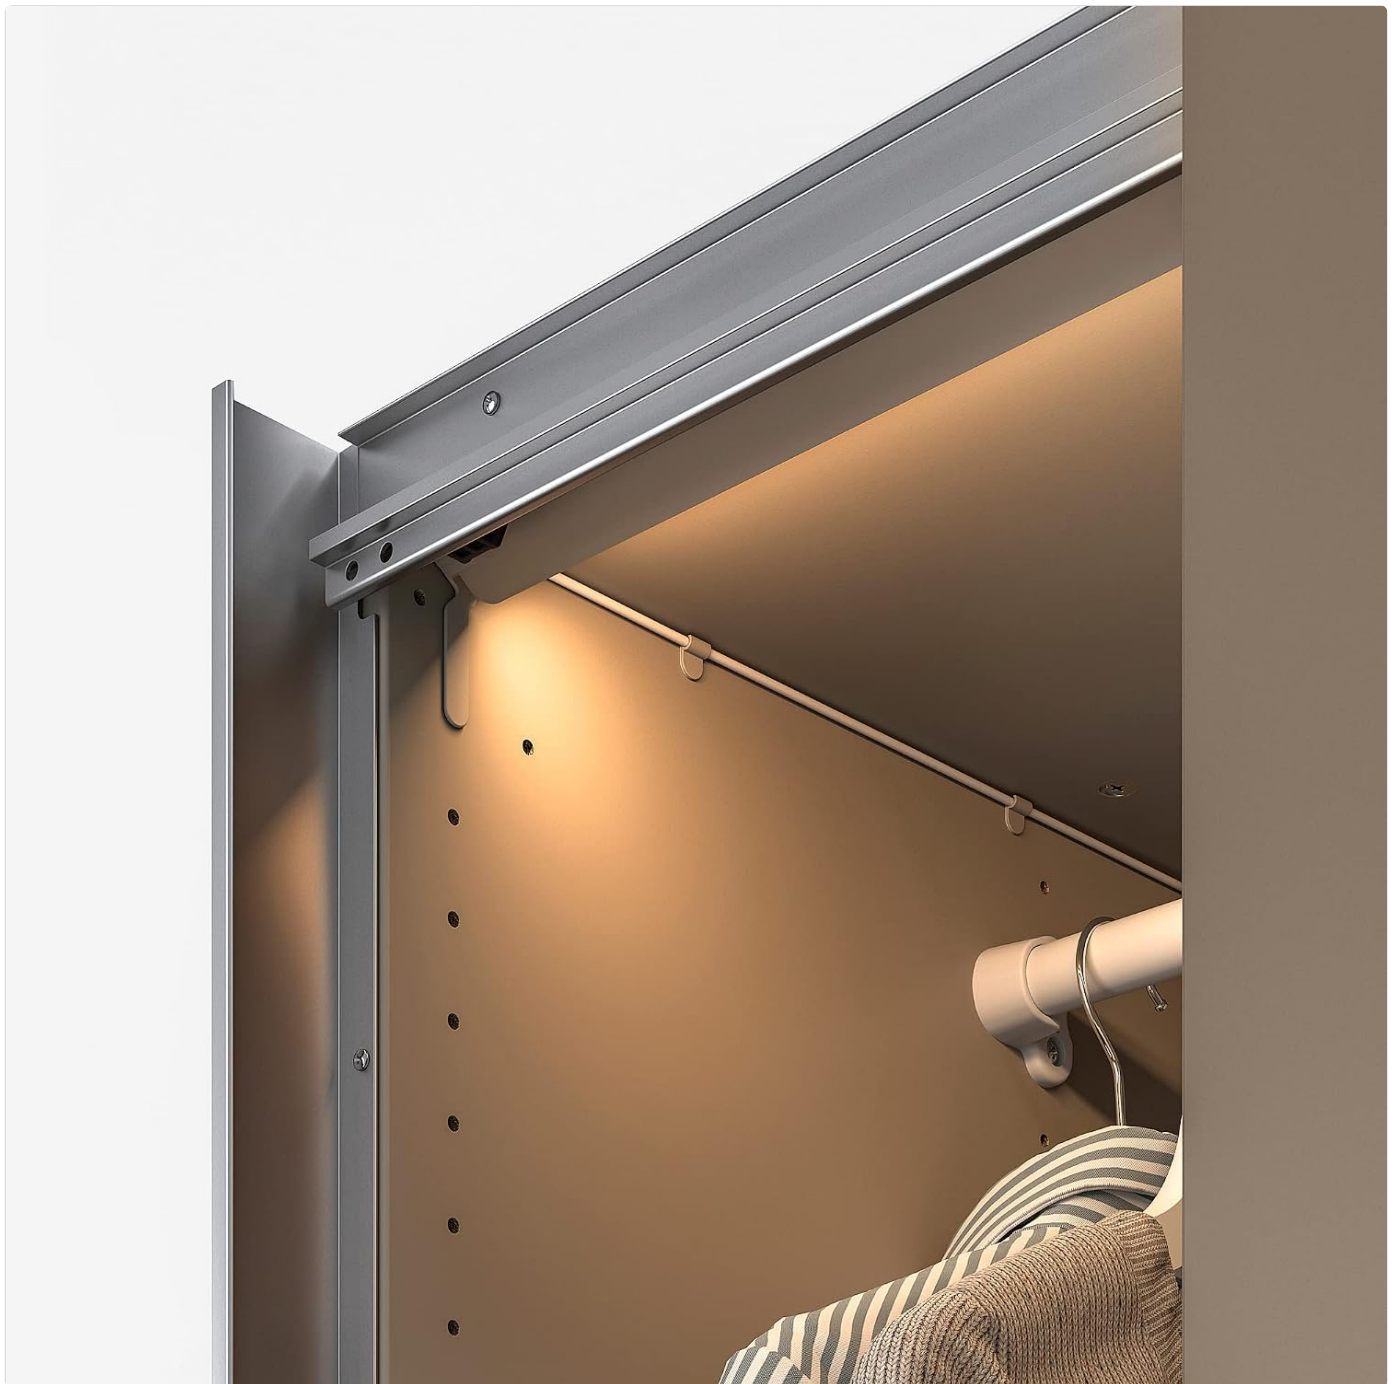


Figure 4.2: A closer view of the LED light strip mounted inside a wardrobe, showing the light distribution and the sensor area.



Figure 4.3: Example of cable management using the included clips to secure the power cable neatly along the wardrobe interior.

5. OPERATION

The ÖVERSIDAN LED lighting is designed for convenient and intuitive use.

Automatic Light Activation

The integrated sensor detects when the wardrobe door is opened or closed. The light will automatically turn on when the door is opened and turn off when the door is closed, ensuring light is only used when needed.



Figure 5.1: A close-up view of the integrated sensor on the LED light strip, responsible for automatic activation.

Wireless Dimming

The ÖVERSIDAN lighting can be wirelessly dimmed to adjust the brightness. This allows you to customize the illumination level to suit your needs, whether you prefer bright light for selecting outfits or a softer glow. Refer to your Ikea smart home device manual for pairing and dimming instructions.



Figure 5.2: A hand holding a wireless dimmer switch, demonstrating the dimmable feature of the LED wardrobe light.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your LED wardrobe lighting.

Cleaning

To clean the light unit, gently wipe it with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface or electronic components. Ensure the unit is unplugged before cleaning.

For more detailed information on how to clean and dispose of broken or deteriorated bulbs, please refer to official Ikea guidelines or contact customer support.

7. TROUBLESHOOTING

If you encounter any issues with your ÖVERSIDAN LED wardrobe lighting, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Light does not turn on automatically.	Sensor obstructed or dirty. Power connection issue.	Ensure the sensor area is clean and unobstructed. Check if the power cable is securely plugged in.
Light remains on.	Sensor continuously detecting movement/light. Door not fully closed.	Ensure the wardrobe door fully closes and does not allow light to reach the sensor. Check for any objects blocking the door from closing completely.
Light is not dimming.	Wireless dimmer not paired or out of range. Dimmer battery low.	Ensure the dimmer is correctly paired with the light unit and within operational range. Replace dimmer batteries if applicable.
Light flickers or is inconsistent.	Loose connection. Power supply issue.	Check all cable connections. Try plugging into a different power outlet.

If the problem persists after trying these solutions, please contact Ikea customer support for further assistance.

8. SPECIFICATIONS

Brand	Ikea
Manufacturer	IKEA
Model Number	33243310-f40b-47c5-b1fc-5f5f689f6fe9
Manufacturer Product ID	IK.904.749.09
Style	Modern
Color	Beige
Material	Metal
Number of Bulbs	1
Included Components	Cable
Special Feature	Dimmable
Power Source	Corded Electric
Switch Installation Type	Monopoint
Bulb Type	LED
Wattage	5 watts
Connectivity Protocol	Bluetooth

Indoor/Outdoor Use	Outdoor (Note: Product description implies indoor use for wardrobes, this might be a data discrepancy. User manual focuses on intended use.)
First Available Date	January 31, 2023

9. RECYCLING AND DISPOSAL

This product contains electronic components and should not be disposed of with general household waste. Please follow local regulations for the recycling of electrical and electronic equipment.

For specific information on recycling bulbs and proper disposal methods for this product, please refer to official Ikea recycling guidelines or contact your local waste management authority.

10. WARRANTY AND SUPPORT

For information regarding the warranty of your Ikea ÖVERSIDAN LED Wardrobe Lighting, please refer to the warranty card included with your purchase or visit the official Ikea website.

If you require further assistance, have questions, or need to report a defect, please contact Ikea customer support. You can find contact information on the Ikea website or in your purchase documentation.

© 2023 Ikea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

