

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA MAXIMERA Low Drawer 60x37 cm (Model IK.302.046.37) Instruction Manual

IKEA MAXIMERA

IKEA MAXIMERA Low Drawer 60x37 cm

Model: IK.302.046.37

This manual provides instructions for the IKEA MAXIMERA Low Drawer.

1. INTRODUCTION

The IKEA MAXIMERA low drawer is designed to provide efficient storage solutions within your furniture system. Featuring a full-extension mechanism, it allows complete access to its contents. This manual contains essential information for the safe assembly, proper use, and maintenance of your MAXIMERA drawer.

2. SAFETY INFORMATION

- Always follow the assembly instructions carefully to ensure proper function and safety.
- Do not exceed the maximum load capacity of 20 kg (44 lbs) for the drawer. Overloading can cause damage or injury.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Ensure all screws and fittings are securely tightened before use. Periodically check and re-tighten if necessary.
- This product is intended for indoor use only.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. Refer to the image for visual identification of parts.



Figure 1: Exploded view of the IKEA MAXIMERA low drawer. This image displays the main drawer box and the two metal drawer runners, which are essential for the drawer's functionality and full extension.

- Drawer box (1 unit)
- Drawer runners (2 units)
- Fasteners and screws (various, quantity as per assembly guide)

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires a screwdriver and may benefit from a rubber mallet. Follow the specific assembly instructions provided with your product packaging for detailed steps. The general process involves:

1. **Prepare the Cabinet Frame:** Ensure the cabinet frame where the drawer will be installed is clean and ready.
2. **Attach Drawer Runners to Cabinet:** Secure the cabinet-side drawer runners to the interior of your cabinet frame using the provided screws. Ensure they are level and correctly aligned according to the markings or pre-drilled holes.
3. **Assemble Drawer Box:** Construct the drawer box by connecting the side panels, front, and back panels. Insert the bottom panel into the grooves.
4. **Attach Drawer Runners to Drawer Box:** Secure the drawer-side runners to the assembled drawer box using the appropriate screws.
5. **Insert Drawer into Cabinet:** Carefully align the drawer-side runners with the cabinet-side runners and slide the drawer into the cabinet until it clicks into place.
6. **Test Functionality:** Open and close the drawer several times to ensure smooth operation and full extension.

5. OPERATING INSTRUCTIONS

The MAXIMERA low drawer is designed for ease of use and full accessibility.

- **Opening the Drawer:** Gently pull the drawer handle or front panel to open. The full-extension runners allow the drawer to slide out completely, providing an unobstructed view and access to all contents.
- **Closing the Drawer:** Push the drawer back into the cabinet until it is fully closed. Ensure no items are obstructing its path.
- **Organizing Contents:** Utilize drawer organizers (sold separately) to keep items tidy and maximize storage efficiency, as shown in Figure 2.



Figure 2: The IKEA MAXIMERA low drawer in use, demonstrating its capacity for organizing small items with internal dividers. The full extension allows easy access to all stored contents.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the drawer surfaces with a soft cloth dampened with water or a mild, non-abrasive cleaner. Dry thoroughly with a clean cloth. Avoid using harsh chemicals or abrasive materials that could damage the painted finish.
- **Inspection:** Periodically check the drawer runners and fasteners for any signs of wear or loosening. Re-tighten screws if necessary to maintain smooth operation.
- **Lubrication:** The drawer runners are designed for maintenance-free operation. Avoid applying lubricants unless specifically instructed by IKEA, as this may attract dust and hinder performance.

7. TROUBLESHOOTING

- **Drawer does not slide smoothly:**
 - Check if the drawer is overloaded. Reduce the weight if it exceeds 20 kg.
 - Ensure the drawer runners are clean and free from debris.
 - Verify that all screws attaching the runners to both the drawer and the cabinet frame are securely tightened.
 - Confirm that the cabinet frame itself is level and square.
- **Drawer does not close completely:**
 - Check for any items inside the drawer or cabinet that might be obstructing its path.
 - Inspect the drawer runners for any damage or misalignment.

8. SPECIFICATIONS

Model Name	MAXIMERA Low Drawer
Model Number	IK.302.046.37
Brand	IKEA
Color	White
Material	Plastic (Painted finish)
Assembled Width	56.4 cm (22.2 inches)
Frame Width	60 cm (23.6 inches)
Assembled Depth	33.7 cm (13.3 inches)
Frame Depth	37 cm (14.6 inches)
Assembled Height	7.8 cm (3.1 inches)
Maximum Load	20 kg (44 lbs)
Special Features	Full extension, Lockable

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, spare parts, or customer support, please refer to the documentation provided with your original purchase or visit the official IKEA website. Keep your proof of purchase for any warranty claims.
IKEA Official Website: www.ikea.com

© 2023 IKEA. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question