

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA TROTTEEN Sit/Stand Desk User Manual

IKEA TROTTEEN (cece34a1-ad8b-477c-8b83-7916e00fda06)

IKEA TROTTEEN Sit/Stand Desk User Manual

Model: TROTTEEN (cece34a1-ad8b-477c-8b83-7916e00fda06)

Brand: IKEA

1. INTRODUCTION

The IKEA TROTTEEN Sit/Stand Desk offers a flexible workspace solution, allowing users to easily switch between sitting and standing positions. This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your desk.




This image displays the IKEA TROTTEN Sit/Stand Desk from a frontal perspective, highlighting its beige tabletop and white adjustable legs. The desk is presented in a neutral setting, showcasing its clean design.

2. IMPORTANT SAFETY INFORMATION

- Always use the adjustable feet to ensure stability on uneven surfaces.
- Be cautious when adjusting the height to avoid injury.
- Do not leave the desk unattended while adjusting the height.
- Ensure no objects are obstructing the desk's movement during height adjustment.
- Keep children and pets away from the desk during operation.

3. ASSEMBLY INSTRUCTIONS

The IKEA TROTTEN Sit/Stand Desk requires assembly. It is recommended that one person performs the assembly. Please refer to the detailed assembly instructions provided in the product packaging for step-by-step guidance. Ensure all components, including the crank handle, are present before beginning assembly.

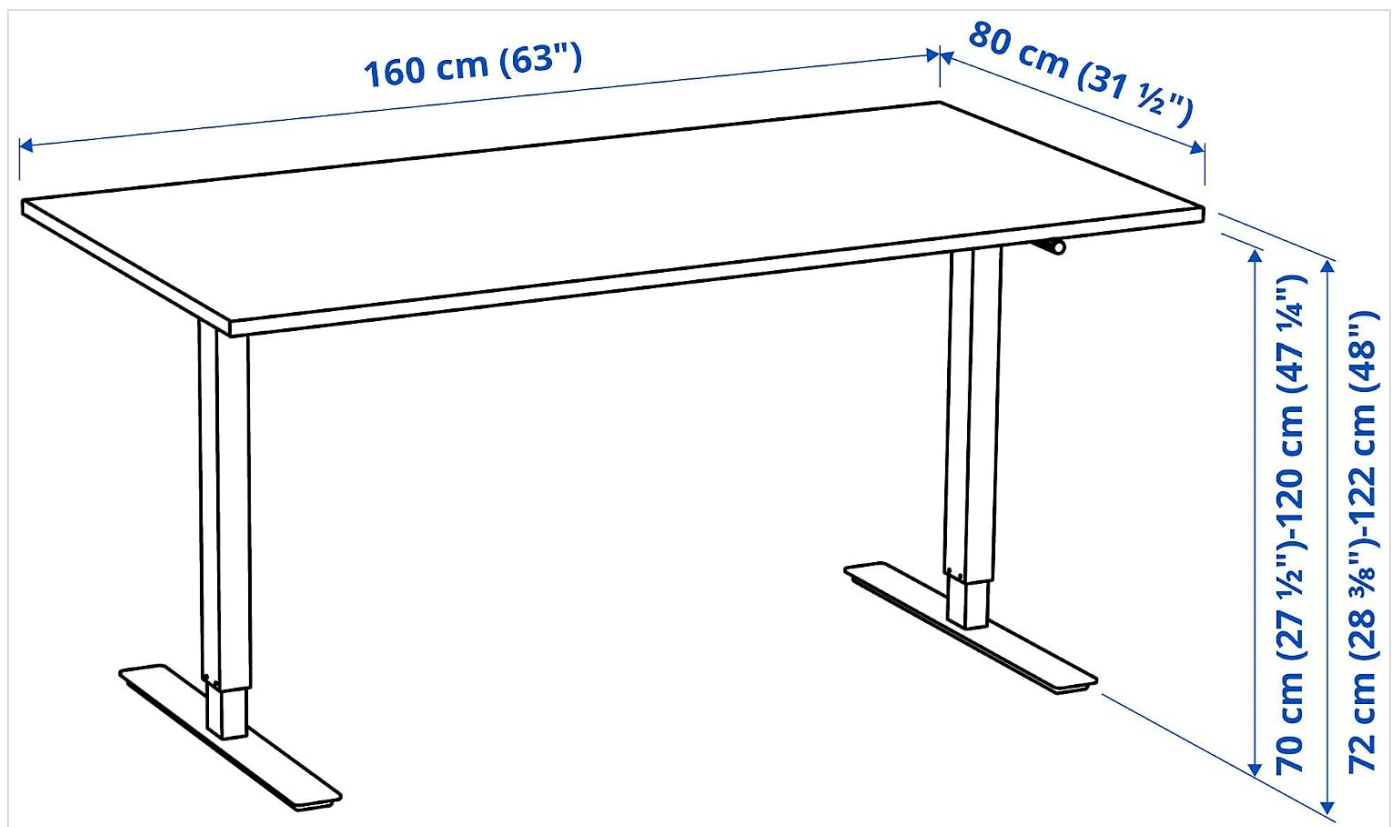

A line drawing illustrating the key dimensions of the TROTTEN desk, including its length (160 cm / 63 inches), width (80 cm / 31.5 inches), and adjustable height range (70-122 cm / 27.5-48 inches).

After assembly, ensure all screws and fasteners are securely tightened. Place the desk on a level surface and adjust the feet as necessary to prevent wobbling.



The TROTTE desk is shown integrated into a modern office space, surrounded by other IKEA furniture like storage units and a stool. This illustrates the desk's functional use in a typical workspace.

4. OPERATING INSTRUCTIONS

The TROTTE desk features a manual crank mechanism for height adjustment, allowing you to easily switch between sitting and standing positions.

1. **Locate the Crank Handle:** The crank handle is typically stored discreetly under the desk or can be attached to the designated slot on the side of the desk.
2. **Insert the Crank:** Insert the crank handle into the opening on the side of the desk frame.
3. **Adjust Height:**
 - To raise the desk, turn the crank handle clockwise.
 - To lower the desk, turn the crank handle counter-clockwise.
4. **Ensure Stability:** Adjust the desk to your desired height, ensuring it is stable before placing heavy items or beginning work.

5. **Remove/Store Crank:** Once the desired height is set, you can remove the crank handle and store it to prevent accidental adjustments or obstructions.



A close-up view of a hand engaging with the manual crank handle, which is used to adjust the desk's height. This highlights the primary mechanism for operating the sit/stand function.



This image provides a detailed look at the crank handle's attachment point and the underlying mechanism on the desk's frame, showing how it connects to facilitate height adjustments.

5. MAINTENANCE AND CARE

To ensure the longevity and appearance of your TROTTEEN desk, follow these care instructions:

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth.
- **Avoid Chemicals:** Do not use harsh chemicals, abrasive cleaners, or strong detergents, as these can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood and finish.
- **Inspection:** Periodically check all screws and fittings to ensure they are tight. Retighten if necessary.

6. TROUBLESHOOTING

If you encounter issues with your TROTTEEN Sit/Stand Desk, consider the following common solutions:

- **Desk is Wobbly:**
 - Ensure the desk is on a level surface.
 - Adjust the feet at the bottom of the legs to stabilize the desk.
 - Check all assembly screws and tighten them if loose.
- **Difficulty Adjusting Height:**
 - Ensure the crank handle is fully inserted into the mechanism.
 - Check for any obstructions under or around the desk that might be impeding movement.
 - Do not force the crank; if resistance is significant, re-check for obstructions or consult the assembly manual.
- **Unusual Noises During Adjustment:**
 - Minor mechanical sounds are normal.
 - If noises are loud or grinding, stop adjustment and inspect the mechanism for any visible issues or loose parts.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Name	TROTTEN
Model Number	cece34a1-ad8b-477c-8b83-7916e00fda06
Desk Design	Standing Desk
Color	Beige/White
Top Material Type	Wood
Base Material	Wood
Shape	Rectangular
Minimum Height	70 cm (27.5 inches)
Maximum Height	120 cm (47.2 inches)
Length	160 cm (63 inches)
Width	80 cm (31.5 inches)
Lifting Mechanism	Manual (Crank)
Included Components	Crank Handle
Required Assembly	Yes
Recommended Uses	Office, Working

8. WARRANTY INFORMATION

The IKEA TROTTEN Sit/Stand Desk comes with a **Limited Warranty**. This product is covered by a **comprehensive warranty** against defects in materials and workmanship under normal use. For specific terms, conditions, and duration of

the warranty, please refer to the warranty documentation included with your purchase or visit the official IKEA website.

Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, spare parts, or to report any issues not covered in this manual, please contact IKEA customer support. You can find contact information on the official IKEA website or through the details provided in your product packaging.

When contacting support, please have your product model name (TROTTE) and model number (cece34a1-ad8b-477c-8b83-7916e00fda06) readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question