

[Manuals.plus](#) /

› [Ikea](#) /

› Ikea BEKANT Right Corner Sit/Stand Desk User Manual

Ikea IK.290.225.01

Ikea BEKANT Right Corner Sit/Stand Desk

MODEL: IK.290.225.01

Product Overview

The Ikea BEKANT Right Corner Sit/Stand Desk is designed to provide a flexible and ergonomic workspace. Its electric height adjustment feature allows seamless transitions between sitting and standing positions, promoting better posture and increased activity throughout your workday. The desk combines robust construction with practical features like integrated cable management and a durable, easy-to-clean surface.



Image: The Ikea BEKANT Right Corner Sit/Stand Desk, shown in white, featuring its L-shaped tabletop and two adjustable legs.

Key Features

- **Electric Height Adjustment:** Easily adjust the tabletop height from 65 cm (25 5/8 inches) to 125 cm (49 1/4 inches) for an ergonomic working position.
- **Sit/Stand Functionality:** Promotes movement and helps improve well-being and work performance by allowing you to switch between sitting and standing.
- **Integrated Cable Management:** A cable management net located under the tabletop helps keep your workspace tidy and organized.
- **Durable Melamine Surface:** The tabletop surface is resistant to stains and easy to clean, ensuring long-lasting use.
- **Contoured Tabletop:** Provides comfortable support for wrists and forearms, enhancing comfort during extended use.
- **Generous Work Surface:** The deep tabletop offers ample space for your work essentials and allows for a comfortable viewing distance from your computer screen.

Setup and Assembly

Assembly of the Ikea BEKANT desk is required. Please refer to the detailed assembly instructions included with your product for step-by-step guidance. Ensure all components are present before beginning assembly. It is recommended to have two people for assembly due to the size and weight of the desk.

components.

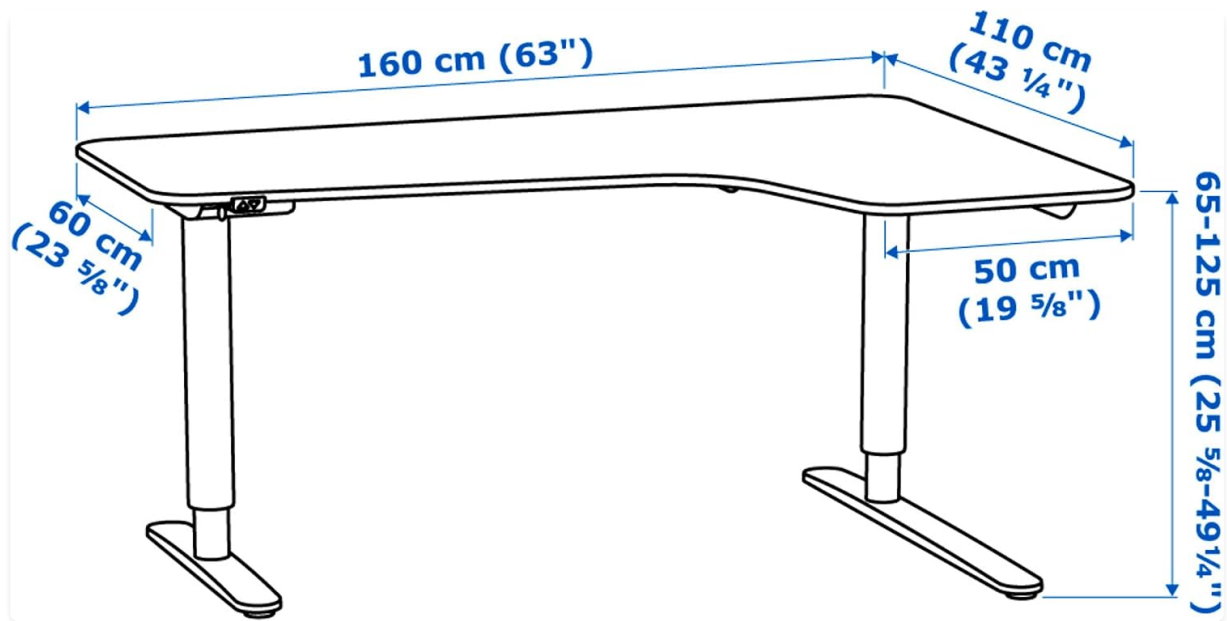


Image: A technical diagram illustrating the dimensions of the Ikea BEKANT desk, including its length (160 cm), depth (110 cm), and adjustable height range (65-125 cm).

Operating Instructions

The BEKANT desk features an electric motor for smooth height adjustments. To operate:

1. Ensure the desk is properly connected to a power outlet.
2. Locate the control panel, typically found on the underside of the tabletop near the front edge.
3. Press and hold the **up arrow** button to raise the desk to your desired standing height.
4. Press and hold the **down arrow** button to lower the desk to your desired sitting height.
5. Release the button once the desired height is reached. The desk will stop automatically.

Avoid placing objects that could obstruct the desk's movement during adjustment.



Image: A close-up of a hand pressing the height adjustment button, which is discreetly located on the underside of the desk's edge.

Cable Management

The integrated cable management net helps keep your cables organized and out of sight. Simply route your power cords and other cables through the net located beneath the tabletop to maintain a clean and clutter-free workspace.



Image: The underside of the Ikea BEKANT desk, revealing the mesh cable management net designed to neatly store and conceal power cords and other cables.

Maintenance and Care

To ensure the longevity and appearance of your BEKANT desk, follow these care instructions:

- **Cleaning:** Wipe the surface clean with a damp cloth and a mild cleaner. Dry with a clean cloth. Avoid abrasive cleaners or harsh chemicals that could damage the melamine surface.
- **Spills:** Immediately wipe up any spills to prevent staining, especially on the edges.
- **Motor Care:** The electric motor is maintenance-free. If you notice any unusual sounds or movements, refer to the troubleshooting section or contact customer support.
- **Cable Management:** Periodically check the cable management net for any loose cables or debris.

Troubleshooting

If you encounter issues with your BEKANT desk, try the following solutions:

- **Desk not adjusting height:**

- Check if the power cord is securely plugged into both the desk and the wall outlet.
 - Ensure there are no obstructions under or around the desk that might prevent movement.
 - If the motor has been used continuously for an extended period, it might have overheated. Allow it to cool down for 20-30 minutes before trying again.
- **Uneven height:**
 - Ensure the desk is on a level surface.
 - Perform a reset procedure (refer to the full assembly manual for specific steps, as this often involves lowering the desk to its lowest point and holding the down button for a few seconds).
 - **Unusual noises:**
 - Check for any loose screws or components.
 - Ensure cables are not interfering with moving parts.

If problems persist, please contact customer support.

Technical Specifications

Feature	Detail
Brand	Ikea
Model Number	IK.290.225.01
Shape	Rectangular (Corner)
Top Material Type	Wood (Melamine surface)
Adjustable Height Range	65 cm - 125 cm (25 5/8" - 49 1/4")
Assembly Required	Yes
Number of Drawers	N/A (Product description mentions 10 drawers, but this seems to be a general spec for 'desks' and not specific to this model, which has none visible or implied. Clarifying as 'N/A' for this specific model's features.)

Warranty Information

This Ikea BEKANT desk comes with a **10-year warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For full terms and conditions, refer to the warranty brochure provided with your product or visit the official Ikea website.

Customer Support

For further assistance, spare parts, or detailed troubleshooting not covered in this manual, please contact

Ikea customer support. You can find contact information and additional resources on the official Ikea website or by visiting your local Ikea store.

Website: www.ikea.com

© 2023 Ikea. All rights reserved.