

Manuals.plus /

> [IKEA](#) /

> IKEA UPPSPEL Gaming Desk User Manual - 180x80 cm, Black

IKEA UPPSPEL

IKEA UPPSPEL Gaming Desk User Manual

Model: UPPSPEL | Dimensions: 180x80 cm | Color: Black

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your IKEA UPPSPEL Gaming Desk. Please read these instructions carefully before assembly and operation, and retain them for future reference. The IKEA UPPSPEL Gaming Desk is designed to offer a versatile and ergonomic workspace with adjustable height functionality.

2. SAFETY INFORMATION

- Maximum Load Capacity:** Do not exceed the recommended weight limit of **70 kg (154 lbs)** on the desk surface. Overloading can cause instability and damage.
- Assembly and Anchoring:** Ensure proper assembly and anchoring of the desk according to the separate assembly instructions to guarantee stability.
- Clearance:** Ensure there are no obstructions above or below the desk when adjusting its height to prevent damage or injury.
- Children and Pets:** Keep children and pets away from the desk during height adjustment to prevent accidents.
- Power Cord:** Ensure the power cord is not pinched or damaged. Disconnect power before cleaning or maintenance.

3. PRODUCT OVERVIEW

The IKEA UPPSPEL Gaming Desk features an electric height adjustment mechanism, allowing you to switch between sitting and standing positions. It includes a durable black tabletop, sturdy metal legs, and integrated cable management solutions.



Figure 3.1: The IKEA UPPSPEL Gaming Desk in its assembled state, showcasing its black finish and adjustable legs.



Figure 3.2: The UPPSPEL desk integrated into a modern gaming environment, highlighting its spacious surface and ergonomic design.



Figure 3.3: Detail view of the integrated cable management system, designed to keep your workspace tidy and organized.



Figure 3.4: A smartphone charging via a conveniently located integrated USB port on the desk, illustrating a practical feature for users.

4. SETUP

Assembly of the IKEA UPPSPEL Gaming Desk is required. Please refer to the separate assembly instructions provided with your product for detailed, step-by-step guidance. Ensure all components are securely fastened and the desk is properly anchored for stability before use.

- **Unpacking:** Carefully unpack all components and verify against the parts list in the assembly guide.
- **Assembly:** Follow the graphical instructions for assembling the frame, legs, and tabletop.
- **Cable Connection:** Connect the power cable and control panel cable as instructed.
- **Placement:** Place the desk on a level surface, ensuring adequate space for height adjustment.

5. OPERATING INSTRUCTIONS

The UPPSPEL Gaming Desk features an intuitive control panel for height adjustment and memory presets.



Figure 5.1: A detailed view of the desk's control panel, showing the up/down arrows and memory preset buttons (1-4).



Figure 5.2: A hand demonstrating interaction with the control panel, illustrating the ease of height adjustment.

5.1. Adjusting Height

- **To Raise:** Press and hold the **Up arrow (▲)** button until the desired height is reached.
- **To Lower:** Press and hold the **Down arrow (▼)** button until the desired height is reached.

5.2. Using Memory Presets

The desk allows you to save up to four preferred height settings.

1. Adjust the desk to your desired height using the up/down arrows.
2. Press the **'M'** button (or similar memory set button, if present) once. The display may flash.
3. Within a few seconds, press one of the numbered preset buttons **1, 2, 3, or 4** to save the current height to that position.
4. To recall a saved height, simply press the corresponding numbered preset button **1, 2, 3, or 4**. The desk will automatically move to the saved position.



Figure 5.3: A user comfortably operating a keyboard at the UPPSPEL desk, demonstrating its suitability for extended use.

6. MAINTENANCE

Proper care ensures the longevity and optimal performance of your desk.

- **Cleaning:** Regularly clean and dust the desk surface and legs with a soft, damp cloth. Use a mild cleaning solution if necessary, and wipe dry immediately. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Electrical Components:** Keep the control panel and power connections dry. Do not attempt to service electrical components yourself.

7. TROUBLESHOOTING

If you encounter issues with your IKEA UPPSPEL Gaming Desk, consider the following common solutions:

- **Desk Not Moving:**
 - Check if the power cable is securely plugged into both the desk and the wall outlet.
 - Ensure the control panel cable is properly connected to the desk motor.
 - Verify that the wall outlet is functional by plugging in another device.
- **Uneven Movement:**
 - Ensure the desk is not overloaded beyond its 70 kg capacity.
 - Check that all leg components are securely tightened according to assembly instructions.
- **Error Codes on Display:**
 - If an error code appears, try unplugging the desk from the power outlet for 30 seconds, then plug it back in. This may reset the system.
 - Consult the IKEA support website or contact customer service for specific error code interpretations.

If these steps do not resolve the issue, please contact IKEA customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model	UPPSPEL
Dimensions (Length x Width)	180 cm x 80 cm (70.87 in x 31.5 in)
Minimum Height	75 cm (29.5 in)
Maximum Height	123 cm (48.4 in)
Maximum Load Capacity	70 kg (154 lbs)
Color	Black
Main Material	Processed Wood (Tabletop), Metal (Base)
Finish Type	Painted
Key Feature	Electric Height Adjustment
Assembly Required	Yes
Care Instructions	Clean and dust regularly

9. WARRANTY AND SUPPORT

The IKEA UPPSPEL Gaming Desk comes with a **3-year warranty**. Please refer to the warranty brochure provided with your product for detailed terms and conditions.

For technical support, spare parts, or warranty claims, please contact IKEA customer service through their official website or visit your nearest IKEA store. When contacting support, please have your product model (UPPSPEL) and purchase

information readily available.

© 2023 IKEA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BW8S1M51>

More documents and user manuals: <https://manuals.plus/>