

[Manuals.plus](#) /

› [Ikea](#) /

› Ikea GRÖNLID 3-Seater Sofa Cover with Chaise Lounge / Sporda Natural User Manual

Ikea IK.194.084.57

Ikea GRÖNLID 3-Seater Sofa Cover with Chaise Lounge / Sporda Natural User Manual

Model: IK.194.084.57

INTRODUCTION

This manual provides essential information for the proper setup, use, and maintenance of your Ikea GRÖNLID 3-Seater Sofa Cover with Chaise Lounge in Sporda Natural fabric. Please read this manual thoroughly before installation and retain it for future reference.

The GRÖNLID sofa cover is designed to refresh the look of your sofa and extend its lifespan. It features a durable SPORDA fabric blend of cotton, polyester, and linen, offering a textured surface with a two-tone effect. The cover is removable and machine washable for easy care.

SETUP AND INSTALLATION

Before installing the new cover, ensure your GRÖNLID sofa frame is clean and free from debris. It is recommended to have two people for easier installation.

1. **Preparation:** Remove the old sofa cover, if applicable. Ensure all cushions are removed from the sofa frame.
2. **Identify Sections:** The GRÖNLID cover comes in multiple sections (e.g., main sofa body, chaise lounge, armrests, cushions). Identify each piece before starting.
3. **Main Body Cover:** Carefully drape the largest section of the cover over the main sofa frame. Align seams with the sofa's edges.
4. **Chaise Lounge Cover:** Fit the chaise lounge cover over its respective frame section, ensuring a snug fit.
5. **Armrest Covers:** Slide the armrest covers onto the armrests. Secure them using any integrated fasteners (e.g., Velcro, zippers) if present.
6. **Cushion Covers:** Insert the seat and back cushions into their respective covers. Many cushion covers feature zippers for easy insertion.
7. **Secure and Adjust:** Once all sections are in place, smooth out any wrinkles. Secure the cover to the sofa frame using any ties, elastic bands, or Velcro strips provided on the cover. Ensure all zippers are fully closed.



Image: The Ikea GRÖNLID 3-seater sofa with chaise lounge, fully fitted with the Sporda Natural cover. This image illustrates the final appearance after successful installation.

OPERATING AND DAILY USE

The GRÖNLID sofa cover is designed for everyday use, providing a comfortable and durable surface for your sofa. While the term "operating" might not directly apply to a sofa cover, this section covers best practices for daily interaction.

- **Regular Adjustment:** Periodically smooth out any wrinkles or creases that may form from daily use to maintain a neat appearance.
- **Protect from Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric fading. Position your sofa away from direct, intense sunlight or use curtains/blinds.
- **Avoid Sharp Objects:** Prevent contact with sharp objects, pet claws, or abrasive materials that could snag or damage the fabric.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and appearance of your sofa cover. The Sporda Natural fabric is designed for easy care.

Cleaning Instructions:

- **Removability:** The cover is fully removable for cleaning. Unzip or unfasten all sections from the sofa frame and cushions.
- **Machine Washable:** Machine wash warm (40°C or 104°F), normal cycle. Wash separately. Do not bleach.
- **Drying:** Do not tumble dry. Line dry. Iron medium temperature (max 150°C or 300°F). Do not dry clean.
- **Spot Cleaning:** For small spills, gently blot with a clean, damp cloth. Avoid rubbing, which can spread the stain.



Image: A close-up of the folded Sporda Natural fabric, showcasing its texture and natural appearance. This fabric is designed for durability and ease of cleaning.



Image: A detailed view of a zipper on a cushion cover, highlighting the mechanism for easy removal and re-fitting of the cover for cleaning.

TROUBLESHOOTING

This section addresses common issues you might encounter with your sofa cover.

Problem	Possible Cause	Solution
Cover does not fit properly or is too tight/loose.	Incorrect cover size for your sofa model; improper installation; fabric shrinkage after washing.	• Verify the cover model number matches your GRÖNLID sofa. • Re-install the cover, ensuring all sections are correctly aligned and secured. • Ensure washing instructions were followed precisely to avoid shrinkage.

Problem	Possible Cause	Solution
Wrinkles or creases appear frequently.	Normal use; improper drying after washing.	- Smooth out wrinkles by hand regularly. - Iron the cover at a medium temperature after washing, as per care instructions.
Stains are difficult to remove.	Stain has set; incorrect cleaning method.	- Address spills immediately. - Follow the machine washing instructions carefully. For stubborn stains, consult a professional fabric cleaner.

SPECIFICATIONS

- Brand:** Ikea
- Model Number:** IK.194.084.57
- Product Type:** 3-Seater Sofa Cover with Chaise Lounge
- Fabric Name:** Sporda Natural
- Material Composition:** Cotton, Polyester, Linen blend
- Care Instructions:** Machine wash warm (40°C), normal cycle. Do not bleach. Line dry. Iron medium temperature (max 150°C). Do not dry clean.
- Pattern:** Solid
- Number of Items:** 1 (complete cover set)

WARRANTY INFORMATION

Specific warranty details for this product are typically provided at the point of purchase or on the official Ikea website. Please refer to your purchase receipt or visit [Ikea's official website](#) for the most current warranty policy applicable to textile products.

SUPPORT AND CONTACT

For further assistance, spare parts, or inquiries not covered in this manual, please contact Ikea customer service or visit your local Ikea store. You can find contact information and support resources on the official Ikea website: [Ikea Customer Service](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BW8SCYVW>

More documents and user manuals: <https://manuals.plus/>