



Manuals.plus /

› Ikea /

› Ikea TROFAST Frame User Manual

Ikea IK.801.538.00

Ikea TROFAST Frame User Manual

Brand: Ikea | Model: IK.801.538.00

1. PRODUCT OVERVIEW

The Ikea TROFAST frame is a versatile and sturdy storage series designed for organizing toys and creating a functional space for children to play and relax. Its robust construction ensures durability for everyday use.

This frame allows for a customizable storage solution. Users can combine various frames, storage boxes, and shelves to fit their specific space requirements and the child's needs. The frame is equipped with integrated guide rails, enabling flexible placement and rearrangement of storage boxes and shelves at any time.

The low height of the TROFAST frame makes it easily accessible for children, empowering them to reach and organize their belongings independently.

2. SETUP AND ASSEMBLY

Before beginning assembly, ensure all components are present and undamaged. Refer to the included assembly instructions and hardware pack for detailed steps. It is recommended to assemble the frame on a soft, clean surface to prevent scratches.

2.1. Required Tools

- Screwdriver (Phillips head recommended)
- Rubber mallet (optional, for gentle tapping)

2.2. Assembly Steps (General Guidelines)

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in the assembly guide.
2. **Attach Side Panels:** Secure the side panels to the base and top sections using the provided screws and dowels. Ensure all connections are tight and flush.
3. **Install Guide Rails:** Insert the plastic guide rails into the pre-drilled holes on the inner sides of the

frame compartments. These rails support the storage boxes and shelves.

4. **Secure Back Panel (if applicable):** If a back panel is included, attach it to the frame using the small nails or screws provided. This adds stability.
5. **Final Check:** Once assembled, gently shake the frame to ensure it is stable. Tighten any loose screws.

Safety Note: Always follow the specific assembly instructions provided with your product. If wall-anchoring hardware is included, it is highly recommended to secure the unit to a wall to prevent tipping, especially in households with children.

3. OPERATING INSTRUCTIONS

The TROFAST frame is designed for use with compatible Ikea TROFAST storage boxes and shelves (sold separately). The integrated guide rails allow for flexible configuration of your storage space.

3.1. Inserting Storage Boxes/Shelves

- Align the grooves on the sides of the TROFAST storage box or shelf with the guide rails inside the frame compartments.
- Gently slide the box or shelf into place until it rests securely on the rails.
- You can mix and match different sizes and colors of TROFAST boxes to create a personalized storage system.

3.2. Organizing Toys and Items

Utilize the various compartments and boxes to sort and organize toys, books, art supplies, or other items. The low height of the frame encourages children to participate in tidying up their play area.

4. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your TROFAST frame.

4.1. Cleaning

- Wipe clean with a damp cloth.
- Use a mild cleaner if necessary.
- Wipe dry with a clean cloth.
- Avoid using abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the surface finish.

4.2. General Care

- Periodically check all screws and fittings and re-tighten them as needed to ensure stability.
- Avoid exposing the frame to excessive moisture or direct sunlight for prolonged periods, which can cause warping or discoloration.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your TROFAST frame.

5.1. Instability After Assembly

- **Issue:** The frame feels wobbly or unstable.

- **Solution:** Re-check all screw connections and ensure they are fully tightened. Verify that all parts are correctly aligned according to the assembly instructions. If wall-anchoring hardware was provided, ensure it is properly installed.

5.2. Storage Boxes Not Sliding Smoothly

- **Issue:** TROFAST storage boxes are difficult to slide in or out.
- **Solution:** Ensure the guide rails are correctly inserted and not obstructed. Check that the storage boxes are not overloaded or warped.

For issues not covered here, please refer to the manufacturer's official support channels.

6. SPECIFICATIONS

Brand	Ikea
Model Number	IK.801.538.00
Color	White
Product Dimensions (L x W x H)	99 x 44 x 56 cm
Weight	23.56 kg
Material	Composed Wood
Special Features	Sturdy
Manufacturer	Ikea
ASIN	B0BW8SW657
First Available Date	January 31, 2023

7. PRODUCT IMAGES



Figure 1: Front view of the Ikea TROFAST frame in white, showcasing its three open compartments with guide rails for storage boxes.



Figure 2: Side view of the Ikea TROFAST frame, illustrating its dimensions: 99 cm length, 44 cm depth, and 56 cm height.

8. WARRANTY AND SUPPORT

Specific warranty information for the Ikea TROFAST frame is typically provided with the product packaging or available on the official Ikea website. Please retain your proof of purchase for any warranty claims.

For customer support, assembly assistance, or to inquire about replacement parts, please visit the official

Ikea support page or contact their customer service directly. You can find contact information and FAQs on the Ikea Customer Service website.