

IKEA METOD

IKEA METOD Corner Base Cabinet with Carousel (88x88 cm) User Manual

Model: METOD | Brand: IKEA

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your IKEA METOD Corner Base Cabinet with Carousel. Designed for efficient kitchen storage, this cabinet features a sturdy 18 mm thick frame and a rotating carousel system with vertically adjustable shelves, ideal for organizing pots, pans, and dry goods. Please read this manual thoroughly before beginning assembly or use to ensure proper installation and longevity of your product.

2. PRODUCT OVERVIEW

The IKEA METOD Corner Base Cabinet is a modular kitchen unit designed to maximize storage in corner spaces. It includes a built-in carousel mechanism for easy access to items stored deep within the cabinet.

Key Features:

- **Efficient Corner Storage:** Utilizes often-underused corner space effectively.
- **Integrated Carousel:** Provides easy access to stored items with rotating shelves.
- **Adjustable Shelves:** Shelves can be moved vertically to accommodate various item heights.
- **Durable Construction:** Features an 18 mm thick frame for stability and longevity.
- **Versatile Storage:** Suitable for pots, pie dishes, dry goods, and other kitchen essentials.



Figure 1: The IKEA METOD Corner Base Cabinet, showing the main frame and a front panel. This image illustrates the overall structure of the cabinet before full assembly, highlighting the corner design.

3. SETUP AND ASSEMBLY

Assembly of the IKEA METOD Corner Base Cabinet requires basic tools and adherence to the provided instructions. It is recommended to have two people for certain assembly steps.

3.1 Unpacking and Part Identification

1. Carefully unpack all components from the packaging.
2. Verify that all parts listed in the assembly instructions (typically included in the product packaging) are present and undamaged.
3. Separate hardware (screws, dowels, hinges) into distinct groups for easier access.

3.2 Frame Assembly

1. Begin by assembling the main cabinet frame panels according to the detailed diagrams in your IKEA assembly guide. Ensure all cam locks and dowels are securely fastened.
2. Attach the back panel to the assembled frame.

3. Install the cabinet legs or plinth system as per the instructions.

3.3 Carousel and Shelf Installation

1. Install the central pole for the carousel system into the cabinet frame.
2. Attach the carousel shelves to the central pole. The shelves are designed to be vertically adjustable; position them at desired heights before securing.
3. Ensure the carousel rotates smoothly without obstruction.



Figure 2: The interior of the cabinet, showcasing the fully installed carousel system with various kitchen pots. This image demonstrates the functional aspect of the rotating shelves and their capacity.

3.4 Door Panel Attachment

1. Attach the hinges to the cabinet frame and the door panel.
2. Mount the door panel onto the cabinet frame, ensuring proper alignment.
3. Adjust the hinges as necessary to ensure the door closes flush and operates smoothly.



Figure 3: A close-up view of the Voxtorp oak effect door panel, highlighting its texture and design. This detail shows the aesthetic finish of the cabinet's exterior.

4. OPERATING INSTRUCTIONS

4.1 Using the Carousel

- Open the cabinet door fully to allow unrestricted rotation of the carousel.
- Gently rotate the shelves to bring desired items to the front. Avoid forcing the rotation if resistance is met.
- Distribute weight evenly on the shelves to maintain balance and smooth operation.

4.2 Adjusting Shelf Height

- To adjust a shelf's height, first remove all items from that shelf.
- Locate the shelf support clips or mechanism on the central pole.
- Disengage the clips, reposition the shelf to the desired height, and re-engage the clips securely. Ensure the shelf is level before placing items back.

5. MAINTENANCE AND CARE

5.1 Cleaning

- Wipe the cabinet surfaces (frame, doors, shelves) with a damp cloth and a mild cleaner.
- Dry immediately with a clean, soft cloth to prevent moisture damage.
- Avoid abrasive cleaners, scouring pads, or chemical solvents, as these can damage the finish.

5.2 General Care

- Periodically check all screws and fittings and tighten them if necessary to ensure stability.
- Avoid placing excessively heavy items on the shelves, especially on the carousel, to prevent strain on the mechanism.
- Protect surfaces from excessive heat and moisture.

6. TROUBLESHOOTING

6.1 Carousel Not Rotating Smoothly

- **Check for Obstructions:** Ensure no items are blocking the rotation path of the shelves.
- **Even Weight Distribution:** Redistribute items on the shelves to ensure weight is balanced.
- **Tighten Central Pole:** Verify that the central pole of the carousel is securely fastened at both the top and bottom.

6.2 Door Not Closing Properly

- **Hinge Adjustment:** Adjust the screws on the hinges to align the door. Refer to the specific hinge adjustment instructions provided with your IKEA hardware.
- **Obstruction:** Check for any items inside the cabinet that might be preventing the door from closing fully.

6.3 Cabinet Wobbles

- **Leveling:** Ensure the cabinet is placed on a level surface. Adjust the cabinet legs if applicable.
- **Tighten Fasteners:** Re-tighten all assembly screws and fasteners throughout the cabinet frame.

7. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model	METOD Corner Base Cabinet with Carousel
Dimensions (L x W x H)	35.28 x 34.45 x 34.65 inches (approx. 88x88 cm)
Color	White / Voxtorp Oak Effect
Mounting Type	Floor Mount
Room Type	Kitchen, Living Room
Included Components	Shelves (Carousel system)
Number of Shelves	2 (carousel shelves)

Feature	Detail
Frame Material	Wood
Assembly Required	Yes
Date First Available	February 15, 2023

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official IKEA website or the warranty documentation included with your purchase. IKEA products typically come with specific warranty periods covering defects in materials and workmanship.

For customer support, spare parts, or further assistance with assembly and troubleshooting, please contact IKEA customer service directly. You can find contact information on the official IKEA website or in your purchase documentation.

- **IKEA Official Website:** www.ikea.com
- **Customer Service:** Refer to your local IKEA store or regional website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

