

[Manuals.plus](#) /

> [Ikea](#) /

> IKEA HEMNES Open Wardrobe User Manual

Ikea IK.103.793.03

IKEA HEMNES Open Wardrobe User Manual

Model: IK.103.793.03

PRODUCT OVERVIEW

The IKEA HEMNES Open Wardrobe is designed to provide accessible storage for your clothing and accessories. Crafted from solid pine wood, it offers a durable and natural aesthetic that can be combined with other items from the HEMNES series.





Figure 1: Front view of the IKEA HEMNES Open Wardrobe, showcasing its open design with a top rail for hangers and a lower shelf with three compartments.

This open wardrobe provides a clear overview of your garments, making them easy to access. Its solid wood construction ensures longevity, and the material's natural properties allow it to age gracefully.



Figure 2: The HEMNES Open Wardrobe integrated into a room, displaying clothes on hangers and a basket on the lower shelf, demonstrating its practical use.

SAFETY INFORMATION

WARNING! Tipping Hazard.

To prevent the wardrobe from tipping over, it must be securely fastened to the wall using the provided anti-tip hardware. Always follow the assembly instructions carefully for proper installation.

Do not exceed the recommended load capacity for the hanging rail or shelves. Overloading can compromise stability and lead to damage or injury.

SETUP AND ASSEMBLY

The IKEA HEMNES Open Wardrobe requires assembly. Please ensure all components are present before beginning. Refer to the separate assembly instructions provided with your product for detailed, step-by-step guidance.

Required Tools (Not Included):

- Screwdriver (Phillips head)
- Hammer
- Drill (for wall mounting, if applicable)
- Level
- Measuring tape

Key Assembly Steps:

1. Unpack all components and verify against the parts list in the assembly manual.
2. Assemble the main frame according to the diagrams.
3. Install the lower shelf and internal compartments.
4. Attach the top hanging rail.
5. **Crucial:** Securely fasten the wardrobe to a suitable wall material using the anti-tip device. Use appropriate wall plugs and screws for your wall type (e.g., drywall, concrete, wood studs).

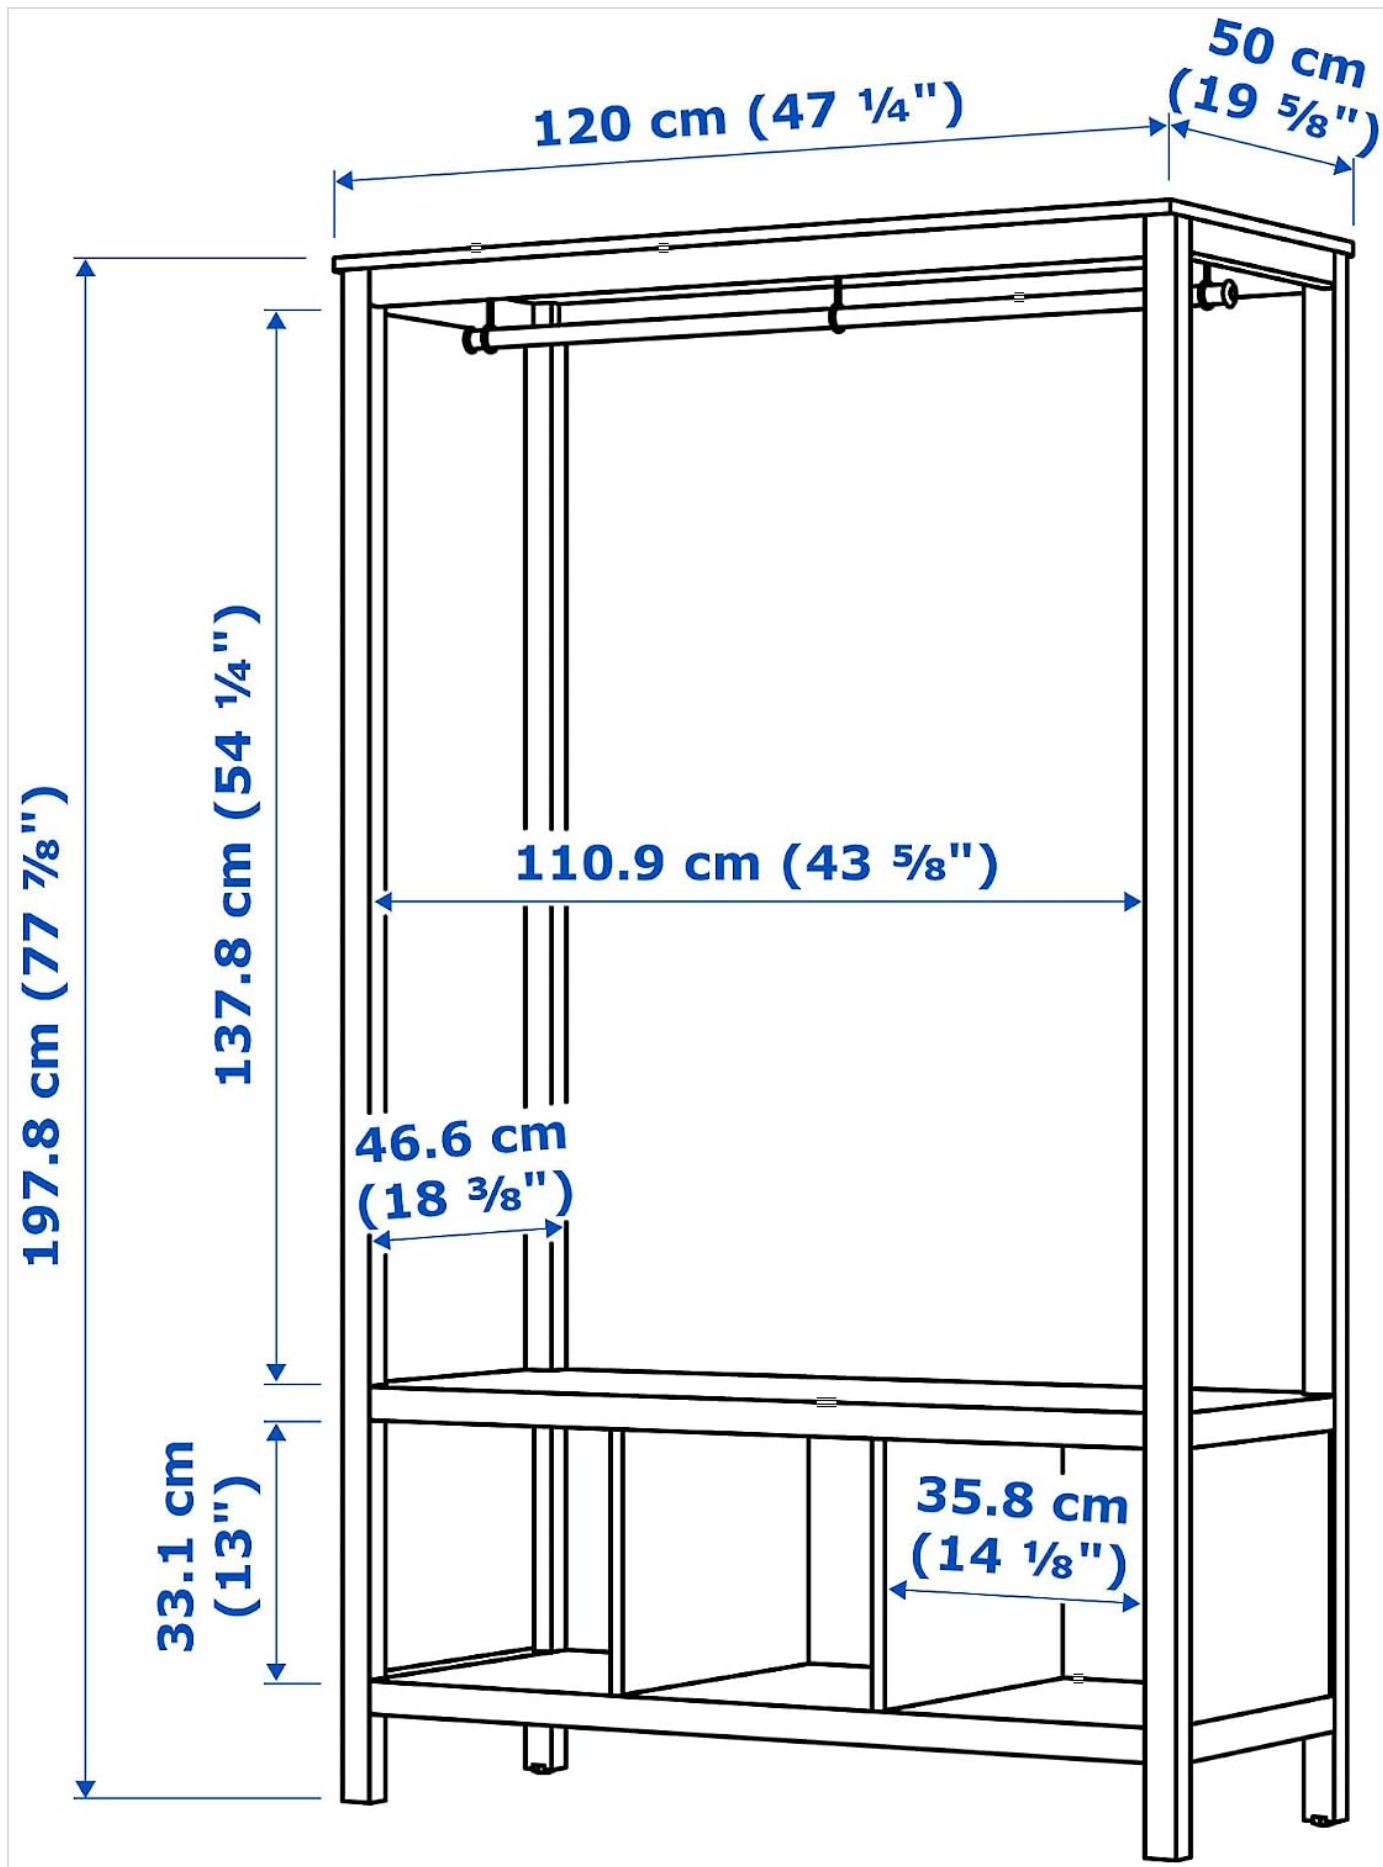


Figure 3: Dimensional diagram of the HEMNES Open Wardrobe, indicating overall height, width, depth, and internal measurements for planning placement and use.

The HEMNES Open Wardrobe is designed for straightforward use. Its open design allows for easy access to your items.

Using the Hanging Rail:

Hang clothes directly on the rail using standard hangers. Ensure the weight is distributed evenly and does not exceed the maximum load capacity to prevent sagging or damage.



Figure 4: The wardrobe in use, demonstrating how various clothing items can be hung and how the lower compartments can be utilized with storage boxes for organization.

Using the Lower Shelf and Compartments:

The lower shelf provides space for folded items, shoes, or storage boxes. The three compartments are ideal for organizing smaller items or specific categories of clothing.



Figure 5: A close-up view of clothes neatly hung on the wardrobe's rail, illustrating the ample space for various garments.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your HEMNES Open Wardrobe, follow these care instructions:

- **Cleaning:** Wipe clean with a damp cloth. For stubborn marks, use a mild soap solution. Dry thoroughly with a clean cloth.
- **Dusting:** Regularly dust the surfaces with a soft, dry cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong solvents, or polishes containing silicone, as these can damage the finish.
- **Sunlight Exposure:** Prolonged exposure to direct sunlight may cause the wood to fade or change color over time.
- **Humidity:** Maintain a stable room temperature and humidity level to prevent wood from warping or cracking.
- **Re-tighten Fasteners:** Periodically check and re-tighten all assembly fasteners to ensure stability.



Figure 6: A detailed view of the white stained wood surface, highlighting the natural grain and finish of the HEMNES series material.

TROUBLESHOOTING

Common Issues and Solutions		
Problem	Possible Cause	Solution
Wardrobe feels wobbly/unstable.	Fasteners are loose; not properly secured to the wall.	Re-tighten all screws and bolts. Ensure the anti-tip device is correctly installed and securely anchored to a solid part of the wall.
Wood appears discolored or faded.	Prolonged exposure to direct sunlight.	Relocate the wardrobe away from direct sunlight if possible. This is a natural characteristic of wood over time.
Difficulty assembling a part.	Incorrect orientation; missing a step.	Refer to the detailed assembly instructions. Ensure parts are oriented correctly and all steps are followed sequentially. Do not force components.

SPECIFICATIONS

Attribute	Detail
Brand	IKEA
Model Number	IK.103.793.03
Color	White Stained
Dimensions (L x W x H)	120 x 50 x 197 cm (approx. 47.2 x 19.7 x 77.6 inches)
Material	Solid Pine Wood
Mounting Type	Floor Mount (requires wall fastening)
Door Style	Open Frame
Included Components	Shelf, Hanging Rail
Finish Type	Natural
Shape	Rectangular

Note: Dimensions are approximate and may vary slightly.

WARRANTY AND SUPPORT

IKEA products typically come with a limited warranty. Please retain your proof of purchase for warranty claims. For specific warranty details, refer to the documentation provided at the time of purchase or visit the official IKEA website for your region.

For assembly assistance, missing parts, or other product-related inquiries, please contact IKEA Customer Service. You can find contact information on the official IKEA website (www.ikea.com) or through your local IKEA store.

