



Manuals.plus /

› IKEA /

› Ikea PAX Corner Wardrobe Instruction Manual

IKEA IK.894.202.91

Ikea PAX Corner Wardrobe Instruction Manual

Model: IK.894.202.91

1. INTRODUCTION

Thank you for choosing the Ikea PAX Corner Wardrobe. This versatile storage system is designed to maximize space in your room, offering customizable solutions for organizing clothes and accessories. This manual provides essential information for safe assembly, proper use, and maintenance of your new wardrobe.

2. SAFETY INFORMATION

- **Wall Attachment:** It is crucial to secure the wardrobe to the wall using the provided anti-tip device. Different wall materials require different types of fastening devices. Use fastening devices suitable for the walls in your home (sold separately).
- **Assembly:** Assembly should be performed by at least two adults due to the size and weight of the components.
- **Weight Distribution:** Distribute weight evenly on shelves and in drawers to prevent tipping or damage.
- **Children's Safety:** Do not allow children to climb on or play with the wardrobe. Keep small parts out of reach of children during assembly.

3. PARTS LIST

A detailed list of all components, including hardware and panels, is provided in the packaging of your PAX Corner Wardrobe. Please verify all parts are present before beginning assembly. If any parts are missing or damaged, contact IKEA customer service.

4. SETUP AND ASSEMBLY

Follow these general steps for assembling your PAX Corner Wardrobe. Refer to the detailed graphical instructions included in your product packaging for specific, step-by-step guidance.

1. **Prepare the Area:** Clear a spacious area for assembly. Lay down a blanket or cardboard to protect the floor and furniture components.

2. **Assemble the Frames:** Begin by assembling the main wardrobe frames according to the instructions. Ensure all cam locks and dowels are securely fastened.
3. **Attach Back Panels:** Slide and secure the back panels into the grooves of the assembled frames.
4. **Connect Corner Units:** Carefully connect the corner wardrobe frames as indicated in the instructions, ensuring a stable and flush fit.
5. **Install Interior Fittings:** Once the main structure is stable, install shelves, clothes rails, and drawer runners.
6. **Mount Doors (if applicable):** Attach hinges to the doors and then to the wardrobe frames. Adjust hinges for proper door alignment.
7. **Secure to Wall:** Use the provided anti-tip device to securely fasten the wardrobe to a wall stud or appropriate wall anchor. This step is critical for safety.



Image: The assembled structure of the Ikea PAX Corner Wardrobe, showing the empty compartments ready for interior fittings. This image illustrates the basic frame setup.

5. OPERATING INSTRUCTIONS

The PAX Corner Wardrobe is designed for flexible storage. Here's how to make the most of its features:

- **Adjusting Shelves:** The shelves can be moved to different heights by repositioning the shelf pins in the pre-drilled holes along the side panels. Ensure shelves are level and securely seated.
- **Using Drawers:** Pull drawers out smoothly using the handles. Avoid overloading drawers to ensure smooth operation and prevent damage to the runners.
- **Hanging Rails:** Utilize the hanging rails for clothes that require hanging. Distribute weight evenly across the rail.

- **Door Operation:** Open and close doors gently. If doors are misaligned, adjust the hinges using a screwdriver as per the hinge instructions.



Image: The Ikea PAX Corner Wardrobe showcasing its interior filled with various items like clothes, shoes, and drawers, illustrating its practical use and storage capabilities.

6. MAINTENANCE

Proper care will extend the life of your wardrobe:

- **Cleaning:** Wipe clean with a damp cloth and a mild cleaner. Wipe dry with a clean cloth. Avoid abrasive cleaners or harsh chemicals.
- **Checking Fasteners:** Periodically check all assembly fasteners (screws, cam locks) and re-tighten if necessary to ensure stability.
- **Door and Drawer Alignment:** If doors or drawers become misaligned over time, adjust their hinges or runners as needed.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wardrobe feels wobbly	Loose fasteners; not secured to wall.	Tighten all screws and cam locks. Ensure the wardrobe is securely fastened to the wall using the anti-tip device.
Drawers do not slide smoothly	Overloaded drawer; misaligned runners; debris in runners.	Reduce weight in the drawer. Check if runners are correctly installed and aligned. Clean any dust or debris from the runners.
Doors are misaligned or do not close properly	Hinges need adjustment; frame not level.	Adjust the screws on the hinges to align the doors. Ensure the wardrobe frame is level on the floor.

8. SPECIFICATIONS

- **Product Type:** Corner Wardrobe
- **Model Name:** PAX
- **Model Number:** IK.894.202.91
- **Dimensions:** Approximately 211/213 cm (height) x 201 cm (width along each wall)
- **Color:** White
- **Primary Material:** Particleboard, Fiberboard, Plastic edging, Melamine foil
- **Recommended Use:** Storage for clothes, shoes, and accessories in bedrooms or dressing areas.

9. WARRANTY AND SUPPORT

IKEA products come with a limited warranty. For specific warranty terms and conditions, please refer to the warranty information provided at the time of purchase or visit the official IKEA website. For customer support, missing parts, or further assistance, please contact your local IKEA store or IKEA customer service through their official channels. You can find more information and contact details on the official IKEA website www.ikea.com

