

IKEA SÖDERHAMN Gransel Natural

IKEA SÖDERHAMN Chaise Longue Cover Instruction Manual

Model: SÖDERHAMN Gransel Natural

PRODUCT OVERVIEW

This manual provides essential information for the proper use and maintenance of your IKEA SÖDERHAMN chaise longue cover in Gransel natural fabric.

The Gransel fabric is a blend of linen and viscose, offering a subtle luster and a natural, vibrant texture due to varying thread sizes. This cover is designed to refresh the look of your SÖDERHAMN chaise longue and is easy to maintain.

Featuring a loose fit and a long valance that extends to the floor, this cover gives your SÖDERHAMN chaise longue a distinctive and elegant appearance. The upholstery has a slight luster with a natural finish.

SETUP AND INSTALLATION

Installing your new SÖDERHAMN chaise longue cover is a straightforward process. Ensure your chaise longue frame is clean and free of debris before installation.

- Preparation:** If replacing an old cover, carefully remove it from the chaise longue frame.
- Unpack the Cover:** Gently unfold the new Gransel natural cover.
- Positioning:** Begin by aligning the cover with the backrest and seat sections of your SÖDERHAMN chaise longue. The cover is designed with a loose fit.
- Securing:** Smooth the fabric over the cushions and frame. Ensure the long valance sheet extends evenly to the floor around the base of the chaise longue. Adjust as needed to achieve the desired look.



Image: The SÖDERHAMN chaise longue cover, neatly folded, showcasing its Gransel natural fabric.



Image: A SÖDERHAMN chaise longue with the Gransel natural cover fully installed, demonstrating its loose fit and floor-length valance.

OPERATING AND DAILY USE

Once installed, your SÖDERHAMN chaise longue cover is ready for daily use. The durable Gransel fabric is designed for comfort and longevity.

- **Comfort:** Enjoy the enhanced comfort and refreshed appearance of your chaise longue.
- **Protection:** The cover protects your chaise longue's original upholstery from spills, stains, and wear.
- **Versatility:** Having extra covers allows you to easily change the look of your chaise longue and room.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your SÖDERHAMN chaise longue cover. The cover is designed for easy cleaning.

- **Machine Washable:** The cover can be machine washed. Always refer to the care label attached to the cover for specific washing instructions, including temperature and cycle recommendations.
- **Removal:** The cover is easy to take off for cleaning.
- **Re-installation:** After washing and drying, the cover is easy to put back on the chaise longue.
- **Spot Cleaning:** For minor spills, gently blot the area with a clean, damp cloth. Avoid rubbing vigorously, which can spread the stain.

TROUBLESHOOTING

Most issues with the SÖDERHAMN chaise longue cover can be easily resolved.

Problem	Possible Cause	Solution
Cover does not fit properly.	Incorrect alignment during installation.	Remove the cover and re-install, ensuring it is evenly aligned with the chaise longue frame and cushions. Smooth out any wrinkles.
Fabric appears wrinkled after washing.	Over-drying or improper folding.	While the fabric has a natural texture, some wrinkles are normal. For a smoother appearance, re-install the cover while slightly damp and allow it to air dry on the chaise longue, or use a low-heat iron if permitted by the care label.
Stains are not coming out.	Incorrect cleaning method or stubborn stain.	Ensure you are following the machine wash instructions precisely. For stubborn stains, consider professional upholstery cleaning. Avoid harsh chemicals.

SPECIFICATIONS

Attribute	Detail
Brand	IKEA
Model Name	SÖDERHAMN cover for chaise longue, Gransel natural
ASIN	B0BW8TS1V9
Pattern	Solid
Product Care Instructions	Machine Wash
Number of Items	1
Date First Available	February 15, 2023

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support for your IKEA SÖDERHAMN chaise longue cover, please refer to the documentation provided at the time of purchase or visit the official IKEA website. Keep your proof of purchase for any warranty claims.

For additional assistance or inquiries, please contact IKEA customer service directly.