

[Manuals.plus](#) /

› [Ikea](#) /

› IKEA Pax Corner Wardrobe User Manual

Ikea IK.494.202.93

IKEA Pax Corner Wardrobe User Manual

Model: IK.494.202.93

1. INTRODUCTION

This manual provides detailed instructions for the assembly, safe use, and maintenance of your IKEA Pax Corner Wardrobe. Designed for optimal storage in corner spaces, this wardrobe system offers versatile solutions for organizing clothing and accessories. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. SAFETY INFORMATION

WARNING: This furniture can be heavy and difficult to handle. Ensure it is mounted correctly and remains stable to prevent any risk of falling or injury. Pay attention to pinch points when operating doors and drawers. Always use appropriate tools and follow the assembly instructions provided by IKEA.

- Always secure the wardrobe to the wall using the anti-tip device provided. This is crucial to prevent serious or fatal crushing injuries.
- Ensure all screws and fittings are tightened securely before use and periodically check them for tightness.
- Do not allow children to climb on or play with the wardrobe.
- Distribute weight evenly across shelves and in drawers to maintain stability.

3. SETUP AND ASSEMBLY

The IKEA Pax Corner Wardrobe is designed for self-assembly. Detailed step-by-step instructions are included with the product packaging. It is highly recommended to assemble the wardrobe with at least two people due to its size and weight.

3.1 Required Tools

- Hammer
- Screwdriver (Phillips and Flathead)
- Measuring tape
- Level

- Drill (for wall mounting)

3.2 Assembly Steps Overview

1. Unpack all components and verify against the parts list in the IKEA assembly guide.
2. Assemble the main frames according to the numbered steps.
3. Install shelves, clothes rails, and drawers as desired.
4. Attach doors and adjust hinges for proper alignment.
5. Secure the wardrobe to the wall using the provided anti-tip device and appropriate wall fasteners for your wall type.



Image: The interior of the IKEA Pax Corner Wardrobe, showcasing its modular design with various compartments for storage. This image illustrates the potential layout before items are placed inside.

4. OPERATING THE WARDROBE

The Pax wardrobe system is designed for ease of use and customization. Its various components allow for efficient organization.

4.1 Doors and Drawers

- Open and close doors gently to prevent wear on hinges and frames.
- Pull drawers out smoothly and push them back fully to ensure they are properly closed.

- Avoid overloading drawers and shelves beyond their recommended weight capacity to prevent damage or instability.



Image: The IKEA Pax Corner Wardrobe, fully utilized with various clothing items, shoes, and accessories neatly organized within its shelves, drawers, and hanging sections. This demonstrates the wardrobe's practical storage capabilities.

5. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your IKEA Pax wardrobe.

- **Cleaning:** Wipe clean with a cloth dampened in a mild cleaner. Then wipe dry with a clean cloth. Avoid abrasive cleaners or harsh chemicals that can damage the finish.
- **Hardware Check:** Periodically check all assembly fittings and screws to ensure they are tight. Re-tighten if necessary.
- **Ventilation:** Ensure adequate air circulation, especially if storing clothes for long periods, to prevent mustiness.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter with your wardrobe.

- Wobbly Wardrobe:**
Solution: Ensure the wardrobe is placed on a level surface. Re-tighten all assembly screws. Verify that the anti-tip device is securely fastened to the wall.
- Doors Not Aligning:**
Solution: Adjust the hinges on the doors. Most IKEA hinges have screws that allow for vertical, horizontal, and depth adjustments. Refer to the specific door assembly instructions for detailed hinge adjustment steps.
- Drawers Sticking or Not Closing Smoothly:**
Solution: Check that the drawer runners are correctly installed and free of obstructions. Ensure the drawer is not overloaded. Verify that all screws on the drawer and runners are tight.
- Scratches or Minor Damage:**
Solution: For minor scratches, touch-up paint or repair kits may be available from IKEA. Consult IKEA customer service for recommendations.

7. SPECIFICATIONS

Feature	Detail
Brand	Ikea
Model Number	IK.494.202.93
Color	White
Dimensions (approx.)	211/213 x 236 cm
Recommended Use	Clothing storage
Mounting Type	Floor Mount (with wall attachment)
Included Components	Shelves (quantity may vary by configuration)
Finish Type	Painted
Shape	Pentagonal (Corner)
Number of Shelves	1 (base configuration, customizable)

8. WARRANTY AND SUPPORT

IKEA products typically come with a limited warranty. For specific warranty details, including duration and coverage, please refer to the warranty information provided with your purchase or visit the official IKEA website. For spare parts, assembly assistance, or further support, please contact IKEA customer service directly or visit your local IKEA store.

You can find more information and support resources on the official IKEA website www.ikea.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BW8TZ4ZD>

More documents and user manuals: <https://manuals.plus/>