

[Manuals.plus](#) /

› [Ikea](#) /

› Ikea EKTORP 3-Seater Sofa User Manual

**Ikea IK.493.200.57**

## Ikea EKTORP 3-Seater Sofa User Manual

Model: IK.493.200.57

### PRODUCT OVERVIEW

The Ikea EKTORP 3-seater sofa is designed for comfort and durability, featuring a timeless design that complements various interior styles. It is equipped with reversible back cushions filled with polyester fiber, providing soft support and allowing for even wear. The seat cushions are filled with high-resilience foam and polyester fiber padding, offering comfortable body support and easily regaining their shape after use.

This specific model comes with a Totebo fabric cover in a dark turquoise color. The Totebo fabric is a plain-woven, durable polyester material with a subtle tone-on-tone color effect. The cover is removable and machine washable, making maintenance straightforward and allowing for easy updates to your living space with additional covers (sold separately).



The Ikea EKTORP 3-seater sofa in Totebo Dark Turquoise, showcasing its classic design and comfortable cushions.


### SETUP AND ASSEMBLY

Your Ikea EKTORP sofa is designed for straightforward assembly. Please follow the detailed instructions provided in the separate assembly guide included with your product. Ensure all components are present before beginning assembly.

1. **Unpack all components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify parts:** Refer to the assembly guide to identify each component and hardware piece.
3. **Follow step-by-step instructions:** Assemble the frame, attach the legs, and then place the cushions and cover according to the diagrams.
4. **Check dimensions for placement:** Before final placement, ensure the sofa fits your intended space.



An illustrative cutaway view demonstrating the internal structure and cushioning layers of the EKTORP sofa.

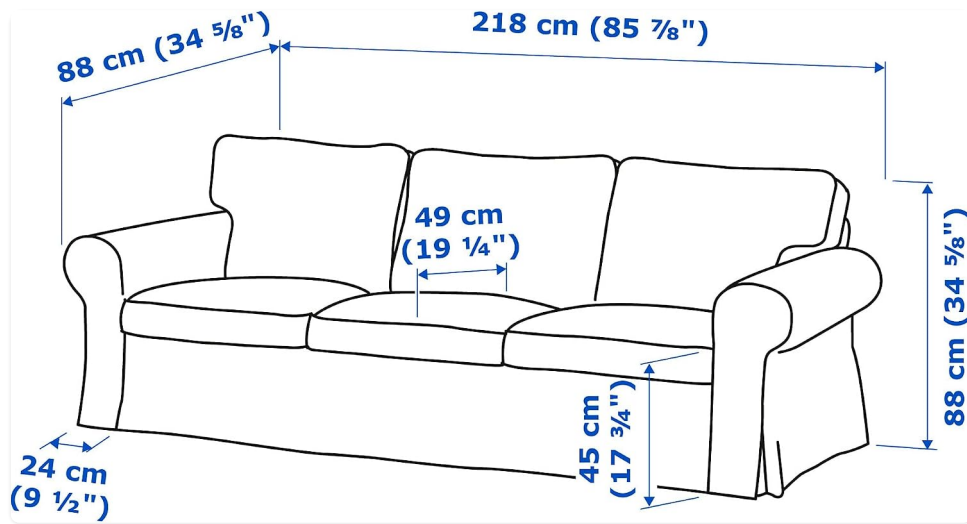

Detailed dimensions of the EKTORP 3-seater sofa, including width, depth, and height, to assist with space planning.

## OPERATING INSTRUCTIONS

The Ikea EKTORP sofa is designed for comfortable everyday use. Simply sit and relax. To maximize the lifespan and maintain the appearance of your sofa, consider the following:

- **Reversible Back Cushions:** The back cushions are reversible. Periodically flip and rotate them to ensure even wear and maintain their shape and comfort over time.
- **Fluffing Cushions:** Gently fluff the back and seat cushions regularly to help them retain their volume and shape.
- **Even Weight Distribution:** Encourage users to sit across the entire sofa rather than consistently on one spot to distribute wear evenly.



The EKTORP sofa comfortably situated in a modern living room, demonstrating its functional use.

## MAINTENANCE AND CARE

Proper care will extend the life and beauty of your EKTORP sofa. The Totebo dark turquoise cover is designed for easy maintenance.

### Cover Removal and Re-attachment

1. **Removal:** Unzip the cushion covers and carefully slide them off. For the main frame cover, locate the zippers and fastenings, then gently pull the cover off the frame.
2. **Re-attachment:** After washing and drying, carefully slide the covers back onto the cushions and frame. Ensure the cover is aligned correctly and zip up all fastenings. Smooth out any wrinkles.



A close-up view of the zipper on the EKTORP sofa cover, highlighting its design for easy removal and re-attachment.

## Washing Instructions for Totebo Dark Turquoise Cover

- **Machine Wash:** The cover can be machine washed. Use a gentle cycle with cold water (max 30°C / 86°F).
- **Detergent:** Use a mild detergent. Do not use bleach.
- **Drying:** Do not tumble dry. Hang to dry or lay flat. Iron on low temperature if needed.
- **Professional Cleaning:** Do not dry clean.



A detailed view of the Totebo dark turquoise fabric, showing its texture and the sofa's skirt design.

## TROUBLESHOOTING

Here are solutions to common issues you might encounter with your EKTORP sofa:

- **Wrinkled Cover After Washing:** If the cover appears wrinkled after washing, you can gently iron it on a low setting or use a fabric steamer to smooth out the creases before re-attaching.
- **Cushions Losing Shape:** Over time, cushions may compress. Regularly fluff and rotate both back and seat cushions to help them regain their original shape and maintain comfort.
- **Squeaking Noises:** If you hear squeaking, check all assembly connections to ensure they are tightened securely. Loose bolts can sometimes cause noise.
- **Fading Fabric:** To prevent premature fading, avoid placing the sofa in direct sunlight for extended periods.

## SPECIFICATIONS

| Feature                        | Detail                                               |
|--------------------------------|------------------------------------------------------|
| Brand                          | Ikea                                                 |
| Model Number                   | IK.493.200.57                                        |
| Color                          | Totebo Dark Turquoise                                |
| Product Dimensions (D x W x H) | 88 cm x 218 cm x 88 cm (34 5/8" x 85 7/8" x 34 5/8") |
| Material                       | Fabric, Polyester                                    |
| Special Feature                | Reversible Cushions                                  |
| Manufacturer                   | IKEA                                                 |
| ASIN                           | B0BW8V39LP                                           |
| First Available Date           | February 15, 2023                                    |
| Pattern                        | Solid                                                |
| Product Care Instructions      | Machine Wash                                         |
| Number of Items                | 1                                                    |
| Shape                          | Rectangular                                          |

## WARRANTY INFORMATION

The Ikea EKTORP 3-seater sofa is covered by a **10-year limited warranty**. This warranty covers defects in material and workmanship. Please refer to the separate warranty brochure provided with your purchase for full terms and conditions, including what is covered and how to make a claim.

Keep your proof of purchase (receipt) as it is required for all warranty claims.

## CUSTOMER SUPPORT

For further assistance, spare parts, assembly questions, or warranty claims, please contact Ikea Customer Service. You can find contact information on the official Ikea website for your region or by visiting your local Ikea store.

- **Online:** Visit [www.ikea.com](http://www.ikea.com) and navigate to the 'Contact Us' or 'Customer Service' section.

- **In-Store:** Speak to a representative at the customer service desk in any Ikea store.
- **Phone:** Check the Ikea website for the customer service phone number specific to your country.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question