

[Manuals.plus](#) /

> [IKEA](#) /

> [IKEA VIMLE 3-seat Sofa with Chaise Longue User Manual](#)

IKEA IK.993.991.09

IKEA VIMLE 3-seat Sofa with Chaise Longue User Manual

Model: IK.993.991.09

PRODUCT OVERVIEW

The IKEA VIMLE 3-seat Sofa with Chaise Longue is a versatile and comfortable seating solution designed for modern living spaces. This sofa features a spacious 3-seat section combined with a chaise longue, offering ample room for relaxation. A key feature of this model is its integrated storage, providing a practical solution for keeping your living area tidy.

The sofa is upholstered in Gunnared Beige fabric, a durable blend of wool and polyester, ensuring both comfort and longevity. Its modular design allows for flexibility in arrangement, adapting to various room layouts.



Image: Front view of the IKEA VIMLE 3-seat Sofa with Chaise Longue in Gunnared Beige, showcasing its full length and design.

SAFETY INFORMATION

All foam and upholstered surfaces meet flammability standards. Keep away from open flames or high heat sources. Supervise children and pets to avoid entrapment risks.

SETUP

Assembly is required for the IKEA VIMLE sofa. It is recommended to have at least two people for assembly. Ensure all components are present before beginning. Refer to the included assembly instructions for detailed, step-by-step guidance.

Unpacking and Preparation

1. Carefully unpack all boxes and lay out components on a clean, soft surface to prevent scratches.
2. Verify all parts against the parts list provided in the assembly manual.
3. Ensure you have the necessary tools as specified in the assembly manual (usually an Allen key, which is often included).

Assembly Steps

Follow the graphical instructions provided in the IKEA assembly manual. Key steps typically include:

- Attaching the sofa frame sections.
- Securing the chaise longue section to the main sofa frame.
- Installing the legs.
- Placing the seat cushions and back cushions.
- For the storage feature, ensure the lift mechanism is correctly installed and operates smoothly.



Image: The IKEA VIMLE sofa with chaise longue positioned in a living room, demonstrating its assembled appearance and integration into a home environment.

OPERATING

Using the Chaise Longue Storage

The chaise longue section of the VIMLE sofa includes integrated storage. To access the storage compartment:

1. Gently lift the seat cushion of the chaise longue from the front edge.
2. The lid will lift upwards, revealing the storage space underneath.
3. To close, push the lid down firmly until it clicks into place.

Note: Do not place excessively heavy items in the storage compartment to avoid damaging the lift mechanism or the sofa frame.



Image: The chaise longue section of the IKEA VIMLE sofa lifted to reveal the spacious storage compartment underneath, filled with blankets and pillows.

MAINTENANCE

General Care

- Regularly vacuum the sofa with a soft brush nozzle to remove dust and loose particles.
- Avoid direct sunlight exposure to prevent fading of the fabric.
- Rotate cushions periodically to ensure even wear.

Cleaning Instructions (Gunnared Beige Fabric)

- **Spot Cleaning:** For minor spills, immediately blot with a clean, damp cloth. Do not rub. Use a mild fabric cleaner if necessary, testing on an inconspicuous area first.
- **Removable Covers:** The VIMLE sofa often features removable and machine-washable covers. Check the care label inside the cover for specific washing instructions. Typically, machine wash warm (40°C), do not bleach, do not

tumble dry, iron medium temperature, dry clean normal cycle.

- **Professional Cleaning:** For deep cleaning or stubborn stains, professional upholstery cleaning is recommended.



Image: A close-up view of the Gunnared Beige fabric upholstery on the IKEA VIMLE sofa, showing its texture and weave.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sofa feels wobbly after assembly.	Loose connections or uneven legs.	Check all bolts and screws, tighten them securely. Ensure legs are evenly tightened and the sofa is on a flat surface.
Chaise longue storage lid is difficult to open/close.	Mechanism not aligned or obstructed.	Ensure no items are obstructing the mechanism. Check if the hinges are properly aligned and lubricated if necessary.

Problem	Possible Cause	Solution
Fabric appears discolored or stained.	Exposure to sunlight, spills, or improper cleaning.	Refer to cleaning instructions. For sun damage, reposition the sofa. Consider professional cleaning for stubborn stains.

SPECIFICATIONS

Brand: IKEA

Model Number: IK.993.991.09

Color: Beige (Gunnared Beige)

Material: Wool Polyester blend

Special Features: Storage

Assembly Required: Yes

Seat Depth: 55 centimeters

Seat Height: 48 Centimeters

Seating Capacity: 3

Type: Sofa Chaise

Style: Contemporary

WARRANTY AND SUPPORT

IKEA products typically come with a limited warranty. For specific warranty details regarding your VIMLE sofa, please refer to the warranty information provided at the time of purchase or visit the official IKEA website. Keep your proof of purchase for warranty claims.

For customer support, assembly assistance, or to order spare parts, please contact IKEA customer service directly. Contact information can usually be found on the IKEA website or in your purchase documentation.

Online Resources: www.ikea.com



© 2023 IKEA. All rights reserved.

This manual is for informational purposes only. IKEA reserves the right to make changes to products and specifications without prior notice.