

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA Sandsberg Chair User Manual

IKEA SANDSBERG

IKEA Sandsberg Chair User Manual

Model: SANDSBERG (IK.704.129.60)

1. INTRODUCTION

The IKEA Sandsberg chair is designed for comfort and durability, featuring a slim profile that integrates well into various living spaces. Its construction combines a warm wood expression with sturdy metal, making it both aesthetically pleasing and robust for daily use. The chair's 2-slat backrest is shaped to provide a flexible feel, enhancing comfort during use.

This manual provides essential information regarding the assembly, proper use, maintenance, and specifications of your Sandsberg chair to ensure its longevity and your satisfaction.

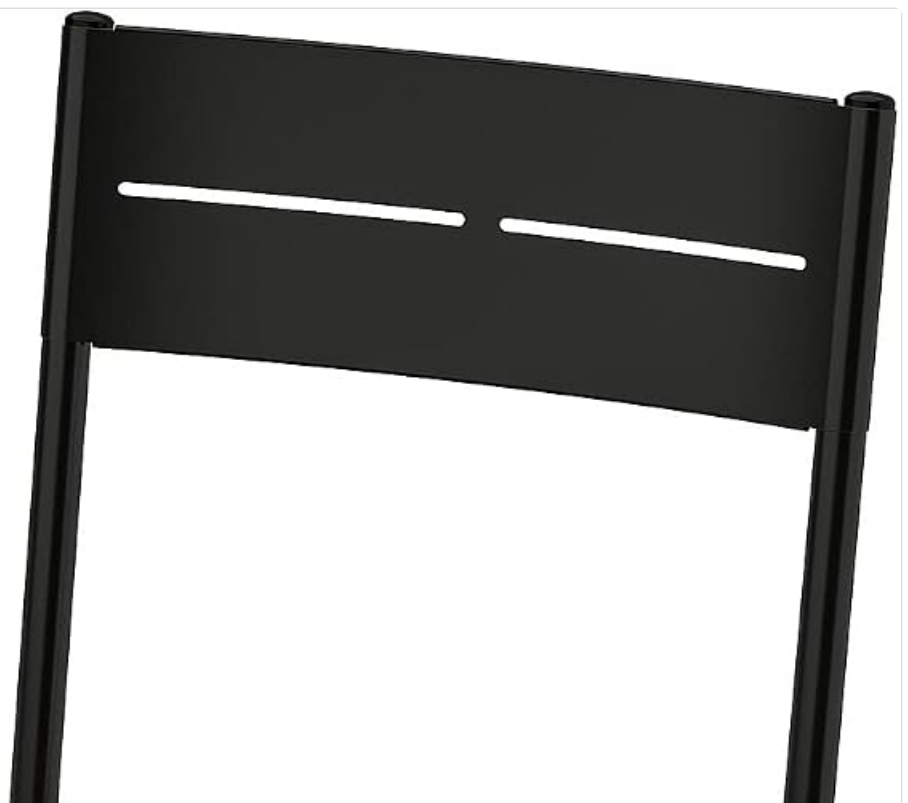




Image 1: Front view of the IKEA Sandsberg chair, showcasing its black metal frame and stained brown wooden seat.

2. SETUP AND ASSEMBLY

The IKEA Sandsberg chair requires assembly. Please follow the detailed instructions provided in the packaging. Ensure all components are present before beginning assembly. A typical assembly process involves attaching the legs to the seat frame and securing the backrest.

2.1. Before You Begin

- Unpack all parts and lay them out on a soft, clean surface to prevent scratches.

- Verify that all hardware (screws, bolts, washers) and chair components are accounted for against the parts list in your instruction booklet.
- Gather necessary tools, typically an Allen key (often included) and a screwdriver.

2.2. Assembly Steps (General Guidance)

1. Attach the chair legs to the seat frame using the provided screws and Allen key. Do not overtighten initially.
2. Secure the backrest to the frame. Ensure it is properly aligned.
3. Once all parts are loosely assembled, place the chair on a flat surface and gently tighten all screws. This helps ensure the chair is level and stable.
4. Check for stability by gently rocking the chair. If it wobbles, loosen the screws slightly, press down on the seat, and retighten.



Image 2: Rear view of the Sandsberg chair, showing its metal frame and wooden seat, positioned with a matching table.

3. OPERATING AND USAGE

The Sandsberg chair is designed for general seating purposes, suitable for dining areas, kitchens, or as an occasional chair. Its lightweight design allows for easy repositioning.

3.1. Safe Use Guidelines

- Always sit centrally on the seat to distribute weight evenly.
- Avoid standing on the chair or using it as a step stool.
- Do not lean back excessively or rock vigorously, as this may compromise stability.
- Ensure the chair is placed on a flat, stable surface. The plastic feet are designed to protect hard floors.

3.2. Enhancing Comfort

For a softer seating experience or to add a personal touch, consider complementing the chair with a suitable chair cushion (sold separately).



4. MAINTENANCE

Regular maintenance will help preserve the appearance and structural integrity of your Sandsberg chair.

4.1. Cleaning Instructions

- **Wood Surfaces:** Wipe clean with a damp cloth and a mild cleaner. Dry immediately with a clean, dry cloth. Avoid abrasive cleaners or harsh chemicals that can damage the wood finish.
- **Metal Frame:** Wipe with a damp cloth. For stubborn marks, use a mild detergent. Dry thoroughly.
- **Plastic Feet:** Wipe clean with a damp cloth.

4.2. General Care

- Periodically check and retighten all assembly fittings to ensure the chair remains stable.
- Protect the chair from direct sunlight and excessive heat to prevent fading or drying out of materials.
- Avoid placing hot items directly on the wooden seat without protection.



Image 4: Detailed view of the chair's black metal backrest, highlighting its two-slat design.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Sandsberg chair.

5.1. Chair Wobbles

- **Cause:** Uneven tightening of screws during assembly or loosening over time.
- **Solution:** Loosen all screws slightly. Place the chair on a flat surface and apply gentle downward pressure on the seat. While maintaining pressure, retighten all screws firmly.

5.2. Loose Parts

- **Cause:** Screws or bolts have become loose with regular use.
- **Solution:** Periodically inspect all connections and tighten any loose screws or bolts using the appropriate tools. Do

not overtighten.

6. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Name	SANDSBERG
Model Number	IK.704.129.60
ASIN	B0BW8VBLXH
Color	Black/Stained Brown
Materials	Wood, Metal, Plastic
Item Weight	100 g (0.22 lbs)
Special Feature	Lightweight
Back Style	Slat back
Frame Material	Metal
Seat Material	Wood
Surface Recommendation	Hard Floor
Care Instructions	Wipe clean

Note: The listed item weight of 100g is as provided in product data. Actual weight may vary.

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the documentation included with your purchase or visit the official IKEA website. Warranty terms and conditions may vary by region and product.

If you require further assistance, have questions about assembly, or need to report a defect, please contact IKEA customer support directly. Contact details can typically be found on the IKEA website or in your purchase receipt.

- **IKEA Official Website:** www.ikea.com
- **Customer Service:** Refer to your local IKEA store or website for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question