

- Manuals.plus /
- > [IKEA](#) /
 - > IKEA KNOXHULT Kitchen User Manual

IKEA KNOXHULT

IKEA KNOXHULT Kitchen User Manual

Model: KNOXHULT | Brand: IKEA

INTRODUCTION

The IKEA KNOXHULT kitchen system offers a complete and functional kitchen solution, designed for ease of use and durability. This manual provides essential information regarding the setup, operation, maintenance, and specifications of your KNOXHULT kitchen, measuring 220x61x220 cm in white finish. Please read through this guide to ensure proper handling and longevity of your product.



Figure 1: Fully assembled IKEA KNOXHULT kitchen unit, showcasing its integrated design with a range hood, cooktop, oven, and sink.

SETUP AND INSTALLATION

The IKEA KNOXHULT kitchen requires assembly. It is designed for both floor mounting and wall-mounted installation for upper cabinets. Ensure all components are present before beginning assembly. For detailed step-by-step assembly instructions, refer to the specific assembly guide provided with your product packaging. Proper installation is crucial for stability and safety.

- **Component Check:** Verify all parts and hardware are included as per the packing list.
- **Tools Required:** Prepare necessary tools as indicated in the assembly guide.
- **Assembly Sequence:** Follow the numerical or sequential steps precisely.
- **Wall Mounting:** For upper cabinets, ensure proper wall anchors are used suitable for your wall type.
- **Adjustable Hinges:** The cabinet doors feature adjustable hinges for precise alignment after installation.



Figure 2: Exploded view of the IKEA KNOXHULT kitchen components, showing open cabinets and drawers, illustrating the modular design.

OPERATING YOUR KITCHEN SYSTEM

The KNOXHULT kitchen is designed for practical daily use, offering efficient storage and workspace. Its features are optimized for a seamless kitchen experience.

- **Drawers:** The kitchen features smooth-running drawers for easy access to contents. Avoid overloading drawers to maintain their smooth operation.
- **Shelves:** Cabinets include shelves for organized storage of dishes and other kitchen items. The system allows for flexible arrangement of items across its two levels.
- **Countertop:** The engineered wood countertop provides a durable surface for food preparation and other kitchen activities.
- **Sink Area:** The integrated sink is suitable for dishwashing and general water use. Ensure proper drainage and avoid leaving

standing water for extended periods.



Figure 3: Left: A smooth-running drawer with an organized cutlery insert. Right: An upper cabinet interior demonstrating storage capacity for dishes and bowls.

MAINTENANCE AND CARE

Regular cleaning and proper care will help maintain the appearance and functionality of your KNOXHULT kitchen for years to come. The surfaces are designed to be scratch resistant, but proper care is still recommended.

- **General Cleaning:** Wipe surfaces clean with a soft cloth dampened with water and a mild non-abrasive detergent. Dry immediately with a clean cloth.
- **Countertop Care:** The engineered wood countertop should be wiped dry immediately after spills. Avoid placing hot items directly on the surface without protection. Use cutting boards to prevent scratches.
- **White Finish:** For the white finished surfaces, avoid abrasive cleaners or scouring pads that can damage the finish.
- **Hinges and Drawers:** Periodically check and tighten any loose screws on hinges and drawer runners. Lubricate if necessary to maintain smooth operation.
- **Sink Area:** Clean the sink regularly with a non-abrasive cleaner suitable for stainless steel. Rinse thoroughly and dry to prevent water spots and mineral buildup.



Figure 4: Left: Detail of the engineered wood countertop, highlighting its texture and durability. Right: The integrated stainless steel sink and faucet, emphasizing the ease of cleaning the surrounding surfaces.

TROUBLESHOOTING

This section addresses common issues you might encounter with your kitchen system. For more complex problems, please contact IKEA customer service.

Problem	Possible Cause	Solution
Drawer sticks or is hard to open/close.	Overloaded drawer, debris in runners, loose screws.	Reduce load, clean runners, tighten screws on drawer slides.
Cabinet door is misaligned.	Loose hinges, hinge adjustment needed.	Adjust the screws on the hinges to realign the door. Refer to assembly guide for hinge adjustment details.
Water spots or stains on countertop.	Water left standing, acidic spills.	Wipe spills immediately. For stubborn stains, use a mild, non-abrasive cleaner and rinse thoroughly.

SPECIFICATIONS

Detailed technical specifications for the IKEA KNOXHULT Kitchen, 220x61x220 cm, White.

Feature	Detail
Brand	IKEA
Model	KNOXHULT
Color	White
Product Dimensions	24.02 x 24.02 x 86.61 inches (approx. 61 x 61 x 220 cm)
Recommended Uses	Dish, General Kitchen Use
Special Features	Smooth-Running Drawer, Adjustable Hinges, Scratch Resistant

Feature	Detail
Mounting Type	Floor Mount (base units), Wall-mounted (upper units)
Room Type	Kitchen
Door Style	Slab
Included Components	Shelves
Finish Type	White
Shape	Rectangular
Number of Shelves	1 (per standard cabinet, customizable)
Base Type	Legs
Top Material Type	Engineered Wood
Assembly Required	Yes
Frame Material	Engineered Wood
Is Customizable	Yes
Number of Levels	2 (storage levels within cabinets)
Manufacturer	IKEA
ASIN	B0BW8VTPJN
Date First Available	December 14, 2023

WARRANTY AND SUPPORT

IKEA products are designed with quality and durability in mind. For information regarding the warranty period and terms for your KNOXHULT kitchen system, please refer to the warranty documentation provided at the time of purchase or visit the official IKEA website.

For technical support, missing parts, or any other inquiries, please contact IKEA customer service through their official channels. Have your proof of purchase and product details (model name, ASIN) ready when contacting support. You can find more information and contact details on the official IKEA website: www.ikea.com

© 2024 IKEA. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BW8VTPJN>

More documents and user manuals: <https://manuals.plus/>