

IKEA PAX/BERGSBO

IKEA PAX/BERGSBO Wardrobe Instruction Manual

Model: PAX/BERGSBO | Dimensions: 100x60x236 cm

1. INTRODUCTION

Welcome to the instruction manual for your new IKEA PAX/BERGSBO Wardrobe. This guide provides essential information for the safe and correct assembly, operation, and maintenance of your wardrobe. Please read these instructions carefully before beginning assembly and retain them for future reference.

The IKEA PAX/BERGSBO wardrobe offers a versatile storage solution with dimensions of 100 cm (width) x 60 cm (depth) x 236 cm (height), featuring a white stained oak effect finish and adjustable interior options.

2. SAFETY INFORMATION

- **Wall Anchoring:** It is crucial to secure the wardrobe to the wall using the provided anti-tip hardware. This prevents the wardrobe from tipping over, which can cause serious injury. Different wall materials require different types of fastening devices. Use fastening devices suitable for the walls in your home.
- **Assembly:** Always follow the assembly instructions precisely. Ensure all connections are tightened securely.
- **Weight Distribution:** Distribute weight evenly on shelves and in drawers. Do not overload the wardrobe.
- **Children's Safety:** Keep small parts and packaging materials away from children during assembly.
- **Stability:** Ensure the wardrobe is placed on a level surface. Use the adjustable feet to compensate for any unevenness.

3. PACKAGE CONTENTS

Before starting assembly, verify that all components are present. Refer to the detailed packing list included with your product. Typical components include:

- Wardrobe frame panels (side panels, top, bottom, back panel)
- BERGSBO door panels (2 doors)
- Hinges with integrated soft-closing dampers

- Adjustable feet
- Shelves (multiple, adjustable)
- Hardware pack (screws, dowels, connectors, wall anchoring kit)
- Assembly instructions manual

Note: The exact number and type of interior organizers (e.g., drawers, clothes rails) depend on your specific PAX/KOMPLEMENT combination. These may be sold separately.

4. SETUP AND ASSEMBLY

Assembly of the IKEA PAX/BERGSBO Wardrobe requires two people for safety and ease. Follow the step-by-step instructions provided in the separate assembly guide.

4.1 Tools Required

- Screwdriver (Phillips head)
- Hammer
- Measuring tape
- Level
- Drill (for wall anchoring)

4.2 Assembly Steps Overview

1. **Preparation:** Clear a spacious area for assembly. Lay down a blanket or cardboard to protect the floor and wardrobe components from scratches.
2. **Frame Assembly:** Assemble the main wardrobe frame according to the numbered steps in the assembly guide. Ensure all cam locks and screws are securely tightened.
3. **Back Panel Installation:** Carefully attach the back panel to the frame. Ensure it is square and secured with the provided nails or screws.
4. **Door Installation:** Attach the BERGSBO doors using the hinges. The integrated dampers will ensure a soft and quiet closing action. Adjust the hinges to align the doors correctly.
5. **Interior Organization:** Install shelves, clothes rails, and any KOMPLEMENT interior organizers (sold separately) at your desired heights.
6. **Leveling:** Use the adjustable feet at the bottom of the wardrobe to level the unit. This is crucial for door alignment and overall stability.
7. **Wall Anchoring: This step is mandatory for safety.** Secure the wardrobe to the wall using the anti-tip hardware. Mark the drilling points, drill pilot holes, and fasten the wardrobe to the wall.



Image 1: IKEA PAX/BERGSBO Wardrobe with doors open, revealing shelves and a clothes rail. This image illustrates the interior organization possibilities.



Image 2: IKEA PAX/BERGSBO Wardrobe with doors closed, showcasing the white stained oak effect finish and clean lines.

5. OPERATING INSTRUCTIONS

Your IKEA PAX/BERGSBO Wardrobe is designed for practical and flexible storage.

- **Doors:** The BERGSBO doors are equipped with integrated dampers for soft and silent closing. Gently push the door to close it, and the damper mechanism will engage.
- **Shelves:** The shelves are adjustable. To change their height, remove items, lift the shelf, and reposition the shelf supports in the desired holes. Ensure the shelf is securely seated on all four supports before placing items back.
- **Interior Organizers:** If you have installed KOMPLEMENT series interior organizers (e.g., drawers, mesh baskets), operate them according to their specific instructions.

6. MAINTENANCE

Proper care will help maintain the appearance and longevity of your wardrobe.

- **Cleaning:** Wipe clean with a dry cloth. For stubborn marks, a slightly damp cloth with a mild cleaner can be used, followed by immediate drying with a clean, dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Hardware Check:** Periodically check all screws, bolts, and fittings. Tighten them if they have become loose to ensure stability and safety.
- **Door Alignment:** If doors become misaligned over time, adjust the hinges using a screwdriver. Refer to the detailed assembly instructions for hinge adjustment procedures.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Wardrobe is Wobbly:**
Solution: Ensure the adjustable feet are correctly set to level the wardrobe on uneven floors. Double-check that the wardrobe is securely anchored to the wall. Verify all frame connections are tight.
- **Doors Do Not Close Properly or Are Misaligned:**
Solution: Check for any obstructions inside the wardrobe. Adjust the hinges using a screwdriver to align the doors. Ensure the wardrobe is level.
- **Shelves Sagging:**
Solution: Reduce the weight on the shelf. Ensure the shelf supports are fully inserted into the holes and the shelf is properly seated.
- **Missing Parts or Damaged Components:**
Solution: If you discover missing or damaged parts during assembly, do not proceed. Contact IKEA customer service with your product details and the part number (if available) for assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	IKEA
Model Name	PAX/BERGSBO
Dimensions (W x D x H)	100 cm x 60 cm x 236 cm
Color	White / White Stained Oak Effect
Material	Oak wood (Frame, Top, Back)
Mounting Type	Floor Mount, Freestanding (wall anchoring required)
Special Features	Adjustable interior, Soft-closing hinges
Assembly Required	Yes
Number of Doors	2
Included Components	Shelves
Care Instructions	Wipe clean with a dry cloth

9. WARRANTY

The IKEA PAX/BERGSBO Wardrobe comes with a **10-year guarantee**. This guarantee covers defects in material and workmanship. Please refer to the separate guarantee brochure provided with your purchase for full terms, conditions, and exclusions. Keep your proof of purchase for warranty claims.

10. SUPPORT

For further assistance, detailed assembly instructions, spare parts, or any other inquiries, please visit the official IKEA website or contact IKEA customer service directly.

IKEA Website: www.ikea.com

You can often find digital versions of assembly manuals and troubleshooting guides on the IKEA website by searching for your product model.