

IKEA KNOXHULT

IKEA KNOXHULT Base Cabinet User Manual

Model: KNOXHULT - 180 cm, high-Gloss White

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Keep this manual for future reference.

- **Avoid placing heavy objects on the glass top.** Excessive weight can cause damage or breakage.
- **Secure the cabinet to the wall to prevent tipping.** Use the included anti-tip hardware. This is crucial for safety, especially in households with children or pets.
- **Be cautious of pinch points when opening and closing doors and drawers.** Keep fingers clear to prevent injury.
- **Always unplug and turn off any appliances before cleaning.** Ensure the area is dry before reconnecting power.

2. ASSEMBLY AND SETUP

The IKEA KNOXHULT Base Cabinet requires assembly. Follow the detailed instructions provided in the separate assembly guide included with your purchase. Ensure all components are present before beginning assembly.

2.1 Unpacking and Inspection

- Carefully unpack all components and check against the parts list in the assembly guide.
- Inspect all parts for any damage. Contact customer support if any parts are missing or damaged.

2.2 Assembly Steps

1. Assemble the cabinet frame according to the step-by-step illustrations in the assembly guide.
2. Install shelves and drawer runners.
3. Attach doors and drawers, ensuring proper alignment and smooth operation.
4. Secure the cabinet to the wall using the provided anti-tip hardware and appropriate wall fasteners for your wall type.



Image: The IKEA KNOXHULT Base Cabinet, 180 cm, high-gloss white, with its doors and drawers open, showcasing the internal storage compartments and the dark countertop. This image illustrates the cabinet's design and storage capabilities.

3. OPERATING INSTRUCTIONS

The KNOXHULT Base Cabinet is designed for practical storage in kitchen or utility areas.

3.1 Doors

- Gently pull the handles to open the cabinet doors.
- Push the doors firmly to close them. Ensure they latch completely.
- The doors are equipped with hinges that allow for smooth opening and closing.

3.2 Drawers

- Pull the drawer handles to slide the drawers open.
- Push the drawers back into the cabinet until they are fully closed.
- Avoid overloading drawers to ensure smooth operation and prevent damage to the runners.



Image: An open drawer of the KNOXHULT cabinet, revealing a white cutlery organizer filled with various utensils. This demonstrates the practical internal storage solution for kitchen items.



Image: A section of the IKEA KNOXHULT cabinet integrated into a kitchen setting, featuring a black cooktop and an oven installed within the cabinet structure. This illustrates how the cabinet can accommodate built-in appliances.



Image: A close-up view of the IKEA KNOXHULT cabinet countertop with a stainless steel sink and faucet installed. This highlights the cabinet's suitability for kitchen applications requiring a sink unit.

4. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your KNOXHULT cabinet.

4.1 Cleaning

- Wipe clean with a cloth dampened in a mild cleaner.
- Wipe dry with a clean cloth.
- For high-gloss surfaces, avoid abrasive cleaners or scouring pads, as they can scratch the finish.

4.2 General Care

- Regularly check and tighten any loose screws or fittings.
- Protect surfaces from excessive heat or moisture. Use trivets under hot dishes.
- Avoid direct sunlight exposure for prolonged periods to prevent fading.



Image: A close-up view of the high-gloss white finish of the IKEA KNOXHULT cabinet door. This image highlights the smooth, reflective surface that requires gentle cleaning.



Image: A detailed view of the dark grey countertop surface of the IKEA KNOXHULT cabinet, showing its texture and edge. This surface is durable but should be protected from extreme heat and sharp objects.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your KNOXHULT cabinet.

Problem	Possible Cause	Solution
Doors or drawers do not close properly.	Misaligned hinges/runners, obstruction, or overloaded drawer.	Adjust hinge screws for door alignment. Check drawer runners for debris. Reduce drawer load.
Cabinet feels wobbly or unstable.	Not properly secured to the wall, uneven floor, or loose assembly screws.	Ensure cabinet is securely anchored to the wall. Use shims under legs if floor is uneven. Tighten all assembly screws.

Problem	Possible Cause	Solution
Scratches or marks on high-gloss surface.	Abrasive cleaning materials or sharp objects.	Use only soft cloths and mild cleaners. Minor scratches may be buffed out with specialized polish (consult IKEA for recommendations).

6. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model Name	KNOXHULT
Color	White (High-Gloss)
Dimensions	180 cm (Length) - Specific height/depth not provided, refer to product page.
Material	Wood (Frame), Glass (Top Material Type)
Mounting Type	Floor Mount, Floor Mounted Installation
Special Feature	Storage
Room Type	Kitchen
Door Style	Slab
Included Components	Shelves
Number of Shelves	2
Assembly Required	Yes
Number of Compartments	2
Number of Levels	2
Is Customizable	Yes

7. WARRANTY AND SUPPORT

IKEA products typically come with a limited warranty. Please refer to the warranty information provided with your purchase or visit the official IKEA website for specific details regarding the KNOXHULT series.

For customer support, missing parts, or further assistance, please contact IKEA customer service through their official channels:

- **IKEA Official Website:** www.ikea.com
- **Customer Service Contact:** Refer to the "Contact Us" section on the IKEA website for phone numbers and online support options specific to your region.

When contacting support, please have your product model name (KNOXHULT) and purchase details readily available.

© 2023 IKEA. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question