

[Manuals.plus](#) /

› [IKEA](#) /

› Ikea VIKANES Door with Hinges, 50x229 cm, White - User Manual

IKEA IK.091.228.51

Ikea VIKANES Door with Hinges, 50x229 cm, White

Model: IK.091.228.51 | Brand: IKEA

1. PRODUCT OVERVIEW

The Ikea VIKANES door is designed for a modern, minimalist aesthetic, featuring an integrated handle that eliminates the need for drilling additional holes. This design contributes to a clean and sleek surface. The door is equipped with hinges that include integrated dampers, ensuring a slow, quiet, and soft closing action. It offers flexibility during installation as it can be hung to open either to the right or to the left.





Figure 1: Full view of the white Ikea VIKANES door, showcasing its smooth, unadorned surface and clean lines.

2. SETUP AND ASSEMBLY

Assembly is required for the Ikea VIKANES door. The design allows for versatile installation, as the door can be mounted to open from either the right or the left side, depending on your room layout and preference. The integrated handle is a key feature, meaning no separate handle installation is needed. The included hinges come with built-in dampers for a soft-close function, which should be properly aligned during installation to ensure smooth operation.



Figure 2: Close-up view of the integrated groove along the side of the Ikea VIKANES door, which functions as a discreet handle.

2.1 Installation Steps (General Guidelines):

1. **Prepare the frame:** Ensure the door frame is clean, level, and ready for hinge attachment.
2. **Attach hinges to door:** Secure the integrated damper hinges to the designated points on the door panel.
3. **Mount door to frame:** Carefully lift and align the door with the frame, attaching the hinges to the frame. Decide on the desired opening direction (right or left) before final attachment.
4. **Adjust for smooth operation:** Test the door's movement. Adjust hinges as necessary to ensure the door swings freely and closes softly without catching.

3. OPERATING THE DOOR

To open the VIKANES door, gently pull the integrated groove along the side of the door panel. The door will swing open smoothly. To close, push the door towards the frame. The integrated dampers in the hinges will engage, slowing the door's movement and ensuring a quiet and soft closure, preventing slamming.

4. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your VIKANES door.

- **Cleaning:** Wipe the door surface with a soft cloth dampened with water or a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Hinge Care:** Periodically check the hinges for any loose screws. Tighten them if necessary. If the door begins to squeak, a small amount of silicone-based lubricant can be applied to the hinge pins.
- **Surface Protection:** While the door is durable, avoid sharp objects or excessive force that could scratch or dent the surface.

5. TROUBLESHOOTING

If you encounter issues with your VIKANES door, consider the following common solutions:

- **Door not closing softly:** Check if the integrated dampers in the hinges are functioning correctly. Ensure no obstructions are preventing the door from fully engaging the soft-close mechanism.
- **Door squeaks:** Apply a small amount of silicone lubricant to the hinge pins.
- **Door not aligning properly:** Inspect the hinge screws and tighten any that are loose. If the issue persists, the door may need to be re-adjusted on its frame.
- **Difficulty opening/closing:** Ensure there are no foreign objects or debris in the door's path or around the hinges.

6. SPECIFICATIONS

Feature	Detail
Brand	IKEA
Manufacturer	IKEA
Part Number	IK.091.228.51
Manufacturer Reference	IK.091.228.51
Color	White
Style	Modern
Mounting Profile	Floor mounting
ASIN	B0BW8W48VQ
First Available Date	February 15, 2023
Assembly Required	Yes

7. WARRANTY AND SUPPORT

The Ikea VIKANES door comes with a **10-year warranty**. For detailed terms and conditions of the warranty, please

refer to the official warranty brochure provided with your purchase or visit the IKEA official website.

For further assistance, technical support, or to inquire about replacement parts, please contact IKEA customer service directly or visit your nearest IKEA store. Ensure you have your product model number (IK.091.228.51) and proof of purchase available when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question