

## Ikea IK.703.784.14

# IKEA RIBBA Frame 13x18 cm Instruction Manual

Model: IK.703.784.14

## PRODUCT OVERVIEW

The IKEA RIBBA frame is designed to display your favorite pictures. It features a front protection made of plastic, enhancing safety during use. This versatile frame can be used both hanging on a wall or standing on a surface, and can be oriented horizontally or vertically to best fit your space. The frame includes a pH-neutral mount, which prevents discoloration of your images over time. Its classic straight lines make it suitable for various decor styles, and it is ideal for creating a gallery wall.

## SAFETY INFORMATION

- The front protection is made of plastic, reducing the risk of injury compared to glass.
- Always handle the frame with care to avoid damage.
- Ensure proper wall mounting if hanging to prevent the frame from falling.

## SETUP

### Inserting a Picture

1. Carefully turn the frame over to access the back.
2. Release the metal clips or tabs holding the back panel in place.
3. Remove the back panel and the included pH-neutral mount (if desired).
4. Place your picture against the front protection. Ensure it is centered and aligned.
5. Replace the mount (if used) and the back panel.
6. Secure the metal clips or tabs to hold the back panel firmly.

### Mounting Options

The RIBBA frame offers flexible display options:

- **Wall Hanging:** Use appropriate wall fasteners (not included) for your wall type. The frame has pre-installed hangers for both horizontal and vertical orientation. Ensure the frame is level and securely attached.
- **Standing:** The frame includes a stand on the back panel, allowing it to be placed on a flat surface. Adjust the stand to achieve the desired angle for both horizontal and vertical display.

## OPERATING (DISPLAYING)

Once your picture is inserted and the frame is set up, it is ready for display. You can easily change the orientation from horizontal to vertical or vice-versa by simply rotating the frame, whether it is standing or hanging.

## MAINTENANCE

To keep your RIBBA frame looking its best:

- Wipe clean with a dry cloth.
- For stubborn marks on the plastic front protection, use a slightly damp cloth and then dry immediately. Avoid abrasive cleaners or solvents.

## TROUBLESHOOTING

| Problem                                               | Solution                                                                                                                    |
|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Picture does not fit.                                 | Ensure your picture size matches the frame's stated dimensions (13x18 cm). If using the mount, the opening will be smaller. |
| Frame is not hanging straight.                        | Check that the wall fastener is level and the frame's hanger is properly engaged. Adjust as necessary.                      |
| Plastic front protection appears scratched or cloudy. | Clean gently with a soft, dry cloth. Avoid harsh chemicals or abrasive materials. Minor scratches are common with plastic.  |

## SPECIFICATIONS

**Model Name:** RIBBA Frame

**Model Number:** IK.703.784.14

**Brand:** Ikea

**Color:** White

**Frame Material:** Plastic

**Picture Size:** 13 x 18 cm

**Mounting Type:** Wall Mount / Tabletop

**Package Dimensions:** 21 x 16 x 4 cm

**Weight:** 310 grams

## PRODUCT VISUALS



Figure 1: Front view of the IKEA RIBBA frame in white, showing the classic design and plastic front protection.



Figure 2: Close-up detail of the frame's corner, highlighting the clean lines and finish.



Figure 3: Example of the RIBBA frame being used both standing on a surface and hanging on a wall, demonstrating its versatility.



Figure 4: Several RIBBA frames arranged on a shelf, showcasing how they can be integrated into home decor.



Figure 5: A large gallery wall composed of multiple IKEA RIBBA frames, illustrating their suitability for creating extensive photo displays.

## **WARRANTY AND SUPPORT**

For information regarding warranty, returns, or customer support, please refer to the official IKEA website or contact IKEA

customer service directly. Keep your proof of purchase for any warranty claims.  
Official IKEA Website: [www.ikea.com](http://www.ikea.com)

© 2023 IKEA. All rights reserved. This manual is for informational purposes only.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question