

TECHNOVIEW TV-Pen-Camera-W8

TECHNOVIEW Spy 1080P Full HD Pen Camera User Manual

Model: TV-Pen-Camera-W8

1. INTRODUCTION

Thank you for choosing the TECHNOVIEW Spy 1080P Full HD Pen Camera. This discreet and portable device is designed for security and recording purposes, offering high-definition video and audio capture. This manual provides detailed instructions on how to set up, operate, and maintain your pen camera to ensure optimal performance. Please read this manual thoroughly before using the product.

2. PRODUCT OVERVIEW

2.1 Key Features

- **1080P Full HD Recording:** Captures clear, high-definition video up to 1080P resolution.
- **Discreet Design:** Functions as an ordinary pen, making it ideal for covert recording.
- **One-Key Operation:** Simple and intuitive control for video recording and photo capture.
- **Built-in Rechargeable Battery:** Provides up to 85 minutes of continuous recording. Supports recording while charging for extended use.
- **Micro SD Card Support:** Supports up to 32GB Micro SD card (not included) for storage.
- **Portable and Lightweight:** Easy to carry in a pocket or conference book.

2.2 Package Contents

- 1 x TECHNOVIEW Spy Pen Camera
- 1 x Charging Cable

2.3 Product Diagram



Figure 1: Detailed diagram of the pen camera components, including indicator light, reset button, USB port, SD card slot, operation button, and lens.

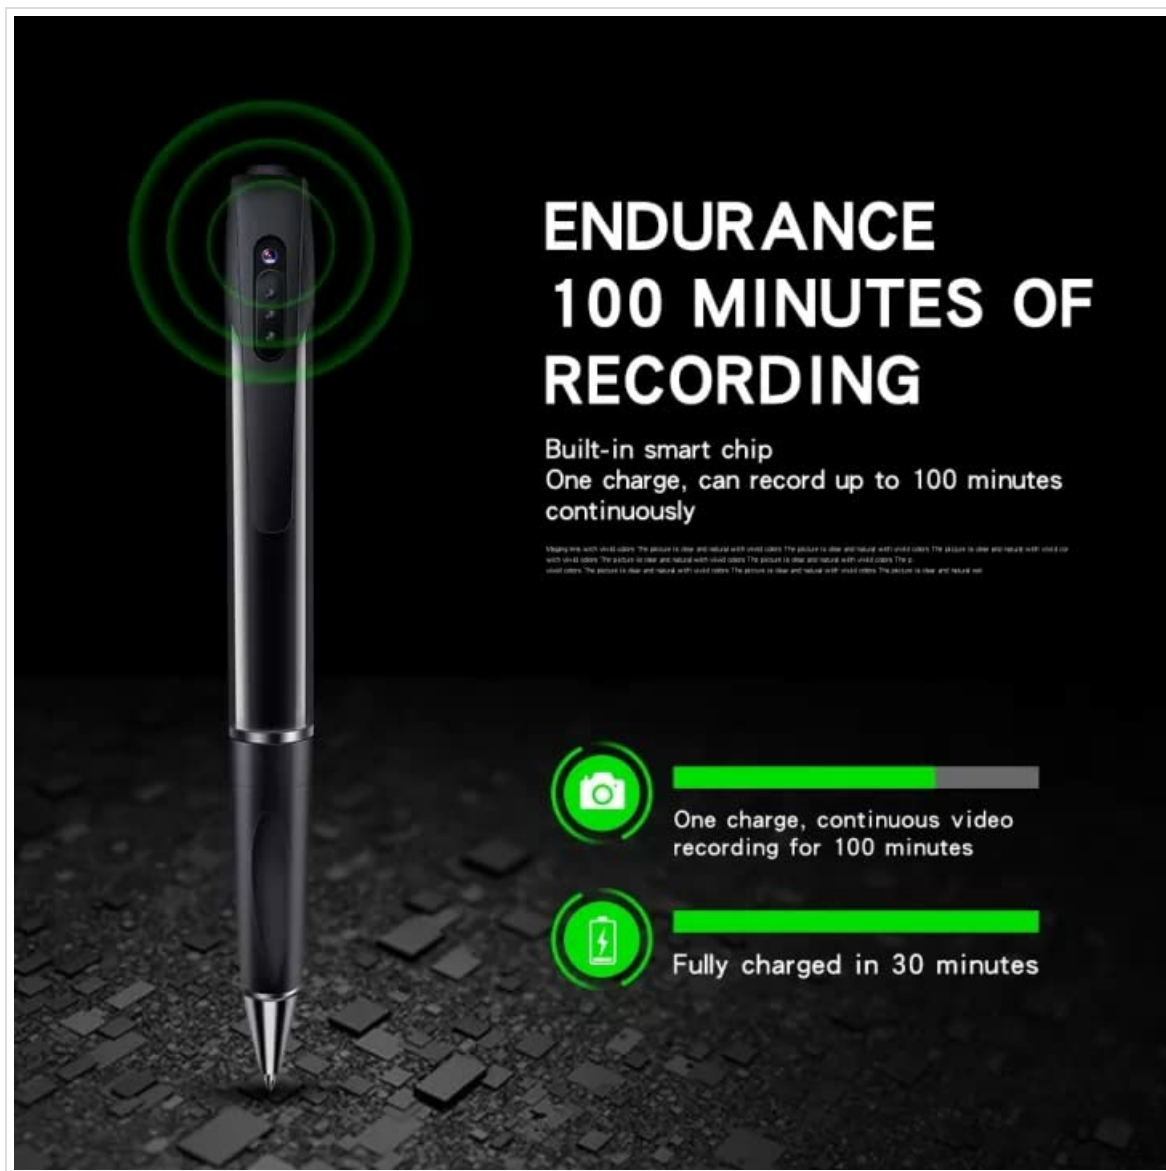


Figure 2: The pen camera features a slide lens cover for discreet operation and protection of the lens.

3. SETUP

3.1 Inserting the Micro SD Card

1. Locate the Micro SD card slot on the pen camera (refer to Figure 1).
2. Gently insert a Micro SD card (up to 32GB, not included) into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove the card, gently push it in again until it springs out.

Note: The device will not function without a Micro SD card inserted.

3.2 Initial Charging

1. Connect the provided charging cable to the USB port on the pen camera (refer to Figure 1).
2. Connect the other end of the charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The indicator light will illuminate during charging. Once fully charged, the light will change or turn off (refer to specific light behavior in operating section).
4. A full charge typically takes approximately 30 minutes and provides up to 85 minutes of continuous recording.

TECHNICAL SUPPORT NUMBER

 **98106 01293**

- > THIS NUMBER IS AVAILABLE ON WHATSAPP ONLY**
- > PLEASE DROP YOUR QUERY/MESSAGE ON WHATSAPP**
- > PLEASE CONTACT ONLY AFTER PURCHASING THE PRODUCT**

Figure 3: Information on the pen camera's battery life, indicating up to 100 minutes of recording on a single charge and 30 minutes for a full charge.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the operation button (refer to Figure 1) for approximately 2-3 seconds until the indicator light illuminates. The device is now in standby mode.
- **Power Off:** In any mode, press and hold the operation button for approximately 5 seconds until the indicator light turns off. The device will save any current recording before powering off.

4.2 Recording Video

1. Ensure the pen camera is powered on and in standby mode.
2. Press the operation button once briefly. The indicator light will flash, indicating that video recording has started.
3. To stop recording, press the operation button once briefly again. The indicator light will return to standby mode, and the video file will be saved to the Micro SD card.

4.3 Taking Photos

The product description indicates photo functionality. Please refer to the specific indicator light behavior for photo mode, which may involve a different button press sequence or a dedicated mode switch not detailed in the provided data. Typically, a quick double-press or a specific short press from standby might activate photo capture.

4.4 Connecting to a Computer

1. Ensure the pen camera is powered off.
2. Connect the pen camera to your computer using the provided USB charging cable.
3. Your computer will recognize the pen camera as a removable disk.
4. Open the removable disk to access the recorded video and photo files.
5. You can copy, move, or delete files as needed.



Figure 4: The pen camera records in 1080P/720P HD, providing high-quality imaging for important content.



Built-In blue lens

The lens of the camera a blue lens, even if you are shooting content on the move, you can achieve the shooting effect you want

Figure 5: The pen camera features a built-in blue lens for enhanced video quality, even when recording on the move, suitable for various environments like meetings.

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry cloth to clean the exterior of the pen camera.
- For the lens, use a specialized lens cleaning cloth to avoid scratches.
- Do not use liquid cleaners or abrasive materials.

5.2 Storage

- Store the pen camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Keep it away from dust and moisture.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

6. TROUBLESHOOTING

If you encounter issues with your TECHNOVIEW Spy Pen Camera, please refer to the following table for common problems and their solutions:

Table 1: Common Troubleshooting Steps

Problem	Possible Cause	Solution
Device does not power on.	Low battery; Device malfunction.	Charge the device fully. If problem persists, contact support.
Cannot record video.	No Micro SD card; SD card full; SD card error; Low battery.	Insert a Micro SD card. Delete old files or use a new card. Format the SD card (backup data first). Charge the device.
Computer does not recognize device.	Incorrect connection; Driver issue; Device not powered off.	Ensure cable is securely connected. Try a different USB port or computer. Ensure device is powered off before connecting.
Poor video quality.	Insufficient lighting; Dirty lens.	Ensure adequate lighting in the recording environment. Clean the lens with a soft cloth.

7. SPECIFICATIONS

Table 2: Product Specifications

Feature	Detail
Model Name	TV-Pen-Camera-W8 (TV - W8)
Video Resolution	1080P Full HD
Battery Type	1 Lithium Polymer battery (included), 240 mAh
Recording Time	Up to 85 minutes continuous recording (approx. 100 minutes endurance)
Charging Time	Approx. 30 minutes for full charge
Storage	Supports up to 32GB Micro SD card (not included)
Connectivity	Wired (USB)
Compatible Devices	Laptop, PC
Product Dimensions	15.7 x 3.59 x 1.9 cm
Item Weight	70 g
Manufacturer	TECHNOVIEW
Country of Origin	China

8. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.
- Keep out of reach of children.
- Use only the provided charging cable.

- Dispose of the device and its battery responsibly according to local regulations.

9. WARRANTY AND SUPPORT

The TECHNOVIEW Spy Pen Camera is manufactured by TECHNOVIEW. For warranty information, technical support, or service inquiries, please refer to the product packaging or visit the official TECHNOVIEW website. Please have your product model number (TV-Pen-Camera-W8) and purchase details ready when contacting support.

© 2023 TECHNOVIEW. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question