

[Manuals.plus](#) /

> [SHARP](#) /

> SHARP 11 kg Fully Automatic Top Load Washing Machine ES-T110N-GY User Manual

SHARP ES-T110N-GY

SHARP 11 kg Fully Automatic Top Load Washing Machine

MODEL: ES-T110N-GY

User Manual

1. Introduction

This manual provides essential information for the safe and efficient operation of your SHARP 11 kg Fully Automatic Top Load Washing Machine, model ES-T110N-GY. Please read it thoroughly before using the appliance and retain it for future reference.

Your washing machine is designed for residential use, offering a capacity of 11 kg, suitable for large families. It features a 5-star energy rating for efficiency and a maximum spin speed of 700 RPM for faster drying.



Image: SHARP 11 kg Fully Automatic Top Load Washing Machine in a laundry room setting.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not reach into the tub while it is spinning.

The machine is equipped with 'Japan 7 Shields' for enhanced durability and safety, including protection against heavy weight, high temperature & humidity, stability issues, lightning, vibration, voltage fluctuations, and drops.

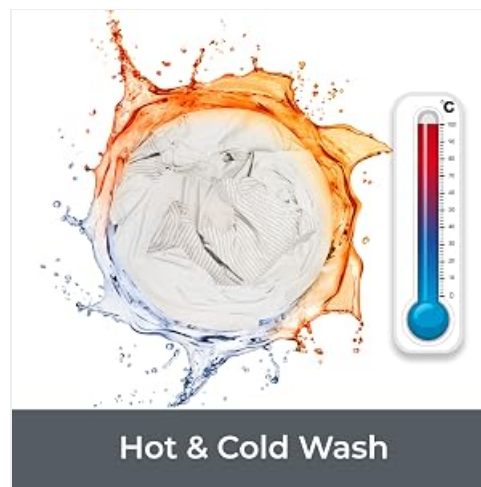


Image: Diagram illustrating the Japan 7 Shields quality checks for the washing machine.

3. Product Features

Your SHARP washing machine incorporates several features designed for effective and convenient laundry care:

- **10 Wash Programs:** Offers a variety of cycles including Smart Select, Tub Clean, Cotton 30°C, Quick Wash, Child Care, Synthetic/Saree, Air Dry, Bed Sheet, Gentle, and Woollen.
- **Hot & Cold Water Dual Inlet:** Allows for washing with both hot and cold water, optimizing cleaning for different fabric types and soil levels.
- **Soft Close Lid:** The toughened glass lid closes gently and quietly, preventing accidental slams.
- **Add Laundry Feature:** Pause the wash cycle to add forgotten items at almost any time.
- **Stainless Steel Pulsator & Drum:** Durable stainless steel components ensure longevity and effective washing action.
- **Waterfall Wash:** Provides an even water spray from the side during the wash cycle for thorough and hygienic cleaning.
- **One-Touch Start:** Simplifies operation by initiating a wash cycle with a single button press.
- **5 Star Energy Rating:** Ensures high energy efficiency, reducing electricity consumption.
- **Protective Rat Mesh:** Guards against rodent damage to internal components.
- **Child Lock:** Prevents accidental changes to settings during operation.

DURABLE MOTOR

POWERFUL, QUIET AND
BUILT TO LAST.



Image: Hot & Cold Water Inlet and Soft Closing Lid.

JAPAN 7 SHIELDS

Quality Checks You Can Trust



Image: Stainless Steel Pulsator and Side Waterfall.

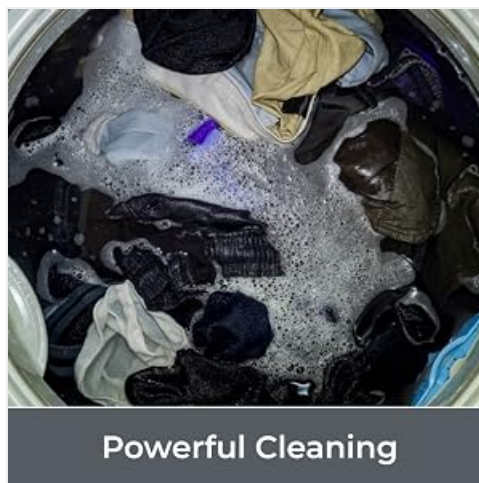


Image: Add Laundry Feature.



Image: Hot & Cold Wash.


4. Installation

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

1. **Unpacking:** Carefully remove all packaging materials. Check for any damage during transit.
2. **Location:** Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access.
3. **Leveling:** Use the adjustable leveling legs to ensure the machine is perfectly stable and level. An unlevel machine can cause excessive vibration and noise.
4. **Water Connection:** Connect the fill hoses to the hot and cold water inlets at the back of the machine and to the corresponding water supply taps. Ensure connections are tight to prevent leaks.
5. **Drain Hose:** Securely attach the drain hose to the machine and route it to a suitable drain point, ensuring it is not kinked or blocked.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.



**ONE TOUCH
START**

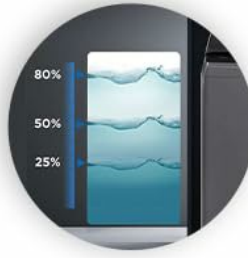

**8 WATER
LEVEL**



**ANTI-RUST
BODY**



Image: Rear view with water inlets and drain hose.

5. Operation

Operating your SHARP washing machine is straightforward with its intuitive control panel.

5.1 Control Panel Overview



Image: Control panel with One Touch Start and water level indicators.

5.2 Starting a Wash Cycle

1. **Load Laundry:** Open the lid and place your clothes evenly into the washing machine drum. Do not overload.
2. **Add Detergent:** Dispense the appropriate amount of detergent into the detergent dispenser.
3. **Select Wash Program:** Use the 'Program' button to cycle through the 10 available wash programs (Smart Select, Tub Clean, Cotton 30°C, Quick Wash, Child Care, Synthetic/Saree, Air Dry, Bed Sheet, Gentle, Woollen). The selected program will be indicated on the digital display.
4. **Adjust Settings (Optional):** Depending on the program, you may adjust water level, temperature (if using hot water inlet), or delay start using the respective buttons.
5. **Start:** Press the 'Start/Pause' button to begin the wash cycle. For quick and easy operation, the 'One Touch Start' feature can automatically select optimal settings.

FEATURES

**ADD
LAUNDRY
FUNCTION**



**ONE
TOUCH
START**



**WATERFALL
FEATURE**



**POWERFUL
CLEANING**



**10 WASH
PROGRAMS**



**STAINLESS
STEEL
PULSATOR**



Image: 10 Intelligent Wash Programs.

5.3 Using Special Functions

- **Add Laundry:** If you forget an item, press the 'Add Laundry' button during the initial stages of the wash cycle. The machine will pause, allowing you to open the lid and add clothes. Close the lid and press 'Start/Pause' to resume.
- **Child Lock:** To activate, press and hold the 'Child Lock' button (if available, or a combination of buttons as per specific model instructions) for a few seconds. This prevents children from tampering with the settings.
- **Delay Start:** Use the 'Delay' button to set a delayed start time for your wash cycle, allowing you to schedule laundry at your convenience.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

- **Tub Clean:** Use the dedicated 'Tub Clean' program regularly (e.g., once a month) to clean the inner drum and prevent mold and odor buildup.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

- **Detergent Dispenser:** Clean the detergent dispenser periodically to remove any residue.
- **Lint Filter:** Check and clean the lint filter (if applicable) after every few washes to maintain drainage efficiency.
- **Water Inlet Filters:** Periodically check and clean the filters in the water inlet hoses to prevent blockages.

7. Troubleshooting

Before contacting customer support, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed properly, 'Start/Pause' not pressed.	Check power connection, ensure lid is fully closed, press 'Start/Pause'.
No water filling	Water taps closed, water supply cut off, inlet hose kinked, inlet filter blocked.	Open water taps, check water supply, straighten hose, clean inlet filter.
Machine vibrates excessively	Machine not level, load unbalanced, transit bolts not removed.	Adjust leveling legs, redistribute laundry, ensure transit bolts are removed (if applicable).
Water not draining	Drain hose kinked or blocked, drain pump filter blocked.	Check and clear drain hose, clean drain pump filter.
Error code displayed	Specific malfunction.	Refer to the specific error code in the full user manual or contact customer support.

8. Specifications

Feature	Detail
Model Name	ES-T110N-GY
Capacity	11 kg
Product Dimensions (D x W x H)	62D x 60.5W x 100H Centimeters
Item Weight	41.5 Kilograms
Max Rotational Speed	700 RPM
Energy Rating	5 Star
Wash Programs	10 (Smart Select, Tub Clean, Cotton 30°C, Quick Wash, Child Care, Synthetic/Saree, Air Dry, Bed Sheet, Gentle, Woollen)
Drum Material	Stainless Steel
Pulsator Type	Stainless Steel Insert Pulsator
Voltage	230 Volts (AC)

Feature	Detail
Display Type	LED
Included Components	Washing machine unit, User Manual, Warranty Card, Fill Hose, Drain Hose



Image: Washing machine dimensions and energy label.

9. Warranty and Support

Your SHARP washing machine comes with a comprehensive warranty to ensure peace of mind.

- **Comprehensive Warranty:** 2 Years
- **Motor Warranty:** Total 10 Years

For service, support, or warranty claims, please contact SHARP customer service:

- **Toll-Free:** 1800-419-4322

- **E-Mail:** support@sharp-oa.com
- **Manufacturer:** Sharp Business Systems (India) Private Limited, Plot No. 51, First Floor, Okhla Industrial Estate, Phase-III, New Delhi- 110020