

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› **ALLIMITY Replacement Remote Control User Manual for ODL, SABA, QILIVE, OK. TVs (Model QYSY-RC4390-O-QYSY)**

## ALLIMITY QYSY-RC4390-O-QYSY

# ALLIMITY Replacement Remote Control User Manual

MODEL: QYSY-RC4390-O-QYSY

## 1. Introduction

This manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control, model QYSY-RC4390-O-QYSY. This remote is designed to function as a direct replacement for original remote controls of various ODL, SABA, QILIVE, and OK. television models. It requires no programming and operates immediately upon battery installation.

**Compatible TV Models include:**

- ODL: 65650U-TIB, 40650UV-TIB, 32653FV-TIB, 32694F-TIB, 32694F-TIW, 43650UV-TIB
- SABA: S3217V, SB55UHD18, SB32HDS19, S55U4K17, SB40FDS19W, V55289UHD, V32289SMW, A55UHD4805, 49FHD19T2STV
- QILIVE: Q32-822, Q55-182, 32278, Q43-372, Q24-822, Q32-372, Q.55-181 (V3), 24470, Q43-371-2, Q.40-822, 30100824

## 2. Setup

### 2.1 Battery Installation

To begin using your ALLIMITY replacement remote control, follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

**Note:** No programming is required. The remote control is ready for use immediately after battery installation.







Image 1: Front view of the ALLIMITY Replacement Remote Control. This image displays the overall design and button layout of the remote.

### 3. Operating Instructions

The ALLIMITY replacement remote control features a standard layout for intuitive operation. Below are the primary functions of the buttons:

- **Power Button (>):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **Volume Up/Down (V+ / V-):** Adjusts the audio volume.
- **Channel Up/Down (P+ / P-):** Changes TV channels sequentially.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Navigation Pad (▲ ▼ ◀ ◀):** Used to navigate menus and select options.
- **OK Button:** Confirms selections within menus.
- **Home Button ():** Accesses the TV's main menu or smart TV interface.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Info Button (i):** Displays information about the current program or input.
- **LANG. Button:** Changes audio language or subtitle options.
- **TXT Button:** Accesses Teletext services (if supported by the TV).



Image 2: Angled view of the ALLIMITY Replacement Remote Control, highlighting the various function buttons including dedicated Netflix and YouTube keys.

## 4. Maintenance

### 4.1 Cleaning

To maintain the remote control's functionality and appearance:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

## 5. Troubleshooting

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace the batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Verify that the remote is pointed directly at the TV's IR sensor.

- **Specific Buttons Not Working:**

- Clean the remote control, especially around the problematic buttons, to remove any dirt or debris that might be causing them to stick or malfunction.
- If only certain buttons are unresponsive after cleaning and battery replacement, the remote may be damaged.

- **Short Operating Range:**

- Replace the batteries, as low battery power can reduce the remote's effective range.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

## 6. Specifications

<b>Brand</b>	ALLIMITY
<b>Model Number</b>	QYSY-RC4390-O-QYSY
<b>Connectivity Technology</b>	Infrared (IR)
<b>Special Feature</b>	No programming required
<b>Color</b>	Black
<b>Number of Buttons</b>	30
<b>Maximum Range</b>	10 Meters
<b>Power Source</b>	2 x AAA Batteries (not included)

## 7. Warranty and Support

Specific warranty information for this product is not provided in the available documentation. For any support inquiries, technical assistance, or warranty claims, please contact the seller or manufacturer directly through your purchase platform. Ensure you have your purchase details and product model number (QYSY-RC4390-O-QYSY) available when seeking support.