

[Manuals.plus](#) /

> [ALLIMITY](#) /

> ALLIMITY Replacement Remote Control for Medion UHD TV MD31058 and Compatible Models

ALLIMITY QYSY-RC1822-ME1-QYSY

ALLIMITY Replacement Remote Control Instruction Manual

Model: QYSY-RC1822-ME1-QYSY

INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control, designed for various Medion UHD TV models. This remote control is ready to use without any programming, offering full functionality for compatible televisions.

1. SETUP

1.1 Battery Installation

To begin using your remote control, install two AAA alkaline batteries (not included) into the battery compartment. Ensure correct polarity (+/-) as indicated inside the compartment.



Figure 1: Opening the battery cover on the back of the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide or pry open the cover. A small tool like a toothpick (as shown in Figure 1) or a flat-head screwdriver may be used if needed.
3. Insert two new AAA alkaline batteries, matching the positive (+) and negative (-) terminals with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

1.2 Compatibility

This remote control is compatible with the following Medion UHD TV models. No programming is required; simply insert batteries and it is ready for use.

- RC1822, RC-1822
- MD-31058, MD-31505, MD-31510, MD-31511, MD-31512, MD-31513, MD-31514
- MD-31802, MD-31803, MD-32065
- X14000, X14305, X14908, X15504, X16503, X15049, X15502, X15515, X16500

2. OPERATING INSTRUCTIONS

The ALLIMITY replacement remote control provides all essential functions for your compatible Medion UHD TV. Point the remote directly at your television's infrared receiver for optimal performance.





Figure 2: Front view of the remote control with button layout.

2.1 Basic Functions

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the sound volume.
- **Channel Up/Down (P^/P^):** Changes the TV channel.
- **Mute Button ():** Mutes or unmutes the TV sound.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back Button:** Returns to the previous menu or screen.
- **Exit Button:** Exits the current menu or application.
- **Home Button ():** Accesses the TV's main home screen or smart TV interface.

2.2 Special Function Buttons

- **Netflix Button:** Direct access to the Netflix application.
- **Medion Button:** May provide direct access to Medion-specific features or smart TV hub.
- **Prime Video Button:** Direct access to the Amazon Prime Video application.
- **EPG Button:** Displays the Electronic Program Guide.
- **INFO Button:** Displays information about the current program or input.
- **TXT Button:** Accesses Teletext (if supported by the TV and broadcast).
- **LANG Button:** Changes audio language or subtitle options.

3. MAINTENANCE

3.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or buttons.

3.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Some buttons not working:**
 - This remote is pre-programmed for specific Medion TV models. Ensure your TV model is listed in the compatibility section.
 - Clean the remote control, especially around the non-functional buttons, to remove any debris.
 - If only specific smart TV buttons (e.g., Netflix) are not working, ensure your TV is connected to the internet and the applications are installed and updated.
- **Short operating range:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR receiver.

5. SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Name	QYSY-RC1822-ME1-QYSY
Connectivity Technology	Infrared
Special Feature	No programming required
Color	Black
Number of Buttons	3
Maximum Range	10 Meters
Battery Type	Alkaline (AAA recommended)
Compatible TV Models	Medion UHD TV models including MD31058, MD31505, MD31510, MD31511, MD31512, MD31513, MD31514, MD31802, MD31803, MD32065, X15515, X14000, X14305, X14908, X15504, X16503, X15049, X15502, X16500.

6. WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to the seller's return policy or contact the seller directly for warranty terms and conditions. Generally, electronic products come with a standard manufacturer's warranty against defects in materials and workmanship.

7. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your ALLIMITY Replacement Remote Control, please contact the seller directly through the platform where the purchase was made. Provide your order number and product model for faster service.

Seller: [ZHICHENGMAO](#)