

[Manuals.plus](#) /

› [GOWENIC](#) /

› GOWENIC 4G Mobile WiFi Router User Manual

## GOWENIC GOWENICgwe1tyzbcq

# GOWENIC 4G Mobile WiFi Router User Manual

Model: **GOWENICgwe1tyzbcq** | Brand: **GOWENIC**

## 1. INTRODUCTION

The GOWENIC 4G Mobile WiFi Router is a portable internet hotspot designed to provide reliable and stable wireless connectivity for multiple devices. Its compact and lightweight design makes it ideal for travel, home, and office use, eliminating the need for network cables.

Key features include:

- Supports 8 to 10 users simultaneously, making it suitable for various environments.
- Guarantees network speed and stability without reliance on physical network cables.
- Small and lightweight, enabling easy portability and connection of smart devices wirelessly.
- Constructed from premium materials for long-lasting durability.
- Utilizes 4G Internet access via a SIM card to extend WiFi coverage and eliminate dead zones.



*Figure 1: Front view of the GOWENIC 4G Mobile WiFi Router, showing the display and MiFi button.*

## **2. PACKAGE CONTENTS**

Please check the package contents upon unboxing to ensure all items are present and undamaged:

- GOWENIC 4G Mobile WiFi Router
- Rechargeable Lithium-ion Battery (2100mAh)
- USB Charging Cable
- User Manual (this document)



Figure 2: The router with its back cover removed, showing the battery and SIM card slot.

### 3. SETUP GUIDE

Follow these steps to set up your GOWENIC 4G Mobile WiFi Router:

#### 1. Insert SIM Card:

Carefully remove the back cover of the router. Locate the SIM card slot. Insert your activated 4G SIM card into the slot with the gold contacts facing down and the notched corner aligned correctly. Ensure it clicks into place.



Figure 3: Close-up view of the SIM card slot and the product label displaying default Wi-Fi credentials.

## 2. Insert Battery:

Place the provided 2100mAh lithium-ion battery into the battery compartment, ensuring the contacts align with those in the router. Replace the back cover firmly.

## 3. Charge the Device:

Connect the USB charging cable to the router's micro USB port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the display will show charging status. Fully charge the device before first use.



Figure 4: The router connected to its USB charging cable.

#### 4. Power On:

Press and hold the power button (usually located on the side or top) for a few seconds until the display lights up and the device starts. The 4G signal indicator should appear once a network connection is established.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Connecting Devices to Wi-Fi

Once the router is powered on and has established a 4G connection, you can connect your devices:

1. On your smartphone, tablet, laptop, or other Wi-Fi enabled device, go to the Wi-Fi settings.
2. Search for available Wi-Fi networks.
3. Locate the network name (SSID) for your GOWENIC router. This is typically found on a label inside the battery compartment (e.g., "MiFi-529" as shown in Figure 3).
4. Select the network and enter the Wi-Fi password (WIFI KEY) also found on the label (e.g., "1234567890").
5. Your device should now be connected to the internet. The router supports up to 10 simultaneous device connections.

### 4.2 Accessing the Web Management Interface

You can manage your router settings through a web interface:

1. Ensure your device is connected to the router's Wi-Fi network.
2. Open a web browser (e.g., Chrome, Firefox, Edge).
3. In the address bar, type the default IP address: **192.168.100.1** (as shown in Figure 3) and press Enter.
4. You will be prompted for a username and password. The default username is typically **user admin** and the password is **admin** (refer to the label in Figure 3 for exact details).
5. From the web interface, you can change Wi-Fi name and password, view connected devices, check data usage, and configure other advanced settings.

## 5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your GOWENIC 4G Mobile WiFi Router, please follow these maintenance guidelines:

- **Keep Dry:** Avoid exposing the device to water, moisture, or high humidity.
- **Temperature:** Operate and store the device within recommended temperature ranges. Avoid extreme heat or cold.
- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Battery Care:**
  - Avoid overcharging the battery.
  - If the device will not be used for an extended period, charge the battery to about 50% and store it in a cool, dry place.
  - Do not expose the battery to direct sunlight or high temperatures.
- **Handle with Care:** Avoid dropping or subjecting the device to strong impacts.

## 6. TROUBLESHOOTING

If you encounter issues with your GOWENIC 4G Mobile WiFi Router, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on.	Low or no battery charge; faulty battery; power button issue.	Ensure the device is fully charged. Check battery insertion. Try holding the power button for a longer duration (5-10 seconds). If issues persist, contact support.
No internet connection.	SIM card not inserted correctly or not activated; no 4G signal; incorrect APN settings.	Verify SIM card insertion and activation with your mobile carrier. Move to an area with better 4G signal. Check APN settings via the web management interface (refer to your SIM card provider for correct settings).
Cannot connect to Wi-Fi.	Incorrect Wi-Fi password; too many devices connected; Wi-Fi disabled.	Double-check the Wi-Fi password. Ensure the number of connected devices does not exceed 10. Access the web management interface to confirm Wi-Fi is enabled.
Slow internet speed.	Weak 4G signal; network congestion; too many connected devices.	Relocate the router to an area with stronger 4G signal. Disconnect unnecessary devices.



#### 1 Warning

If you find the product damaged, deformed or abnormal performance, please stop using it immediately and contact us.

#### 2 Warnung

Wenn Sie Schäden, Verformungen oder eine abnormale Leistung des Produkts feststellen, stellen Sie die Verwendung sofort ein und kontaktieren Sie uns.

#### 3 Avertissement

Si vous constatez des dommages, une déformation ou une anomalie sur le produit, veuillez cesser de l'utiliser immédiatement et nous contacter.

#### 4 Advertencia

Si encuentra el producto dañado, deformado o con un rendimiento anormal, por favor deje de usarlo inmediatamente y póngase en contacto con nosotros.

#### 5 Ostrzeżenie

Jeśli zauważysz, że produkt jest uszkodzony, zdeformowany lub działa nieprawidłowo, natychmiast przestań go używać i skontaktuj się z nami.

#### 6 Waarschuwing

Als u merkt dat het product beschadigd of vervormd is of niet naar behoren werkt, stop dan met het gebruik ervan en neem contact met ons op.

#### 7 Varning

Om du märker att produkten är skadad, deformerad eller inte fungerar som den ska, ska du sluta använda den och kontakta oss.

#### 8 Attenzione

Se riscontri danni, deformazioni o anomalie nelle prestazioni del prodotto, interrompi immediatamente l'utilizzo e contattaci.

#### 9 Uyarı

Üründe hasar, şekil bozukluğu veya anormal performans bulursanız, lütfen hemen kullanmayı bırakın ve bize ulaşın.

Figure 5: Important warning regarding product damage or abnormal performance. If you find the product damaged, deformed, or performing abnormally, please stop using it immediately and contact us.

## 7. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	GOWENIC
Model Name	GOWENICgwe1tyzbcq
Package Dimensions	11.1 x 7.3 x 2.5 cm
Item Weight	110 g
Battery Capacity	2100mAh
Frequency Band Class	Dual-Band

Feature	Detail
Wireless Communication Standard	802.11bgn
Frequency	2.4 GHz
Compatible Devices	Laptop, Personal Computer, Tablet, Smartphone
Connectivity Technology	Wi-Fi
Antenna Type	Internal
Operating System Compatibility	Windows Compatible
Country of Origin	China

## 8. WARRANTY INFORMATION

---

GOWENIC products are typically covered by a limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or natural disasters. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact GOWENIC customer support.

## 9. CUSTOMER SUPPORT

---

For technical assistance, troubleshooting, or warranty inquiries, please contact GOWENIC customer support. While specific contact details are not provided in this manual, you can typically find support information on the official GOWENIC website or through the retailer where you purchased the product.

When contacting support, please be prepared to provide the following information:

- Product Model: **GOWENICgwe1tyzbcq**
- ASIN: **B0BW96RYLX**
- Description of the issue
- Date and place of purchase

