

ALLIMITY RC45160

ALLIMITY RC45160 Replacement Voice Remote Control User Manual

For Telefunken and Finlux Televisions

1. INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY RC45160 Replacement Voice Remote Control. This remote is designed to function as a direct replacement for your original Telefunken or Finlux TV remote, offering full functionality including voice control without the need for complex programming.

2. PRODUCT OVERVIEW

The ALLIMITY RC45160 is an infrared (IR) remote control featuring voice command capabilities. It is designed for ease of use and immediate functionality with compatible TV models. The remote includes standard navigation, channel, volume, and dedicated app buttons.



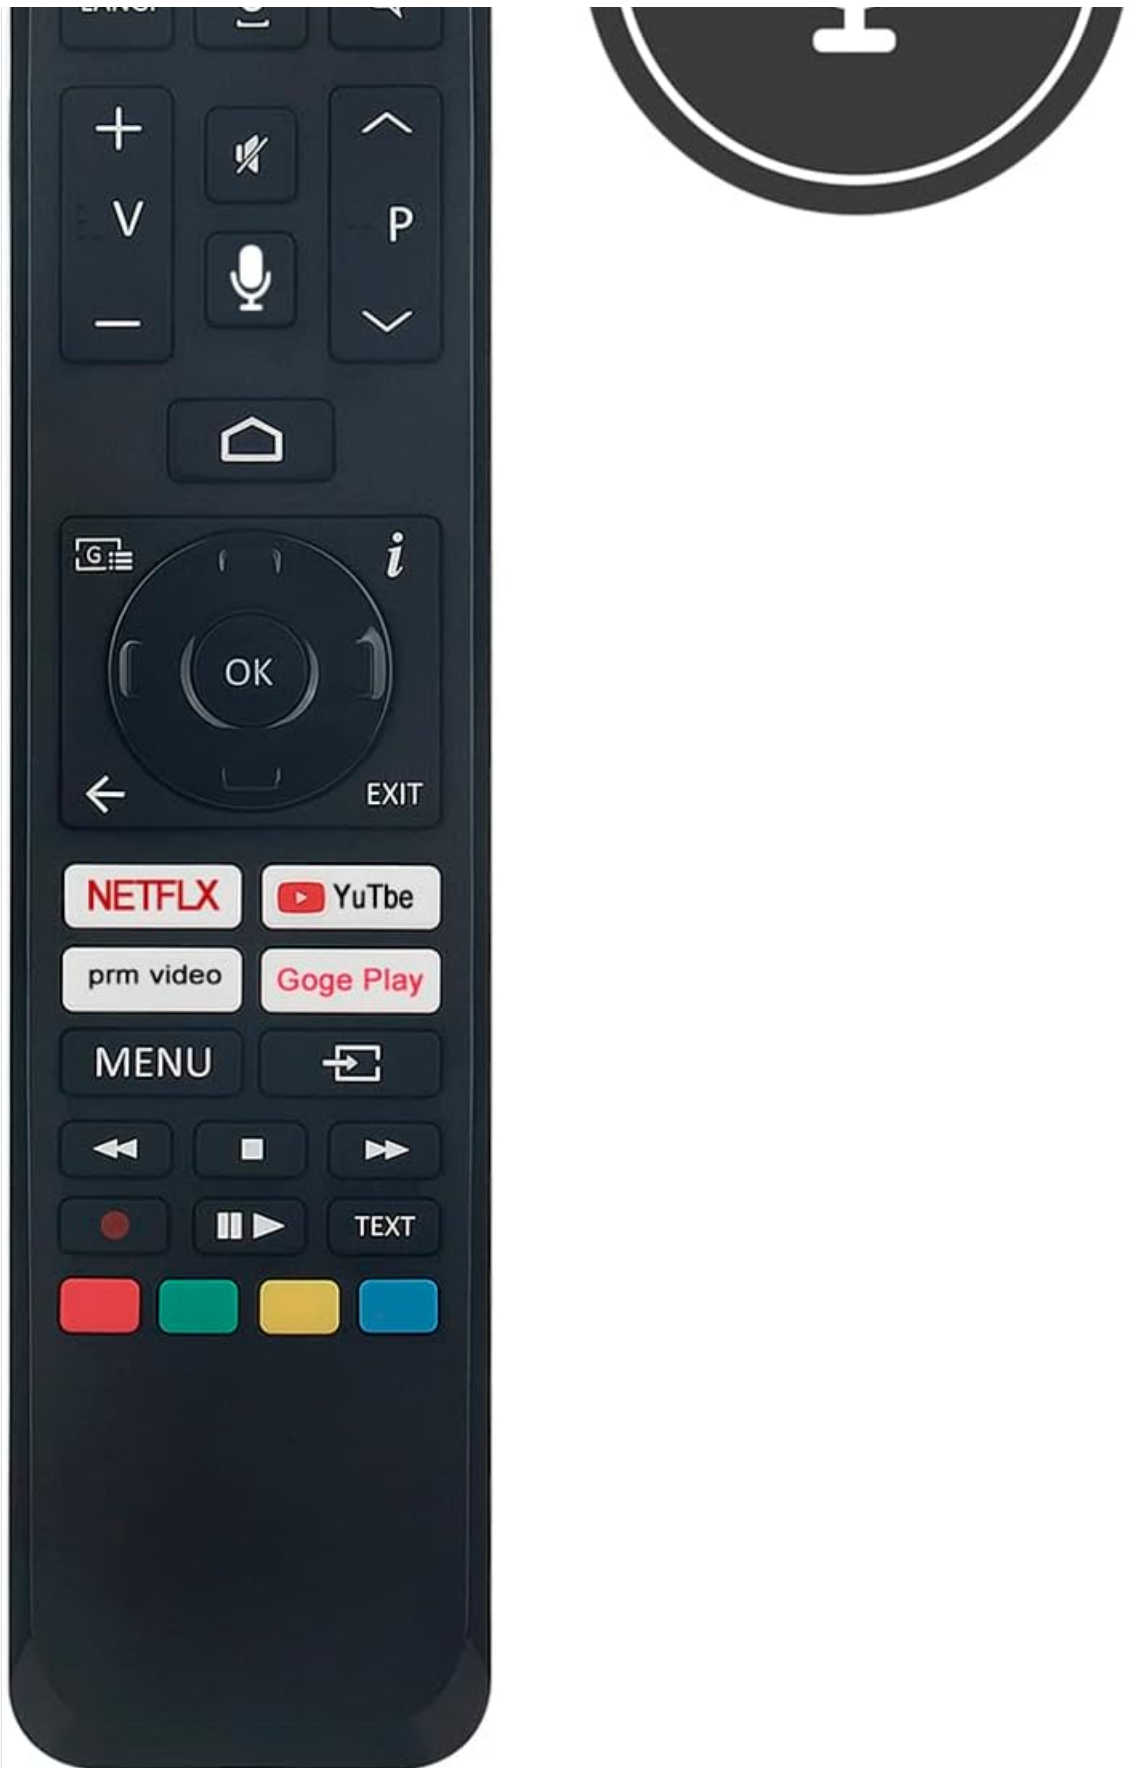


Figure 1: Front view of the ALLIMITY RC45160 remote control.



Figure 2: Angled view of the remote control.



Figure 3: Side view of the remote control.

3. SETUP

The ALLIMITY RC45160 remote control requires no programming. Simply insert batteries, and it will be ready for use with your compatible Telefunken or Finlux TV.

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

The remote control should now be operational.

4. OPERATING INSTRUCTIONS

This remote control offers intuitive operation for your television. Ensure there is a clear line of sight between the remote's infrared emitter and your TV's IR receiver.

4.1. Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Pad (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (P+/P-):** Changes TV channels.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **Home Button:** Accesses the TV's main menu or smart TV interface.
- **Back/Exit Buttons:** Returns to the previous screen or exits a menu.

4.2. Voice Control

To use the voice control feature, press the dedicated microphone button (often indicated by a microphone icon). Speak clearly into the remote control. The TV will process your command, which may include changing channels, searching for content, or adjusting settings.

4.3. Dedicated App Buttons

The remote includes dedicated buttons for popular streaming services such as Netflix, YouTube, and Prime Video. Pressing these buttons will directly launch the corresponding application on your smart TV.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

5.1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals or immerse the remote in water.

5.2. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the TV's IR sensor.
 - Point the remote directly at the TV.
- **Voice control not working:**
 - Ensure the microphone button is pressed and held while speaking.
 - Speak clearly and at a normal volume.
 - Check your TV's settings to ensure voice control is enabled and configured correctly.
- **Specific buttons not working:**
 - Clean the remote control, especially around the problematic buttons, to remove any dirt or debris.
 - If only certain smart app buttons are not working, ensure your TV is connected to the internet and the apps are installed and updated.

7. SPECIFICATIONS

| | |
|--------------------------------|--|
| Brand | ALLIMITY |
| Model | RC45160 (QYSY-RC-45160-QYSY) |
| Special Features | Universal, Voice Control |
| Connectivity Technology | Infrared (IR) |
| Number of Buttons | 10 |
| Maximum Range | 10 Meters |
| Compatible Devices | Telefunken and Finlux TVs, including models: 55UA9000, D55V900M4CWH, D32H554X2CWI, 55UA9300, 65UA9000, XU50AJ600, D43V950M2CWH, D43U660O2CWI, D65V900M4CWH, XU55AJ600, D50V950M2CWH, D50U660O2CWI, D43V900M4CWH, XU58AJ600, D65V950M2CWH, D55U660O2CWI, D50V900M4CWH, XH32AJ600, D70V950M2CWH, XU50AN750S, 65-FAE-9060, 55-FAE-7360, 43-FAE-9560, 32-FFF-5670, 55-FAE-9560, 24-FHMF-5770, 50-FAE-9560, 40-FAG-9060, 43-FAE-7360. |

8. WARRANTY INFORMATION

Warranty information for this product is not provided within this manual. Please refer to your purchase documentation or contact the seller for details regarding warranty coverage.

9. SUPPORT

For further assistance or inquiries, please contact the seller or refer to the product listing where you made your purchase. Ensure you have your product model number (RC45160) and purchase details available when seeking support.