

Fannas 1019

Fannas Professional Hair Trimmer User Manual

Model: 1019

INTRODUCTION

Thank you for choosing the Fannas Professional Hair Trimmer. This manual provides essential information for the safe and effective operation, maintenance, and care of your new hair clippers. Designed for precision and ease of use, these cordless trimmers are suitable for various hair cutting, beard trimming, and body grooming needs. Please read this manual thoroughly before first use and keep it for future reference.



Image: Fannas Professional Hair Trimmer in gold, displayed with its charging cable, oil, cleaning brush, and three guide combs.

SAFETY INFORMATION

- Keep blades away from water.
- Do not use on infants or children.
- Be cautious around blades to prevent injury.
- Unplug and allow to cool before cleaning.
- Do not recharge overnight.

- Avoid using while charging.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

COMPONENTS AND ACCESSORIES

Your Fannas Hair Trimmer package includes the following:

- 1 x Fannas Hair Trimmer (Model 1019)
- 1 x USB Charging Cable
- 3 x Guide Combs (0.5mm, 1mm, 1.5mm)
- 1 x Lubricating Oil Bottle
- 1 x Cleaning Brush
- 1 x Blade Cover



Zero Gapped

Hair Carving

Beard Trimming

No harm to skin

Not pulling hair

3 Limit Combs To Meet Different Needs

0.5mm 1.0mm 1.5mm

Image: Detailed view of the T-shaped blade, highlighting its zero-gapped design, alongside the three included guide combs for various

cutting lengths.

SETUP AND CHARGING

Initial Charge:

Before first use, fully charge your Fannas Hair Trimmer. Connect the USB charging cable to the trimmer's USB-C port and plug the other end into any compatible USB charger (not included). The LCD display will show the battery percentage, indicating charging progress. A full charge takes approximately 3 hours and provides over 150 minutes of continuous run time.

Attaching Guide Combs:

To achieve desired hair lengths, select one of the three guide combs (0.5mm, 1mm, 1.5mm). Align the comb with the trimmer blade and gently push until it clicks securely into place. Ensure the comb is firmly attached before use.



Image: The Fannas Hair Trimmer held in hand, showcasing its USB-C charging capability and the clear LCD display indicating battery life.

OPERATING INSTRUCTIONS

General Use:

Press the power button to turn the trimmer ON/OFF. The LCD display will show the current battery level. The T-shaped blade is designed for precision and will not cut the skin even with close contact.

Hair Cutting:

For general hair cutting, attach the appropriate guide comb. Move the trimmer against the direction of hair growth for an even cut. For detailed work, such as lining, sculpting outlines, or sideburns, remove the guide comb and use the zero-gapped blade directly.

Beard Trimming:

Use the trimmer with or without a guide comb to shape and trim your beard. The precision blade allows for sharp lines and detailed styling around the neck and cheek areas.

Body Hair Trimming:

The Fannas Hair Trimmer can also be used for safely trimming chest hair, leg hair, and other body hair. Ensure the skin is clean and dry for best results. The rounded corners of the T-blade help prevent nicks and irritation.

 


Image: A collage demonstrating the versatility of the Fannas Hair Trimmer for various grooming tasks, including haircuts, intricate hair carving, beard shaping, and body hair trimming.

MAINTENANCE AND CARE

Cleaning the Blades:

After each use, turn off the trimmer and use the provided cleaning brush to remove any loose hairs from the blade. The blade is waterproof and can be rinsed under running water. **IMPORTANT: Do not submerge the entire trimmer in water. Only the blade is designed to be rinsed.**

Lubricating the Blades:

Regularly apply a few drops of the included lubricating oil to the blades to ensure smooth operation and prolong their lifespan. Turn the trimmer on for a few seconds after applying oil to distribute it evenly.

Storage:

Store the trimmer in a cool, dry place. Use the blade cover to protect the blades when not in use or during travel.

POWERFUL MOTOR BUT LOW NOISE

<50 db low noise



ONLY WASH THE BLADE

Image: The Fannas Hair Trimmer's blade being rinsed under water, illustrating its easy cleaning process. The image also highlights the product's low noise operation.

TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the trimmer is fully charged. Check the USB cable and power adapter for proper connection.
- **Reduced cutting performance:** Clean the blades thoroughly to remove any trapped hair. Apply lubricating oil to the blades. If performance does not improve, the blades may need replacement (contact support).
- **Excessive noise or vibration:** Ensure the blade is properly seated. Clean and lubricate the blades. If the issue persists, contact customer support.
- **Battery not holding charge:** Ensure you are using a compatible USB charger. Avoid overcharging (do not leave plugged in overnight). If battery life significantly degrades, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	1019
Brand	Fannas
Power Source	Cordless, USB Rechargeable
Battery Capacity	1500mAh
Run Time	Over 150 minutes
Charge Time	Approx. 3 hours
Motor Speed	5800RPM
Noise Level	Within 50 decibels
Blade Type	T-shaped, Zero-gapped Alloy Blade
Product Dimensions	10 x 2 x 2.7 inches
Item Weight	14.39 ounces (408 Grams)
Color	Gold



Image: An internal diagram illustrating the powerful 7000RPM rotary motor, emphasizing its efficiency and features like low noise and waterproof design (for blades).

WARRANTY AND SUPPORT

Fannas is committed to providing high-quality personal beauty care products. For any questions, concerns, or warranty claims regarding your Fannas Hair Trimmer, please contact our customer support. Refer to the contact information provided on the product packaging or visit the official Fannas store on Amazon for assistance.

Verified by Transparency: Each item has a unique code that we verify before shipping, ensuring product authenticity.

Fannas[®]

Image: The Fannas brand logo, representing the manufacturer of the hair clippers.

